

[Manuals.plus](#) /

› [Kid Kraft](#) /

› KidKraft Wooden Fashion Pretend Dress-Up Station Children's Furniture with Storage and Mirror - White, Gift for Ages 3+ White Vanity

Kid Kraft 12511

KidKraft Wooden Fashion Pretend Dress-Up Station Instruction Manual

Model: 12511 | Brand: Kid Kraft

INTRODUCTION

The KidKraft Wooden Fashion Pretend Dress-Up Station is designed to help organize and enhance imaginative play for children. This furniture piece provides dedicated storage for costumes, accessories, and shoes, making dress-up time more accessible and enjoyable. Its sturdy construction and thoughtful design aim to provide a safe and functional space for children aged 3 and up to explore their creativity.

SAFETY INFORMATION

Caution: Ensure good ventilation while using this product. For use by children over 3 years old only.

SETUP AND ASSEMBLY

The KidKraft Wooden Fashion Pretend Dress-Up Station requires assembly. Detailed, step-by-step instructions are included with the product to guide you through the process. It is recommended to follow these instructions carefully to ensure proper and secure construction.

Key components include:

- Shatterproof acrylic full-length mirror.
- Wooden rod for hanging clothes.
- Multiple shelves for storage.
- Three pegs on the side for hanging accessories.

For a comprehensive guide, please refer to the official Installation Manual (PDF) provided with your product or available online.



Image: The assembled KidKraft Dress-Up Station, showcasing its hanging rod, multiple shelves, and side pegs for organizing children's costumes and accessories.

OPERATING INSTRUCTIONS

This dress-up station is designed for intuitive use by children. Here's how to maximize its features:

- **Hanging Clothes:** Use the central wooden rod to hang costumes, dresses, and other clothing items. Standard children's hangers can be used.
- **Shelf Storage:** The seven storage compartments and angled shelves are ideal for displaying and organizing shoes, tiaras, makeup, and other play accessories.
- **Accessory Pegs:** The three pegs located on the side of the unit are perfect for looping scarves, necklaces, boas, and other small accessories, keeping them easily accessible.
- **Mirror Use:** The shatterproof acrylic full-length mirror allows children to view their complete outfits and ensure their costume is perfect before play.



Image: A child reaching for a dress hanging on the station's rod, demonstrating ease of access for play.



Image: A child organizing shoes on one of the angled shelves, highlighting the storage capabilities.



Image: A child hanging a necklace on the side pegs, illustrating the use of accessory storage.



Image: A child smiling while looking at their reflection in the station's full-length mirror.

MAINTENANCE

To maintain the quality and appearance of your KidKraft Dress-Up Station, please follow these care instructions:

- **Cleaning:** Wipe with a damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Inspection:** Periodically check all screws and fasteners to ensure they remain tight and secure. Tighten as necessary to maintain stability.
- **Placement:** Place the unit on a flat, stable surface. Avoid prolonged exposure to direct sunlight or extreme temperatures, which can affect the wood material.

TROUBLESHOOTING

If you encounter any issues with your KidKraft Dress-Up Station, consider the following:

- **Stability Issues:** If the unit feels wobbly, re-check all assembly connections and ensure all screws are securely tightened. Verify that the unit is placed on a level surface.
- **Mirror Clarity:** The mirror is shatterproof acrylic. If it appears distorted, ensure it is clean and free from smudges. Minor distortions are inherent to acrylic mirrors compared to glass.

For further assistance, please contact KidKraft customer support.

SPECIFICATIONS

Feature	Detail
Brand	Kid Kraft
Model Number	12511
Material	Engineered Wood
Color	White
Product Dimensions (L x W x H)	26.75 x 15.75 x 31.5 inches
Item Weight	29.9 pounds
Number of Shelves	7
Mirror Type	Shatterproof Acrylic Full-Length Mirror
Recommended Age	Ages 3+

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or to purchase replacement parts, please visit the official KidKraft website or contact their customer support directly. You may also refer to the User Manual (PDF) provided with your product for additional details.

Online Resources:

- [Visit the KidKraft Store on Amazon](#)
- [Installation Manual \(PDF\)](#)
- [User Manual \(PDF\)](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question