

## Fujifilm FinePix S4300

# Fujifilm Finepix S4300 Digital Camera User Manual

Model: FinePix S4300

## 1. INTRODUCTION

---

This manual provides detailed instructions for the safe and effective use of your Fujifilm Finepix S4300 digital camera. Please read this manual thoroughly before using the camera and keep it in a safe place for future reference.

The Fujifilm Finepix S4300 is a 14-megapixel digital camera featuring a 26x optical zoom lens (24-624mm equivalent), dual image stabilization, and HD 720p video recording capabilities. It is designed for users seeking a versatile camera with a powerful zoom and user-friendly features.

## 2. CAMERA OVERVIEW

---

### 2.1 Front and Top View



Figure 1: Front and top view of the Fujifilm Finepix S4300 camera, showing the lens, flash, and control dial.

## 2.2 Rear View



Figure 2: Rear view of the Fujifilm Finepix S4300 camera, displaying the 3-inch LCD screen and various

control buttons.

## 2.3 Bottom View



Figure 3: Bottom view of the Fujifilm Finepix S4300 camera, showing the battery and memory card compartment.

## 3. SETUP

### 3.1 Installing Batteries

The Finepix S4300 operates on four AA batteries. Ensure you use new, high-quality alkaline or Ni-MH rechargeable batteries for optimal performance.

1. Open the battery compartment cover located on the bottom of the camera (refer to Figure 3).
2. Insert four AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.

3. Close the battery compartment cover securely until it clicks into place.

## 3.2 Inserting a Memory Card

The camera supports SD memory cards. A memory card is required to store photos and videos.

1. Open the battery/memory card compartment cover (refer to Figure 3).
2. Insert the SD card into the card slot with the label facing the front of the camera until it clicks.
3. Close the compartment cover securely.
4. To remove the card, push it gently inward until it clicks, then release it to eject.

## 3.3 Initial Power On and Date/Time Setting

After installing batteries and a memory card, power on the camera for the first time.

1. Press the **ON/OFF** button.
2. The camera will prompt you to set the date and time. Use the directional pad to navigate and the **MENU/OK** button to confirm.
3. Set the correct time zone, date, and time.

# 4. OPERATING THE CAMERA

---

## 4.1 Taking Photos in Auto Mode

For simple point-and-shoot photography, use the camera's automatic mode.

1. Turn the mode dial to **AUTO**.
2. Frame your shot using the LCD monitor or electronic viewfinder (EVF).
3. Press the shutter button halfway down to focus. The focus frame will turn green when focus is achieved.
4. Press the shutter button fully down to take the picture.

## 4.2 Using the Optical Zoom

The camera features a 26x optical zoom lens.

- To zoom in, push the zoom lever towards **T** (Telephoto).
- To zoom out, push the zoom lever towards **W** (Wide-angle).

## 4.3 Recording Videos

The Finepix S4300 can record HD 720p videos at 30 frames per second.

1. Turn the mode dial to the **Movie** icon.
2. Press the movie recording button (usually a red dot icon) to start recording.
3. Press the button again to stop recording.

## 4.4 Flash Modes

The built-in flash can be used in various modes:

- **Auto Flash:** The camera automatically determines if flash is needed.

- **Forced Flash:** Flash fires with every shot.
- **Slow Synchro:** For night portraits, combining flash with slow shutter speeds.
- **Flash Off:** Flash is disabled.

Access flash settings via the **MENU** button in shooting mode.

## 4.5 Advanced Shooting Modes

Beyond AUTO, the mode dial offers:

- **Program (P):** Camera sets aperture and shutter speed, but you can adjust other settings.
- **Shutter-Priority (S):** You set shutter speed, camera sets aperture.
- **Aperture-Priority (A):** You set aperture, camera sets shutter speed.
- **Manual (M):** You control both aperture and shutter speed.
- **Scene Recognition Auto (SR AUTO):** Camera intelligently detects the scene type and optimizes settings.
- **Scene Position (SP):** Select from various scene modes like Portrait, Landscape, Sport, Night, etc.

## 4.6 Image Playback and Connectivity

To view your photos and videos:

- Press the **PLAY** button.
- Use the directional pad to navigate through images.
- To connect to an HD TV, use an HDMI cable (not included) and the camera's HDMI port.
- Images can be easily uploaded to platforms like Facebook and YouTube using the included software (refer to the software manual for details).

# 5. MAINTENANCE

---

## 5.1 Cleaning the Camera

- **Camera Body:** Wipe gently with a soft, dry cloth. Do not use alcohol, solvents, or harsh chemicals.
- **Lens:** Use a lens brush to remove dust, then gently wipe with a lens cleaning cloth. For stubborn smudges, use a small amount of lens cleaning fluid on the cloth, not directly on the lens.
- **LCD Monitor:** Wipe gently with a soft, dry cloth. Avoid pressing hard on the screen.

## 5.2 Battery Care

- Remove batteries when the camera will not be used for an extended period.
- Store batteries in a cool, dry place.
- Do not mix old and new batteries, or different types of batteries.

## 5.3 Storage

When storing the camera for long periods, remove the batteries and memory card. Store the camera in a cool, dry, well-ventilated area, away from direct sunlight and extreme temperatures.

# 6. TROUBLESHOOTING

---

Problem	Solution
Camera does not turn on.	<ul style="list-style-type: none"> <li>• Ensure batteries are correctly inserted with proper polarity.</li> <li>• Replace with fresh batteries.</li> <li>• Check if the battery compartment cover is securely closed.</li> </ul>
Cannot take pictures.	<ul style="list-style-type: none"> <li>• Check if a memory card is inserted and has free space.</li> <li>• Ensure the lens cap is removed.</li> <li>• Verify the camera is in a shooting mode (not playback).</li> </ul>
Images are blurry.	<ul style="list-style-type: none"> <li>• Ensure the lens is clean.</li> <li>• Hold the camera steady or use a tripod.</li> <li>• Check focus settings; ensure the camera has focused before fully pressing the shutter.</li> <li>• In low light, increase ISO or use flash.</li> </ul>
Flash does not fire.	<ul style="list-style-type: none"> <li>• Check flash mode settings (ensure it's not set to "Flash Off").</li> <li>• Allow time for the flash to charge.</li> </ul>

## 7. SPECIFICATIONS

Feature	Detail
Model Name	FinePix S4300
Effective Pixels	14 Megapixels
Image Sensor	1/2.3-inch CCD
Optical Zoom	26x
Focal Length	24-624mm (35mm equivalent)
Digital Zoom	7x
Image Stabilization	Dual Image Stabilization
LCD Screen	3.0-inch LCD, 460,000 dots
Electronic Viewfinder (EVF)	Yes, 200,000 dots
Video Recording	HD 720p at 30 fps (MP4 format)
Storage Media	SD/SDHC/SDXC Memory Card
Power Source	4 x AA Alkaline or Ni-MH batteries
Connectivity	HDMI, USB 2.0, Wi-Fi
Dimensions (W x H x D)	11.8 x 9.99 x 8.09 cm
Weight	448 Grams (excluding batteries and memory card)
Special Features	Auto Focus, Face Detection, SR Auto, Panorama Mode

## 8. WARRANTY AND SUPPORT

---

For information regarding warranty coverage, service, or technical support for your Fujifilm Finepix S4300 camera, please refer to the warranty card included with your product or visit the official Fujifilm website for your region. Specific warranty terms and conditions may vary by country or region of purchase. Please retain your proof of purchase for any warranty claims.