

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Jolly line](#) /

› Jolly line GBS MADEFORYOU 2:1 Elegant Universal Remote Control User Manual

Jolly line 2 IN 1

Jolly line GBS MADEFORYOU 2:1 Elegant Universal Remote Control User Manual

Model: 2 IN 1

1. INTRODUCTION

This manual provides detailed instructions for the Jolly line GBS MADEFORYOU 2:1 Elegant Universal Remote Control. Designed for ease of use, this programmable remote can control up to two devices, such as a television and a personal computer, offering a consolidated control solution for your entertainment and computing needs.

2. PRODUCT OVERVIEW



Figure 1: Jolly line GBS MADEFORYOU 2:1 Elegant Universal Remote Control.

The image displays the black Jolly line GBS MADEFORYOU 2:1 Elegant Universal Remote Control. It features a standard layout with a red power button at the top left, a numeric keypad (0-9), volume (VOL) and channel (CH) controls, and a central navigation cluster with an 'OK' button. Additional function buttons include Mute, AV, Guide, and colored function keys. The 'madeformyou 2:1' branding is visible towards the bottom of the remote.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide or lift the cover to open the compartment.
3. Insert two (2) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover securely.

3.2 Initial Device Programming

The GBS MADEFORYOU 2:1 remote is a universal remote that requires programming to control your specific devices. The exact programming method (e.g., direct code entry, auto-search) will depend on the device you wish to control. Please refer to the separate code list or programming instructions provided with your purchase for detailed steps. Generally, the process involves:

1. Turning on the device you wish to program (e.g., TV, PC).
2. Entering a specific programming mode on the remote (often by holding down a device button and a setup button).
3. Inputting a 3 or 4-digit code corresponding to your device's brand, or initiating an auto-search function.
4. Testing the remote's functions (e.g., power, volume) to confirm successful programming.
5. Repeat for the second device.

4. OPERATING INSTRUCTIONS

Once programmed, the remote control operates your devices with ease.

- **Device Selection:** Use the dedicated device buttons (e.g., TV, PC) at the top of the remote to select which device you want to control. The remote will only send commands to the currently selected device.
- **Power:** Press the **POWER** button (red button at top-left) to turn the selected device on or off.
- **Volume Control:** Use the **VOL+** and **VOL-** buttons to adjust the volume.
- **Channel Control:** Use the **CH+** and **CH-** buttons to change channels.
- **Numeric Keypad:** Use the number buttons (0-9) to directly input channel numbers or other numerical selections.
- **Navigation and OK:** Use the arrow buttons (**UP, DOWN, LEFT, RIGHT**) to navigate menus and the central **OK** button to confirm selections.
- **Mute:** Press the **MUTE** button to silence the audio. Press again to restore.
- **Input/Source:** Use the **AV** or **INPUT** button to cycle through available input sources on your TV.
- **Special Functions:** Utilize other labeled buttons (e.g., GUIDE, MENU, colored buttons) as per your device's functionality.

5. MAINTENANCE

- **Cleaning:** To clean the remote control, gently wipe its surface with a soft, dry cloth. Avoid using liquid cleaners, abrasive materials, or chemical solvents, as these can damage the remote's finish or internal components.
- **Battery Care:** Replace batteries promptly when the remote's performance diminishes. Do not mix old and new batteries, or different types of batteries. If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

- **Remote is not working or device is not responding:**
 - Ensure the batteries are correctly installed and not depleted. Replace if necessary.
 - Verify that the remote is pointed directly at the device's infrared sensor and there are no obstructions.
 - Confirm that the correct device mode (e.g., TV, PC) is selected on the remote.
 - Re-program the remote for the device, ensuring the correct code is used.
- **Only some functions work:**
 - This may indicate an incorrect or partially compatible programming code. Try programming the device again using a different code from the provided list, if available.
- **Buttons are sticky or unresponsive:**
 - Clean the remote as described in the Maintenance section. Avoid spilling liquids on the remote.

7. SPECIFICATIONS

Feature	Detail
Product Type	Universal Remote Control
Model Number	2 IN 1
Brand	Jolly line
Manufacturer	GBS
Number of Devices Supported	2
Input Type	Press buttons
Batteries Required	2 x AAA (not included)
Product Dimensions	4.13 x 1.57 x 12.01 inches
Item Weight	4 ounces
Color	Black
Compatible Devices	Personal Computer, Smart TV (programmable)

8. WARRANTY AND SUPPORT

Information regarding product warranty and customer support is not available in this manual. Please refer to your purchase documentation or contact the retailer/manufacturer directly for details on warranty

coverage and technical assistance.