

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Casio](#) /
- › [Casio G-SHOCK DW-5600BB-1ER Digital Watch User Manual](#)

Casio DW-5600BB-1ER

Casio G-SHOCK DW-5600BB-1ER Digital Watch User Manual

Model: DW-5600BB-1ER

INTRODUCTION

This manual provides detailed instructions for the proper use and care of your Casio G-SHOCK DW-5600BB-1ER digital watch. Designed for durability and functionality, this timepiece offers a range of features including shock resistance, water resistance, and various timekeeping modes. Please read this manual thoroughly to ensure optimal performance and longevity of your watch.



Front view of the Casio G-SHOCK DW-5600BB-1ER digital watch. The display shows the time, date, and day of the week, with 'ALM' and 'SIG' indicators visible. The watch features a black resin case and band, with 'PROTECTION' and 'G-SHOCK' embossed on the bezel.

KEY FEATURES

- **Shock-Resistant Construction:** Patented Hollow Core Guard Structure protects against impact and vibration.
- **200-Meter Water Resistance:** Suitable for free diving without scuba gear.
- **Stopwatch Function:** 1/100-second accuracy, up to 24 hours.
- **Multi-Function Alarm:** Includes daily, date, monthly, and one-month alarms.
- **Countdown Timer:** Set up to 24 hours in advance.
- **Automatic Calendar:** Displays correct date, day, and month once set.
- **Illuminator:** Electro-luminescent panel for easy reading in low light.
- **Durable Materials:** Resin case and band with tough mineral glass.
- **Long Battery Life:** Approximately two years on one battery.

SETUP GUIDE

Initial Power On / Battery

Your watch comes with a pre-installed Lithium Metal battery, providing approximately two years of operation. No initial power-on procedure is typically required as the watch is ready for use upon purchase.

Time and Date Setting

1. In the Timekeeping Mode, press and hold the **ADJUST** button (top left) until the seconds begin to flash, indicating the setting screen.
2. Press the **MODE** button (bottom left) to cycle through the settings: Seconds → Hour → Minute → Year → Month → Day → 12/24-hour format.
3. Use the **START/STOP** button (top right) to increase the flashing value, and the **LIGHT** button (bottom right) to decrease it (for time/date settings).
4. Once all settings are configured, press the **ADJUST** button to exit the setting screen.

OPERATING INSTRUCTIONS

Mode Navigation

Press the **MODE** button (bottom left) to cycle through the different modes: Timekeeping Mode → Stopwatch Mode → Countdown Timer Mode → Alarm Mode.

Stopwatch Function

In Stopwatch Mode:

- Press **START/STOP** (top right) to start and stop the stopwatch.
- Press **ADJUST** (top left) to reset the stopwatch to zero while it is stopped.
- To record split times, press **ADJUST** while the stopwatch is running. Press **ADJUST** again to release the split and resume normal timekeeping.

Alarm Function

In Alarm Mode:

- Press **START/STOP** (top right) to toggle the alarm ON/OFF.

- Press **ADJUST** (top left) to enter alarm setting mode. Use **MODE** to select hour/minute/alarm type, and **START/STOP** to change values.
- The watch supports daily, date, monthly, and one-month alarms.

Illuminator (Backlight)

Press the **LIGHT** button (bottom right) to illuminate the display for easy reading in dark conditions. The electro-luminescent panel causes the entire face to glow.

Water Resistance

Your G-SHOCK DW-5600BB-1ER is rated for 200-meter water resistance. This means it is suitable for everyday use and can withstand splashes, rain, showering, swimming, and free diving without scuba gear. Do not operate buttons while the watch is submerged in water.

CARE AND MAINTENANCE

- **Cleaning:** Wipe the watch with a soft, dry cloth. For stubborn dirt, use a mild soap solution and rinse thoroughly with fresh water, then dry completely.
- **Avoid Chemicals:** Do not expose the watch to gasoline, cleaning solvents, spray aerosols, adhesives, paints, or other chemicals, as they may damage the resin case and band.
- **Temperature Extremes:** Avoid exposing the watch to extremely high or low temperatures for prolonged periods.
- **Battery Replacement:** When the display becomes dim or functions become erratic, it may be time to replace the battery. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance.
- **Storage:** When not in use for extended periods, store the watch in a dry, cool place away from direct sunlight.

TROUBLESHOOTING

Problem	Solution
Display is dim or blank.	The battery may be low. Replace the battery. Ensure the watch is not exposed to extreme cold, which can temporarily dim the display.
Buttons are unresponsive or difficult to press.	Ensure no dirt or debris is lodged around the buttons. If the watch was recently submerged, ensure it is dry. If the issue persists, contact customer support.
Incorrect time or date displayed.	Refer to the "Time and Date Setting" section to manually adjust the time and date.
Water inside the display.	This indicates a breach in the water resistance. Stop using the watch immediately and contact a qualified service center for repair.

PRODUCT SPECIFICATIONS

- **Model Number:** DW-5600BB-1ER
- **Dimensions:** 48.9mm (H) x 42.8mm (W) x 13.4mm (T)

- **Weight:** 60g
- **Water Resistance:** 200 meters (20 BAR)
- **Battery Type:** 1 x Lithium Metal (CR2016)
- **Battery Life:** Approximately 2 years
- **Accuracy:** ± 15 seconds per month
- **Functions:** Stopwatch, Countdown Timer, Multi-function Alarm, Hourly Time Signal, Full Auto-calendar (to year 2099), 12/24-hour format, Electro-luminescent backlight (Afterglow)
- **Case/Bezel Material:** Resin
- **Band Material:** Resin
- **Glass:** Mineral Glass

WARRANTY AND SUPPORT

Your Casio G-SHOCK DW-5600BB-1ER watch is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or warranty claims, please contact Casio customer service or visit the official Casio website. You can find more information and support resources at the [Casio Store on Amazon](#) or through Casio's global support channels.