

[Manuals.plus](#) /

› [CONTOURE](#) /

› Contoure CM11040BKT Microwave Instruction Manual

CONTOURE CM11040BKT

Contoure CM11040BKT Microwave Instruction Manual

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Contoure CM11040BKT Microwave. Please read all instructions carefully before using the appliance and retain this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.

SETUP

Unpacking

Carefully remove all packaging materials from the microwave oven. Check the oven for any damage, such as

dents or a misaligned door. If any damage is observed, do not operate the oven and contact customer service.

Placement and Installation

This Contoure CM11040BKT microwave is designed for Over-the-Range installation. Refer to the separate installation guide for detailed instructions on mounting and ventilation requirements. Ensure the mounting surface is structurally sound and capable of supporting the appliance's weight.

Turntable Installation

1. Place the turntable support ring in the center of the microwave oven cavity.
2. Position the glass turntable plate securely on top of the support ring. Ensure it sits flat and can rotate freely.



This image shows the front view of the Contoure CM11040BKT Microwave, featuring its black finish, control panel on the right, and the microwave door with a visible interior.

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel on the right side of the microwave features various buttons for setting cooking time, power level, and special functions. The digital display shows the time of day and cooking settings.

Basic Microwave Cooking

1. Place food in a microwave-safe container on the glass turntable.
2. Close the microwave door securely.
3. Press the 'Time Cook' button (or similar, depending on model specifics).
4. Enter the desired cooking time using the number pad.
5. Press the 'Power Level' button (if adjusting from default 100%) and select the desired power level.
6. Press 'Start' to begin cooking.

Using the Timer Function

The microwave includes a timer function for general kitchen timing, independent of microwave cooking. To use, press the 'Timer' button, enter the desired time, and press 'Start'. The timer will count down without activating the microwave heating elements.

MAINTENANCE

Cleaning the Interior

Regularly clean the interior of the microwave with a mild detergent and a soft cloth. For stubborn food splatters, place a bowl of water with lemon slices inside and microwave for a few minutes to loosen residue,

then wipe clean. Do not use abrasive cleaners or scouring pads.

Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Avoid spraying cleaners directly onto the control panel. Ensure the ventilation grilles are free from dust and grease buildup.

Turntable Care

The glass turntable and support ring can be removed for cleaning. Wash them in warm, soapy water or in the dishwasher. Ensure they are completely dry before placing them back into the microwave.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Microwave does not start	Door not closed properly; Power cord unplugged; Blown fuse/tripped circuit breaker.	Ensure door is firmly closed; Check power cord connection; Check household fuse/circuit breaker.
Food not heating evenly	Food not stirred/rotated; Turntable not rotating.	Stir or rearrange food during cooking; Ensure turntable is correctly placed and free to rotate.
Light bulb not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.

SPECIFICATIONS

- **Brand:** CONTOURE
- **Model Name:** CM11040BKT
- **Installation Type:** Over-the-Range
- **Special Feature:** Turntable
- **Included Components:** Turntable
- **Timer Function:** Timer Function Available
- **Energy Consumption:** 1000 Watts
- **Manufacturer:** Contoure
- **UPC:** 789714110402

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Contoure website. Do not attempt to repair the appliance yourself.