

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Hobart](#) /
- › [Hobart HL120-1STD Legacy Tabletop Stand Mixer - 12 Qt. Instruction Manual](#)

Hobart HL120-1STD

Hobart HL120-1STD Legacy Tabletop Stand Mixer - 12 Qt. Instruction Manual

Model: HL120-1STD | Brand: Hobart

INTRODUCTION

The Hobart HL120-1STD Legacy Tabletop Stand Mixer is a robust and reliable appliance designed for demanding kitchen tasks. Featuring a powerful DC motor and a generous 12-quart capacity, this mixer is engineered to handle heavy doughs and large batches with ease, making it suitable for both home and professional environments. Its durable stainless steel construction ensures longevity and easy maintenance. This manual provides essential information for the safe and efficient operation of your Hobart mixer.



Image: Hobart HL120-1STD Legacy Tabletop Stand Mixer with its stainless steel bowl and attachments.

SETUP

1. **Unpacking:** Carefully remove the mixer and all accessories from the packaging. Retain packaging for future transport or storage.
2. **Placement:** Place the mixer on a stable, flat, and dry surface. Ensure adequate clearance around the mixer for operation and ventilation.
3. **Attaching the Bowl:** Position the 12-quart stainless steel bowl onto the bowl supports. Use the bowl lift lever to raise the bowl into the mixing position, ensuring it locks securely.
4. **Installing Accessories:** Select the appropriate attachment (flat beater, wire whip, or dough hook) for your task. Slide the attachment onto the mixer shaft until it clicks into place. Ensure the attachment is fully engaged before operation.
5. **Power Connection:** Plug the mixer into a grounded 120 Volt electrical outlet.

OPERATING INSTRUCTIONS

The Hobart HL120-1STD mixer features a 10-speed control for precise mixing. Always ensure the mixer is off before changing attachments or adding ingredients.

1. **Adding Ingredients:** With the bowl in the lowered position, add your ingredients. The bowl lift mechanism provides ample space for this.
2. **Raising the Bowl:** Use the bowl lift lever to raise the bowl until it is securely in the mixing position.
3. **Selecting Speed:** Turn the speed control knob to the desired setting. Start at a lower speed (e.g., 'Stir' or '2') to incorporate ingredients, then gradually increase as needed. The mixer offers speeds from 0 (Off) to 10 (Fast).
4. **Mixing:** Allow the mixer to operate until ingredients are thoroughly combined or the desired consistency is achieved. The powerful DC motor is designed to maintain speed even with heavy loads, such as mixing multiple loaves of sourdough bread.
5. **Stopping the Mixer:** Turn the speed control knob to '0' (Off) to stop the mixer.
6. **Removing Ingredients/Attachments:** Lower the bowl using the lift lever. Carefully remove the attachment by pushing it upwards and twisting. Then, remove the bowl from its supports.

Demonstration Video

Your browser does not support the video tag.

Video: Demonstration of the Hobart HL120-1STD Stand Mixer's features and operation, including speed control, bowl lift mechanism, and mixing capabilities with heavy dough.

MAINTENANCE

- **Cleaning Attachments:** The stainless steel attachments (flat beater, wire whip, dough hook) are dishwasher safe. For best results and to maintain their appearance, wash them after each use.
- **Cleaning the Bowl:** The stainless steel mixing bowl is also dishwasher safe.
- **Cleaning the Mixer Body:** Wipe the exterior of the mixer with a damp cloth. Do not immerse the mixer in water or spray it with liquids. Ensure the mixer is unplugged before cleaning.
- **Attachment Hub:** Keep the attachment hub clean and free of debris to ensure proper function of optional accessories.



Image: Stainless steel flat beater and wire whip attachments, which are dishwasher safe for easy cleaning.

TROUBLESHOOTING

- **Mixer Does Not Start:** Ensure the power cord is securely plugged into a functional 120V outlet. Check that the speed control knob is not set to '0' (Off).
- **Attachment Not Engaging:** Verify that the attachment is fully pushed onto the mixer shaft and clicked into place. Ensure the bowl is properly seated and locked in the raised position.

- **Unusual Noise or Vibration:** Stop the mixer immediately. Check for any foreign objects in the bowl or around the attachment. Ensure the bowl and attachment are correctly installed. If the issue persists, contact customer support.
- **Motor Overheating:** If the motor feels excessively hot or emits a burning smell, turn off and unplug the mixer. Allow it to cool down completely before attempting to use it again. Avoid overloading the mixer with ingredients beyond its capacity.

SPECIFICATIONS

Feature	Detail
Brand	Hobart
Model Name	HL120-1STD
Capacity	12 Quarts
Color	Silver
Material	Stainless Steel
Special Feature	Adjustable Speed Control
Controls Type	Knob
Voltage	120 Volts
Wattage	372.85 watts
Product Dimensions	27.5 x 23.13 x 33 inches
Item Weight	204 pounds
Dishwasher Safe (Attachments)	Yes

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the official Hobart website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

You can find additional resources and contact information on the [Hobart Store on Amazon](#).