

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Supersonic](#) /

› [Supersonic SC-26 Universal Remote Control Instruction Manual](#)

Supersonic SC-26

Supersonic SC-26 Universal Remote Control Instruction Manual

Model: SC-26



INTRODUCTION

This manual provides comprehensive instructions for setting up, operating, and maintaining your Supersonic SC-26 Universal Remote Control. This remote is designed to consolidate control of up to six different home entertainment components, including televisions, cable boxes, satellite receivers, DVD players, audio systems, and VCRs.

Please read this manual thoroughly before use to ensure proper setup and optimal performance of your remote control.

PRODUCT OVERVIEW

The Supersonic SC-26 Universal Remote Control simplifies your entertainment experience by allowing you to operate multiple devices with a single unit. It features large, easy-to-press keys for comfortable use and an automatic code search function for straightforward setup.

Key Features:

- Controls up to 6 components: TV, Cable, Satellite, DVD, Audio, VCR.
- Automatic Code Search for easy device programming.
- Large, easy-to-press keys for enhanced usability.
- Dedicated buttons for common functions: Info, Menu, Input, Clear, Preview Chapter, Next Chapter.
- Advanced DVD functions for comprehensive playback control.



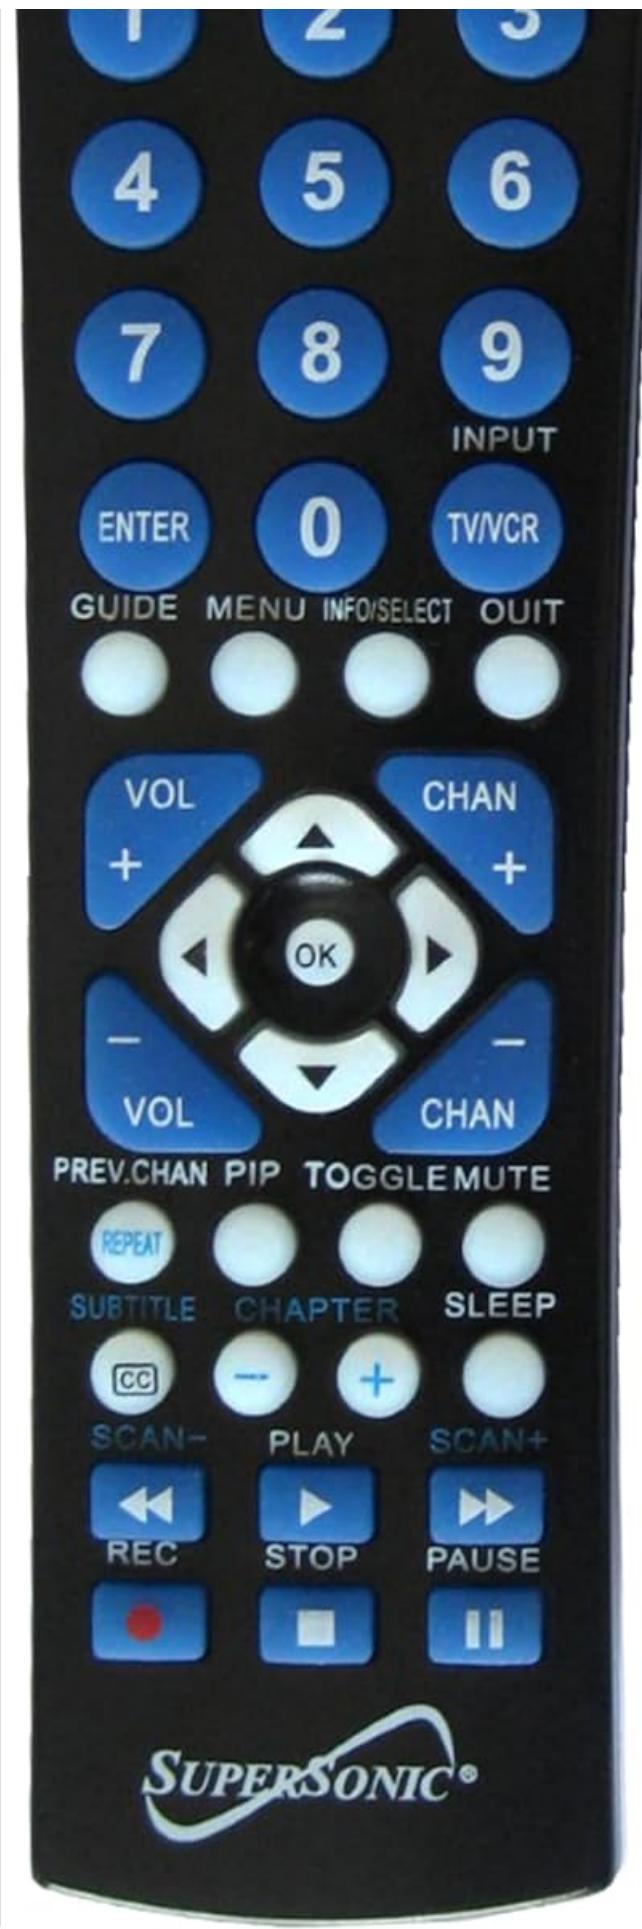


Image: Front view of the Supersonic SC-26 Universal Remote Control, showcasing its layout with large, blue and white buttons for numbers, channel, volume, and device selection.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two new AAA batteries (not included), ensuring the positive (+) and negative (-) terminals match the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Image: Back view of the Supersonic SC-26 Universal Remote Control, highlighting the battery compartment cover.

2. Automatic Code Search

The automatic code search feature allows the remote to find the correct operating code for your device without manual input.

1. Turn on the device you wish to control (e.g., TV, DVD player).
2. Press and hold the **CODE SEARCH** button until the red indicator light illuminates.
3. While holding **CODE SEARCH**, press the device button you want to program (e.g., **TV**, **DVD**, **CBL**). The red indicator light will blink once and then remain lit.
4. Release both buttons. The red indicator light should still be lit.
5. Point the remote at your device and repeatedly press the **POWER** button (or **PLAY** for VCR/DVD) until the device turns off (or starts playing). Pressing the button too quickly may skip codes. Allow a brief pause between presses.
6. Once the device responds, immediately press the **ENTER** button to save the code. The red indicator light will turn off.
7. Test the remote's functions (e.g., volume, channel, menu) to ensure all controls work correctly. If not, repeat the automatic code search process.
8. Repeat this process for each device you wish to control.

OPERATING INSTRUCTIONS

After successful programming, you can use your Supersonic SC-26 Universal Remote Control to operate your devices.

1. Device Selection

To control a specific device, press the corresponding device button at the top of the remote (**TV**, **CBL**, **VCR**, **SAT**, **DVD**, **AUDIO**). The remote will then send commands to that selected device.

2. Basic Functions

- **POWER:** Turns the selected device on or off.
- **NUMBER KEYS (0-9):** Used to enter channel numbers or other numerical inputs.
- **VOL +/-:** Adjusts the volume of the selected device.
- **CHAN +/-:** Changes channels on the selected device.
- **MUTE:** Silences the audio.

- **INPUT:** Cycles through input sources on your TV.

3. Advanced Functions

- **GUIDE:** Accesses the electronic program guide (if supported by your device).
- **MENU:** Opens the on-screen menu of the selected device.
- **INFO/SELECT:** Displays information about the current program or selects menu options.
- **OK / Navigation Arrows:** Used to navigate menus and confirm selections.
- **QUIT:** Exits menus or on-screen displays.
- **TV/VCR:** Toggles between TV and VCR modes (for VCR devices).
- **PLAY, STOP, PAUSE, REC, SCAN +/-:** Control playback functions for DVD/VCR devices.
- **PREV. CHAN:** Returns to the previously viewed channel.
- **SUBTITLE, CHAPTER +/-:** For DVD playback control.



Image: A person's hand holding the Supersonic SC-26 remote control, pointing it towards a television screen, demonstrating typical usage.

TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common problems and solutions:

Problem	Solution
Remote does not operate any device.	<ul style="list-style-type: none">Check if batteries are inserted correctly and are not depleted. Replace if necessary.Ensure there is a clear line of sight between the remote and the device's infrared sensor.Re-program the remote using the Automatic Code Search method.
Remote operates some functions but not others.	<ul style="list-style-type: none">The programmed code may be a partial match. Try repeating the Automatic Code Search to find a more compatible code.Ensure the correct device button (e.g., TV, DVD) is selected for the function you are trying to perform.
Red indicator light does not illuminate during programming.	<ul style="list-style-type: none">Check battery power. Replace batteries if they are low.Ensure the CODE SEARCH button is pressed and held correctly.
Device turns off during code search but remote doesn't work after pressing ENTER.	<ul style="list-style-type: none">You may have pressed POWER too many times, passing the correct code. Repeat the Automatic Code Search, pressing POWER more slowly and pressing ENTER immediately after the device responds.

MAINTENANCE

- Cleaning:** Wipe the remote with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Battery Replacement:** Replace batteries when the remote's performance degrades or the indicator light fails to illuminate. Always replace both batteries at the same time with new AAA batteries.
- Storage:** Store the remote in a dry place away from extreme temperatures and direct sunlight.

SPECIFICATIONS

- Model:** SC-26
- Brand:** Supersonic
- Compatible Devices:** TV, Cable, Satellite, DVD, Audio, VCR
- Max Number of Supported Devices:** 6
- Power Source:** 2 x AAA Batteries (not included)
- Product Dimensions:** 7.38 x 2 x 0.75 inches
- Item Weight:** 3.52 ounces

SAFETY INFORMATION


Proposition 65 Warning: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Please handle with care and dispose of responsibly.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your product packaging or visit the official Supersonic website. Keep your purchase receipt as proof of purchase.

© 2023 Supersonic. All rights reserved.

Related Documents - SC-26

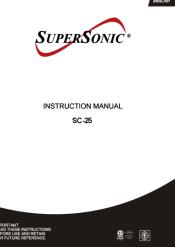 <p>Supersonic SC-3226SDVD 32-Inch LED TV with DVD Player User Manual Comprehensive user manual for the Supersonic SC-3226SDVD 32-inch LED TV with built-in DVD player. Learn about setup, operation, features, safety, and troubleshooting.</p>
 <p>SuperSonic SC-25 Instruction Manual This manual provides comprehensive instructions for the SuperSonic SC-25 DVD player, covering safety information, installation, remote control operation, troubleshooting, and specifications.</p>
 <p>Supersonic SC-2426SDVD 23.6" LED TV with DVD Player User Manual User manual for the Supersonic SC-2426SDVD 23.6-inch LED TV with built-in DVD player. Learn about setup, operations, features, safety instructions, and troubleshooting.</p>
 <p>Supersonic SC-2211 21.5-Inch LED HDTV Specifications and Features Detailed specifications and features for the Supersonic SC-2211 21.5-inch LED HDTV, including product dimensions, weight, resolution, connectivity options, and power requirements.</p>



[Supersonic SC-37HT Home Theatre System Instruction Manual](#)

Instruction manual for the Supersonic SC-37HT Home Theatre System, covering safety information, features, system connection, basic operation, and specifications.



[Supersonic SC-20H DVD Player Instruction Manual](#)

Comprehensive instruction manual for the Supersonic SC-20H DVD Player, covering safety information, setup, remote control operation, OSD setup, troubleshooting, and specifications. Learn how to connect, operate, and maintain your Supersonic DVD player.