

- › [dish](#) /
- › [DISH DISH211 4-Device Universal Remote User Manual](#)

## dish DISH211

# DISH DISH211 4-Device Universal Remote User Manual

## INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your DISH DISH211 4-Device Universal Remote. Designed for ease of use, this remote supports DISH TV receivers and can control up to four different devices, including TVs and other entertainment systems. Its ability to learn commands from original remotes makes it a versatile replacement.



Figure 1: The DISH DISH211 4-Device Universal Remote, showcasing its ergonomic design and button layout.

## SETUP

### 1. Battery Installation

The DISH211 remote requires two (2) AA batteries for operation. To install:

1. Locate the battery compartment on the back of the remote.
2. Slide the battery cover downwards and lift to open.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align with the indicators inside the compartment.
4. Replace the battery cover by sliding it upwards until it clicks into place.

### 2. Device Pairing and Programming

The DISH211 remote can be programmed to control your DISH receiver and other devices. It supports both Infrared (IR) and Ultra High Frequency (UHF) communication, depending on your receiver model.

# Remote User Guide



**DISH®**

Figure 2: Cover of the official DISH Remote User Guide, which provides detailed programming instructions.



### For DISH Receiver Pairing (UHF/IR):

Some DISH receivers may require setting the remote's address and communication type (UHF or IR). A small switch near the battery compartment may allow selection between UHF and IR modes.

 
Ensure this switch is set correctly for your receiver type.

To address the remote to your receiver:

1. Press the **System Info** button on the front of your receiver to access the system information screen.
2. Press and hold the **SAT** button on the remote until all mode lights illuminate.
3. Enter a number between 1-15 on the remote keypad. This number corresponds to the TV-2 UHF address displayed on your receiver's screen.
4. Press the **#** (pound) button once.
5. Press the **Record** button three times.
6. Select **Done** on the system info screen and test the remote's functionality.

### For Other Devices (TV, DVD, AUX):

The remote has a large code library and can learn commands from your original remotes. Refer to the official DISH remote user guide (often included with the product or available online) for specific programming codes and learning instructions for various brands and device types.

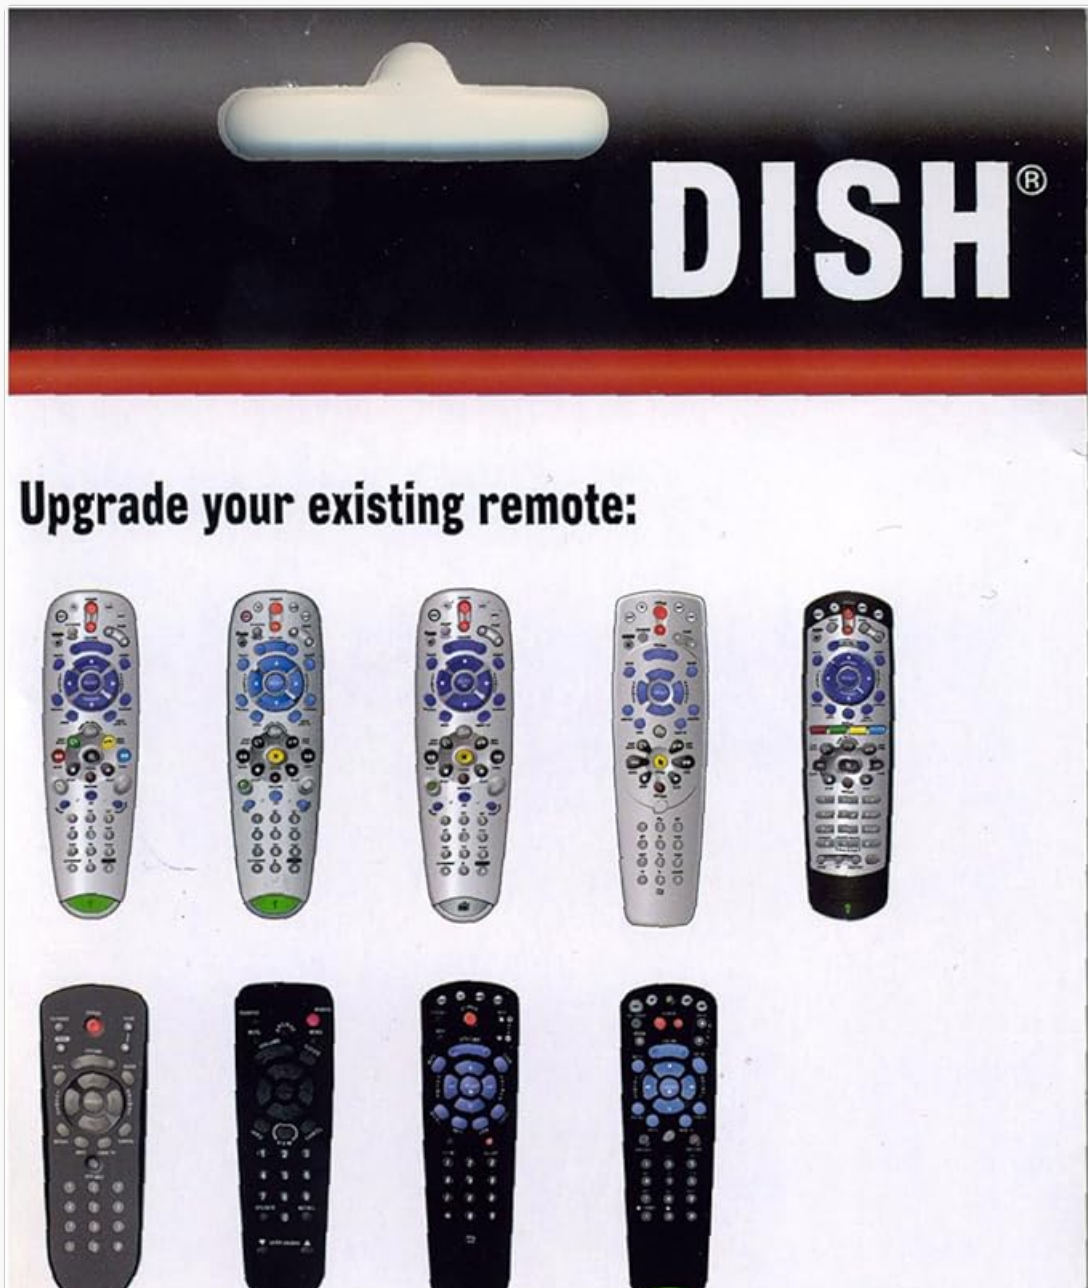

## RECEIVERS

### Supports single TV receivers (IR)

- |                |                |                |                |
|----------------|----------------|----------------|----------------|
| • ViP® 211     | • DISH 411     | • DISH 811     | • DISH 3900    |
| • ViP® 211k    | • DISH 501 DVR | • DISH 921 DVR | • DISH 4000    |
| • ViP® 222k    | • DISH 508 DVR | • DISH 1000    | • DISH 4700    |
| • DISH 111     | • DISH 510 DVR | • DISH 2700    | • DISH 4900    |
| • DISH 301 Pro | • DISH 512 DVR | • DISH 2800    | • DISH 6000    |
| • DISH 311     | • DISH 522 DVR | • DISH 3000    | • DISH JVC IRR |
| • DISH 322     | • DISH 625 DVR | • DISH 3700    |                |
| • DISH 381     | • DISH 721     | • DISH 3800    |                |

### \* Supports two TV receivers, TV1 and TV2 locations (IR/UHF)

- |             |                |                 |
|-------------|----------------|-----------------|
| • ViP® 222  | • ViP® 622 DVR | • ViP® 722k DVR |
| • ViP® 222k | • ViP® 722 DVR | • ViP® 612 DVR  |

Some features are not supported by all receivers

LIMITED 90 DAY WARRANTY - DETAILS ENCLOSED

Figure 3: The back of the DISH remote packaging, indicating compatible DISH receiver models for both IR and IR/UHF configurations.

## OPERATING INSTRUCTIONS

The DISH211 remote is designed for intuitive control of your entertainment system. It features backlit active MODE keys for visibility in low light conditions and dedicated DVR controls.

### 1. Mode Selection

Press the desired mode button (e.g., **SAT** for DISH receiver, **TV** for television, **DVD** for DVD player, **AUX** for auxiliary device) at the top of the remote to select the device you wish to control. The selected mode button will illuminate.

### 2. Basic Controls

- **Power:** Press the **POWER** button to turn the selected device on or off.
- **Volume:** Use the **VOLUME UP/DOWN** buttons to adjust the audio level of your television.
- **Channel:** Use the **CHANNEL UP/DOWN** buttons to change channels on your DISH receiver or television.
- **Mute:** Press the **MUTE** button to silence the audio.
- **Input:** Press the **INPUT** button to cycle through video inputs on your television.

### 3. DVR Controls

The remote includes dedicated buttons for DVR functionality:

- **Record:** Initiates recording of the current program.
- **Play/Pause:** Starts or pauses playback of recorded content or live TV.
- **Stop:** Stops playback.
- **Rewind/Fast Forward:** Controls playback speed and direction.
- **Skip Forward (DISH Skip Forward):** Allows quick skipping through commercials or segments.
- **Skip Back:** Skips backward in recorded content.



Figure 4: Close-up view of the DISH DISH211 remote, highlighting the central navigation and DVR control buttons.

## MAINTENANCE

### 1. Battery Replacement

When the remote's performance degrades or buttons become unresponsive, it is likely time to replace the batteries. Follow the battery installation steps outlined in the Setup section.

### 2. Cleaning

To clean your remote, gently wipe the surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using excessive liquid or harsh chemicals, as these can damage the remote's electronics or finish.

## TROUBLESHOOTING

### Remote Not Responding

- **Check Batteries:** Ensure batteries are correctly installed and have sufficient charge. Replace if necessary.
- **Line of Sight (IR):** If using IR mode, ensure there is a clear line of sight between the remote and the device's IR receiver. Obstructions can block the signal.
- **Mode Selection:** Verify that the correct mode button (e.g., SAT, TV) is selected for the device you are trying to control.
- **Remote Address/UHF-IR Switch:** For DISH receivers, confirm the remote's address is correctly set and the UHF/IR switch (if present) matches your receiver's configuration. Incorrect settings can prevent communication.

### Intermittent Functionality

- **Interference:** Other electronic devices or strong light sources (like plasma TV IR interference) can sometimes interfere with IR signals. Try operating the remote from a different angle or location.
- **DVR Directory Update:** If experiencing lag or unresponsiveness with DVR functions, ensure your DVR's directory is updated. Consult your DISH receiver's manual for instructions on updating its software or directory.

### Buttons Not Working

- **Clean Remote:** Dirt or debris under buttons can cause them to stick or become unresponsive. Clean the remote as described in the Maintenance section.
- **Reprogram:** If specific buttons for a device are not working, the remote may need to be reprogrammed for that device.

## SPECIFICATIONS

| Feature                         | Detail   |
|---------------------------------|--|
| Model Number                    | DISH211  |
| Brand                           | DISH   |
| Product Dimensions              | 1.75 x 4.81 x 11.38 inches                                 |
| Item Weight                     | 9.6 ounces   |
| Batteries Required              | 2 AA batteries   |
| Max Number of Supported Devices | 4  |
| Compatible Devices              | Television, DISH TV receivers (TV1 and TV2 locations)      |
| Connectivity Technology         | Infrared (IR), Ultra High Frequency (UHF)                  |
| Special Features                | Backlit keys, Universal compatibility, Learning capability |

## WARRANTY AND SUPPORT

### Warranty Information

 



The DISH DISH211 Universal Remote typically comes with a **Limited 90-Day Warranty**. Please refer to the documentation enclosed with your product for specific terms, conditions, and details regarding warranty claims.

### Customer Support

For further assistance with programming, troubleshooting, or general inquiries, it is recommended to consult the official DISH Network support resources. This may include their website, online user guides, or customer service contact information. The manufacturer of this product is Audiovox Accessories Corporation.

© 2024 DISH Network. All rights reserved.
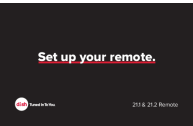
## Related Documents - DISH211


|   |   |
|---|---|
|  | <a href="#">Dish Remote Setup Guide for 21.1 &amp; 21.2 Models</a><br>A comprehensive guide to setting up and programming your Dish 21.1 and 21.2 remote control for seamless TV and audio device integration. Includes device codes and regulatory information.  |
|  | <a href="#">Flipper Universal Remote User Manual - Setup and Operation</a><br>Comprehensive user manual for the Flipper Two Device Universal remote. Learn how to set up, program, and troubleshoot your remote for TVs, STBs, and more. Includes common codes and learning features.   |
|  | <a href="#">Simpl Universal TV Remote Setup Guide and Device Codes</a><br>This guide provides instructions for setting up the Simpl Universal TV Remote, including battery installation, TV and set-top box (STB) programming, code search, favorite channel setup, learning mode, and factory reset. It also includes extensive lists of device codes for various TV and STB brands.   |
|  | <a href="#">One For All URC7880 Universal Remote Control Codelist and Setup Guide</a><br>Comprehensive codelist and setup instructions for the One For All URC7880 universal remote control. This guide provides step-by-step instructions for code-based setup and extensive lists of codes for various TV, STB, Blu-ray, DVD, Audio, Soundbar, Game, and Media devices from numerous brands, ensuring compatibility and optimal use of your remote. |





#### [DISH Network Remote Control User Guide](#)

 Comprehensive guide to setting up, programming, and operating your DISH Network remote control for TVs, DVD players, VCRs, and receivers. Includes troubleshooting and advanced features.

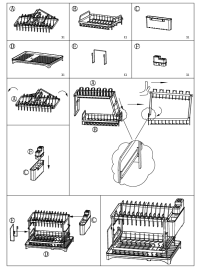

#### [HOGESA 2-Tier Stainless Steel Dish Rack Assembly Guide](#)

Detailed instructions for assembling the HOGESA 2-Tier Stainless Steel Dish Rack, including parts identification and step-by-step assembly for your kitchen countertop.

Documents - dish – DISH211

no relevant documents