

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [LEXIBOOK](#) /
- › [LEXIBOOK JG7410 TV Game Console User Manual](#)

LEXIBOOK JG7410

LEXIBOOK JG7410 TV Game Console User Manual

Model: JG7410

INTRODUCTION

This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your LEXIBOOK JG7410 TV Game Console. Please read these instructions carefully before using the product to ensure optimal performance and safety.



Image: The LEXIBOOK JG7410 TV Game Console connected to a television, with a family playing various games using the included controllers and accessories. The image highlights the console's compact design and the variety of games available.

SETUP

Follow these steps to set up your LEXIBOOK JG7410 TV Game Console:

1. **Unpack the Console:** Carefully remove all components from the packaging. Ensure you have the console unit, controllers, and any necessary cables.
2. **Connect to TV:** Connect the console to your television using the provided AV cables (or HDMI if applicable, check console ports). Insert the yellow connector into the video input of your TV, and the red and white connectors into the audio inputs.
3. **Power Connection:** Connect the power adapter to the console and then plug it into a standard electrical outlet.
4. **Insert Batteries:** The console does not include batteries. Insert the required batteries (typically AA or AAA, refer to controller compartment for specifics) into each controller, ensuring correct polarity.
5. **Select TV Input:** Turn on your television and select the correct AV input channel to display the console's output.



Image: The LEXIBOOK JG7410 TV Game Console packaging, displaying the console, various controllers, and a visual representation of the 100 included games. The box also indicates that the console connects to a TV and features a 16-bit processor with 32-bit graphics.

OPERATING

Once the console is set up, you can begin playing:

1. **Power On:** Press the power button on the console. The main menu should appear on your TV screen.
2. **Game Selection:** Use the controllers to navigate through the game menu. The console features 100 built-in games. Select a game by highlighting it and pressing the appropriate button on your controller.
3. **Gameplay:** Follow the on-screen instructions for each game. The console is designed to develop motor skills and hand-eye coordination. While specifications indicate 1 player, the console supports multiple players with additional accessories as depicted in product imagery.
4. **Exiting Games:** Refer to the in-game menu or press a designated button (often 'Menu' or 'Reset') on

the console or controller to return to the main game selection screen.

5. **Power Off:** When finished playing, press the power button on the console to turn it off.

MAINTENANCE

To ensure the longevity and proper functioning of your console:

- **Cleaning:** Use a soft, dry cloth to clean the console and controllers. Do not use liquid cleaners or abrasive materials.
- **Battery Care:** Remove batteries from controllers if the console will not be used for an extended period to prevent leakage. Dispose of used batteries responsibly.
- **Storage:** Store the console and accessories in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Moisture:** Keep the console away from water and other liquids.

TROUBLESHOOTING

If you encounter issues with your LEXIBOOK JG7410, try the following solutions:

- **No Power:**
 - Ensure the power adapter is securely connected to both the console and the electrical outlet.
 - Check if the electrical outlet is functioning correctly.
- **No Image on TV:**
 - Verify that the AV cables are correctly connected to both the console and the TV.
 - Ensure your TV is set to the correct input source (e.g., AV1, Video 1).
- **Controller Not Responding:**
 - Check if the batteries in the controller are inserted correctly and are not depleted. Replace if necessary.
 - Ensure the controller is properly connected to the console (if wired) or paired (if wireless).
- **Game Freezes or Glitches:**
 - Turn the console off and then on again.
 - Ensure the console is placed on a stable surface and is not overheating.

SPECIFICATIONS

Feature	Detail
Model Number	JG7410
Dimensions (L x W x H)	45.4 x 31.7 x 6.6 cm (17.87 x 12.48 x 2.6 inches)
Weight	1.06 kg (2.34 lbs)
Recommended Age	12 months and up

Educational Value	Develops motor skills and hand-eye coordination
Number of Games	100
Processor	16-bit with 32-bit graphics
Assembly Required	No
Batteries Included	No

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact your retailer. For technical support, visit the official LEXIBOOK website or contact their customer service department. Keep your proof of purchase for any warranty claims.

© 2023 LEXIBOOK. All rights reserved.