



Manuals.plus /

- › **IKEA** /
- › IKEA KRITTER Children's Chair, White - Instruction Manual

IKEA KRITTER (IKE-401.536.99)

IKEA KRITTER Children's Chair - Instruction Manual

Model: KRITTER (IKE-401.536.99)

1. PRODUCT OVERVIEW

The IKEA KRITTER children's chair is designed for young children, providing a stable and comfortable seating option. It features a durable wooden construction and a white finish, making it suitable for various children's room settings.



An angled view of the white IKEA KRITTER children's chair, showing its overall dimensions. The chair measures 27 cm in width, 29 cm in depth, and 53 cm in height. The seat height is 30 cm.



A close-up view of the backrest of the IKEA KRITTER children's chair, featuring carved animal designs (a dog and a cat) on the central panel.

2. SETUP AND ASSEMBLY

This chair typically requires minimal assembly. Follow these general steps for safe and correct setup:

1. Unpack all components from the packaging and verify that all parts are present.
2. Attach the four legs to the underside of the seat frame. Ensure they are oriented correctly.
3. Secure the backrest to the rear of the seat frame and the two back legs.
4. Insert and tighten all screws and fittings using the provided tools (e.g., Allen key). Do not overtighten to avoid damaging the wood.
5. Ensure the chair is stable and all connections are secure before use.

For detailed, step-by-step assembly instructions, always refer to the specific manual included in your product packaging.

3. OPERATING AND USAGE

The KRITTER children's chair is intended for seating children. Adhere to the following guidelines for safe use:

- Always place the chair on a flat, stable, and level surface to prevent tipping.
- Ensure the child's feet can comfortably reach the floor or a suitable footrest when seated to promote good posture.
- The maximum weight recommendation for this chair is **50 kg (110 lbs)**. Do not exceed this limit.
- Do not allow children to stand on the chair, as this can lead to falls and injury.
- Supervise young children while they are using the chair.
- Avoid placing the chair near open flames, heaters, or other heat sources.

4. MAINTENANCE

Cleaning Instructions

To keep your KRITTER chair clean and in good condition:

- Wipe clean with a damp cloth. For stubborn dirt, use a mild soap solution.
- Dry immediately with a clean, dry cloth to prevent moisture damage.
- Avoid using abrasive cleaners, strong chemicals, or scouring pads, as these can damage the finish.

Care Instructions

Regular care helps prolong the life of your chair:

- Regularly check that all assembly fittings (screws, bolts) are properly tightened. Retighten them when necessary to maintain stability.
- Avoid exposing the chair to direct sunlight for extended periods or to extreme temperature changes, as this can cause the wood to dry out, crack, or fade.
- Protect the chair from excessive moisture.

5. TROUBLESHOOTING

Chair feels wobbly

If the chair feels unstable or wobbly:

- Inspect all screws and fittings. Tighten any loose connections using the appropriate tool.
- Ensure the chair is placed on a completely flat and even surface. Uneven flooring can cause instability.

Surface damage (scratches, chips)

For minor cosmetic damage:

- Small scratches or chips can often be touched up with appropriate furniture paint or a wood repair kit that matches the chair's white finish.

6. SPECIFICATIONS

- **Brand:** IKEA
- **Model Name:** KRITTER
- **Model Number:** IKE-401.536.99
- **Color:** White
- **Material:**
 - Main parts: Solid poplar, Acrylic paint
 - Seat: Hardboard, Acrylic paint
 - Backrest: Impact-resistant polystyrene
- **Dimensions (Depth x Width x Height):** 29 cm x 27 cm x 53 cm (11.4 in x 10.6 in x 20.9 in)
- **Seat Height:** 30 cm (11.8 in)
- **Maximum Weight Recommendation:** 50 kg (110 lbs)
- **Age Range:** Child

7. WARRANTY AND SUPPORT

For information regarding warranty coverage, please refer to the documentation provided with your original purchase or visit the official IKEA website for the most current warranty terms and conditions.

For customer support, spare parts, or further assistance with your IKEA KRITTER children's chair, please contact IKEA

customer service. Contact details can typically be found on the IKEA website (www.ikea.com) or in your purchase receipt.