

## Visual Land ME-107-8GB-BLU

# Prestige 7-7" Android Tablet User Manual

VISUAL LAND

## Introduction

The Visual Land Prestige 7 tablet is designed for versatile mobile computing, featuring the Android 4.1 Jelly Bean operating system and powered by a Cortex A8 1.2GHz processor. This device offers 512MB RAM and 8GB of internal storage, expandable via microSD. It supports Adobe Flash Player 11.1 for enhanced web browsing and includes built-in Wi-Fi for internet access. A front-facing 1.3MP camera enables video calls, and the tablet supports full HD video playback with HDMI output capability.

This manual provides detailed instructions to help you set up, operate, maintain, and troubleshoot your Prestige 7 tablet, ensuring you can fully utilize its features.

## 1. Setup

### 1.1 Package Contents

- Visual Land Prestige 7 Tablet
- USB Cable
- Power Adapter
- User Manual (this document)

### 1.2 Charging the Tablet

Before first use, fully charge the tablet for approximately 4-6 hours. Connect the power adapter to the DC-in port on the tablet and plug it into a wall outlet. The battery indicator on the screen will show charging status.



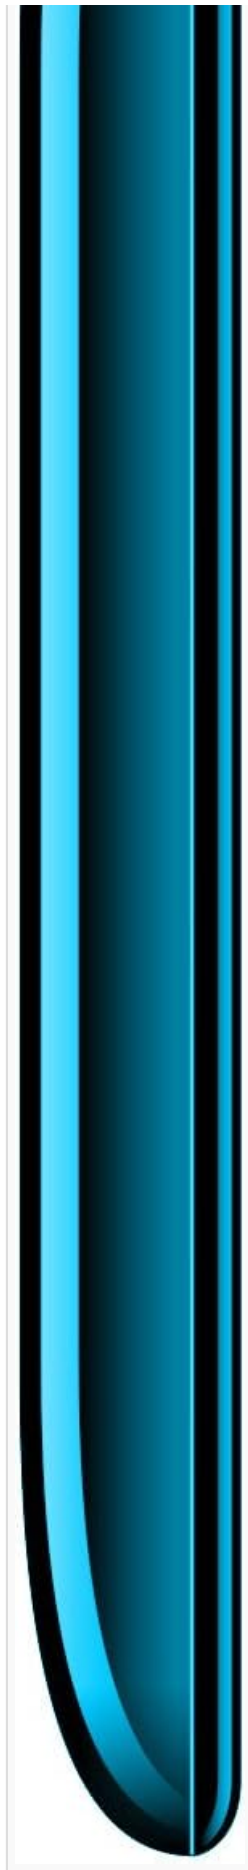


Image: Side view of the Prestige 7 tablet, highlighting the charging port and other connections.

### 1.3 Powering On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the Visual Land logo appears.

- **To Power Off:** Press and hold the Power button until a menu appears. Select "Power off" and confirm.

## 1.4 Connecting to Wi-Fi

1. From the Home screen, tap the "Apps" icon.
2. Tap "Settings".
3. Select "Wi-Fi" and ensure the toggle is set to "On".
4. The tablet will scan for available networks. Select your desired network from the list.
5. If prompted, enter the network password and tap "Connect".

## 2. Operating the Tablet

### 2.1 Navigating the Interface

The Prestige 7 features a 7-inch capacitive 5-point multi-touch screen. Use gestures such as tap, swipe, pinch-to-zoom, and long-press to interact with the tablet.



Image: Front view of the Prestige 7 tablet, showing the main home screen with various application icons.

### 2.2 App Management

- **Downloading Apps:** Access the pre-installed app store (e.g., 1Mobile Market) to browse and download applications.
- **Installing Apps:** Follow on-screen prompts after downloading to install applications.
- **Uninstalling Apps:** Go to Settings > Apps, select the app, and tap "Uninstall".



Image: The tablet screen displaying a selection of pre-installed and downloaded application icons.

## 2.3 Media Playback

The tablet supports various audio and video formats. Use the pre-installed media player applications to enjoy your content.

- **Video Playback:** The tablet supports full HD video and can output to a TV via HDMI (cable not included).
- **Audio Playback:** Connect headphones to the 3.5mm audio jack for private listening.



Image: The tablet screen displaying a media player interface, including playback controls and a search bar.

## 2.4 Using the Camera

The tablet features a front-facing 1.3MP camera for video calls and self-portraits.

1. Tap the "Camera" app icon.
2. Frame your shot using the screen as a viewfinder.
3. Tap the shutter button to capture a photo or start/stop video recording.

## 2.5 Connecting Peripherals

The tablet includes a USB 2.0 port for connecting external devices such as USB drives or keyboards. It also has a microSD card slot for expanding storage up to 32GB.



Image: Rear view of the Prestige 7 tablet, clearly showing the various input/output ports.

## 3. Maintenance

### 3.1 Cleaning the Tablet

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- Do not use abrasive cleaners, alcohol, or solvents.
- Avoid getting moisture into openings.

### 3.2 Software Updates

Periodically check for system updates in Settings > About tablet > System updates to ensure your device has the latest features and security patches.

### 3.3 Battery Care

- Avoid exposing the tablet to extreme temperatures.
- Do not allow the battery to fully discharge frequently.
- Use only the provided charger or a compatible replacement.

## 4. Troubleshooting

### 4.1 Device Not Turning On

- Ensure the tablet is sufficiently charged. Connect it to the charger for at least 30 minutes.
- Press and hold the Power button for 10-15 seconds.

### 4.2 Wi-Fi Connection Issues

- Verify that Wi-Fi is enabled in Settings.
- Restart your Wi-Fi router.
- Forget the network in tablet settings and reconnect.

### 4.3 Apps Crashing or Freezing

- Close and reopen the app.
- Clear the app's cache and data in Settings > Apps.
- Ensure sufficient free storage space.

### 4.4 Slow Performance

- Close unnecessary background applications.
- Clear cached data regularly (Settings > Storage).
- Consider performing a factory reset as a last resort (this will erase all data).

## 5. Specifications

Feature	Specification
Model Name	Prestige 7
Item Model Number	ME-107-8GB-BLU
Operating System	Android 4.1 Jelly Bean
Processor	1.2 GHz ARM Cortex-A8
RAM	512 MB DDR3
Internal Storage	8 GB
Screen Size	7 Inches
Screen Resolution	800 x 480 Pixels
Wireless Type	802.11bgn (Wi-Fi)
USB Ports	1 (USB 2.0)
Front Camera	1.3 MP
Dimensions (LxWxH)	7.5 x 0.4 x 4.7 inches
Item Weight	10.6 ounces
Color	Blue

## 6. Warranty and Support

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Visual Land website. Keep your proof of purchase for warranty claims.

© 2024 Visual Land. All rights reserved.