

**Uniden D1364**

# Uniden DECT 6.0 Cordless Phone D1364 User Manual

Model: D1364

[Introduction](#)   [Package Contents](#)   [Setup](#)   [Operating Specifications](#)   [Maintenance](#)   [Troubleshooting](#)

## 1. INTRODUCTION

This manual provides instructions for the Uniden DECT 6.0 Cordless Phone, model D1364. This phone features DECT 6.0 digital technology for enhanced clarity, security, and range. It includes Caller ID, Call Waiting, a phonebook, and an Eco-Mode for power management.

For optimal performance and to prevent damage, please read these instructions thoroughly before using your new phone.





**Figure 1:** Uniden DECT 6.0 Cordless Phone D1364. This image shows the white cordless handset resting in its charging base. The handset features a green backlit LCD display showing time, date, and a sample caller ID entry. The keypad has large, green-backlit buttons for dialing and function keys like CLR, MENU, SEL, FLASH/TALK, END, REDIAL/PAUSE, MUTE, and a message indicator.

## 2. PACKAGE CONTENTS

Verify that your package contains the following items:

- One (1) Cordless Handset (D1364)
- One (1) Handset Charging Base
- One (1) AC Adapter for the charging base
- One (1) Telephone Line Cord
- One (1) Rechargeable Battery Pack (Product Specific, included)

- This User Manual

## 3. SETUP

---

### 3.1 Battery Installation

1. Locate the battery compartment cover on the back of the handset.
2. Slide the cover down and lift it off.
3. Connect the battery pack connector to the jack inside the compartment, ensuring correct polarity.
4. Place the battery pack into the compartment.
5. Replace the battery compartment cover, sliding it up until it clicks into place.

### 3.2 Base Unit Connection

1. Plug the small end of the AC adapter into the DC IN jack on the back of the charging base.
2. Plug the large end of the AC adapter into a standard electrical outlet.
3. Plug one end of the telephone line cord into the TEL LINE jack on the back of the charging base.
4. Plug the other end of the telephone line cord into a telephone wall jack.

### 3.3 Initial Battery Charge

Place the handset on the charging base. The handset display will indicate charging. Allow the handset to charge for at least **15-20 hours** before initial use to ensure full battery capacity.

### 3.4 Wall Mounting (Optional)

The charging base includes a built-in wall mount feature. Consult the diagrams in the full manual for detailed wall mounting instructions, typically involving two screws spaced appropriately on the wall.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Making and Receiving Calls

- **To Make a Call:** Press **FLASH/TALK**, then dial the number. Alternatively, dial the number first, then press **FLASH/TALK**.
- **To End a Call:** Press **END** or place the handset back on the charging base.
- **To Answer a Call:** When the phone rings, press **FLASH/TALK**.

### 4.2 Adjusting Volume

During a call, use the **UP/DOWN arrow keys** on the navigation pad to adjust the earpiece volume.

### 4.3 Phonebook

The phonebook can store up to 30 names and numbers.

- **To Add an Entry:** Press **MENU**, navigate to "Phonebook," select "Add Entry," and follow the on-screen prompts to enter the name and number.
- **To Dial from Phonebook:** Press the **UP/DOWN arrow keys** to browse the phonebook, then press **FLASH/TALK** to dial the selected entry.

### 4.4 Caller ID and Call Waiting

This phone supports Caller ID and Call Waiting features (subscription required from your telephone service

provider).

- The Caller ID list stores up to 30 incoming calls. Press the **ID** button (down arrow on navigation pad) to review the Caller ID list.
- During a call, if you hear a Call Waiting tone, press **FLASH** to switch to the incoming call.

#### 4.5 Redial

The phone stores the last 5 numbers dialed.

- Press **REDIAL/PAUSE** to view the redial list.
- Use the **UP/DOWN arrow keys** to select a number, then press **FLASH/TALK** to dial.

#### 4.6 Mute Function

During a call, press **MUTE** to temporarily disable your microphone. The other party will not hear you. Press **MUTE** again to resume the conversation.

#### 4.7 Handset Locator

If you misplace the handset, press the **FIND** button on the base unit. The handset will beep, allowing you to locate it.

#### 4.8 Eco-Mode

The phone features Eco-Mode, which automatically manages power consumption to extend battery life. This mode is active by default and does not require manual activation.

### 5. MAINTENANCE

#### 5.1 Cleaning

Wipe the phone and base unit with a soft, damp cloth. Do not use cleaning sprays or abrasive cleaners, as they may damage the finish or electrical components.

#### 5.2 Battery Care

- Always use the specified rechargeable battery pack.
- If the phone will not be used for an extended period, remove the battery pack to prevent leakage.
- Dispose of old batteries according to local regulations. Do not dispose of them in fire.

#### 5.3 Environmental Considerations

Avoid placing the phone in direct sunlight, near heat sources, or in areas with high humidity. Ensure proper ventilation around the base unit.

### 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No dial tone	Telephone line cord is disconnected.	Ensure the telephone line cord is securely plugged into the base and the wall jack.

Problem	Possible Cause	Solution
Handset does not charge	AC adapter is disconnected or handset is not seated correctly.	Verify the AC adapter is plugged into the base and a working outlet. Re-seat the handset firmly on the charging base.
Poor sound quality/static	Interference from other electronic devices or distance from base.	Move the handset closer to the base. Relocate the base away from other electronic devices (Wi-Fi routers, microwaves).
Caller ID not displaying	No subscription to Caller ID service.	Contact your telephone service provider to subscribe to Caller ID service.
Handset lost connection to base	Handset out of range or power interruption.	Move the handset closer to the base. Check power connections for the base.

## 7. SPECIFICATIONS

Feature	Detail
Model	D1364
Technology	DECT 6.0 Digital
Color	White
Caller ID Memory	30 names/numbers
Phonebook Capacity	30 names/numbers
Redial Memory	Last 5 numbers
Display	Green Backlit LCD
Keypad	Green Backlit
Battery Type	Rechargeable (Product Specific, included)
Talk Time (approx.)	Up to 7 hours
Standby Time (approx.)	Up to 6 days
Power Source	AC Adapter (Base), Battery Powered (Handset)
Dimensions (L x W x H)	5.12 x 3.62 x 7.68 inches
Item Weight	3.76 pounds
Energy Efficiency	Eco-Mode, Energy Star compliant

## 8. WARRANTY AND SUPPORT

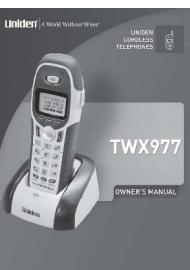
For warranty information and technical support, please refer to the warranty card included with your product or visit the official Uniden website. You may also contact Uniden customer service directly.

**Uniden America Customer Service:** 1-800-297-1023

Note: Product specifications and features are subject to change without notice.

© 2023 Uniden. All rights reserved.

## Related Documents - D1364

	<p><a href="#">Uniden TWX977 Accessory Waterproof Cordless Phone Owner's Manual</a></p> <p>This owner's manual provides comprehensive guidance for the Uniden TWX977 accessory waterproof cordless handset, covering setup, features, compatibility with Uniden base systems, operation, maintenance, and warranty information.</p>
	<p><a href="#">Uniden AS7401 Speakerphone User Manual - Features, Settings, and Troubleshooting</a></p> <p>Comprehensive user manual for the Uniden AS7401 speakerphone. Learn about features, setup, settings, memory functions, troubleshooting, and safety instructions for your Uniden phone.</p>
	<p><a href="#">Uniden DSS 3455 2.4GHz Cordless Phone with Answering Machine - Features &amp; Specs</a></p> <p>Explore the Uniden DSS 3455, a 2.4GHz Digital Spread Spectrum cordless phone offering long range, clear sound, an integrated answering machine, and advanced caller ID features. Learn about its specifications and benefits.</p>
	<p><a href="#">Uniden TRU9488 Cordless Phone Owner's Manual</a></p> <p>Comprehensive owner's manual for the Uniden TRU9488 cordless phone with digital answering system, covering setup, features, troubleshooting, and maintenance.</p>
	<p><a href="#">Uniden XDECT 7055 Series Owner's Manual: Installation, Features, and Troubleshooting Guide</a></p> <p>Comprehensive owner's manual for the Uniden XDECT 7055 series cordless phone. Learn about installation, phone features, answering system setup, troubleshooting common issues, safety guidelines, and specifications for models including XDECT 7055 and accessory XDECT 7005.</p>
	<p><a href="#">Uniden DECT1580 Series Cordless Telephone User Manual</a></p> <p>This user manual provides comprehensive guidance for the Uniden DECT1580 Series cordless telephone, covering installation, setup, features, answering system, troubleshooting, and warranty information for optimal use.</p>