

Medion MD 82853

Medion MD 82853 MP3 / CD Stereo Radiorecorder User Manual

Model: MD 82853

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Medion MD 82853 MP3 / CD Stereo Radiorecorder. Please read this manual thoroughly before using the device to ensure proper function and safety. Keep this manual for future reference.

PRODUCT OVERVIEW



Figure 1: Front view of the Medion MD 82853 MP3 / CD Stereo Radiorecorder. The device features a silver-colored casing with black speaker grilles on both sides. A blue backlit LCD display is centrally located, showing track information. Above the display are various control buttons. The top features a CD compartment and a foldable carrying handle with an extendable antenna. Below the display, there is a cassette deck and a USB/SD card slot. The Medion logo is visible on the lower front panel.

Key Features:

- MP3 and CD audio playback (CD-DA)
- Stereo Radiorecorder with digital frequency display
- Integrated Cassette Deck with Auto Stop System
- USB and SD/MMC Card Reader for digital media playback
- Portable design with carrying handle and telescopic antenna
- Audio output mode: Stereo
- Power output: 15 watts

SETUP

1. Power Connection

Connect the provided AC power cord to the AC IN socket on the back of the unit and then to a standard wall outlet. Ensure the voltage matches your local power supply.

2. Antenna Setup

For optimal FM radio reception, fully extend the telescopic antenna. For AM reception, the unit has a built-in ferrite bar antenna; rotate the unit for best reception.

3. Battery Installation (Optional)

For portable use, open the battery compartment cover on the bottom of the unit. Insert the required number of C-size batteries (not included), ensuring correct polarity (+/-). Close the compartment cover securely.

OPERATING INSTRUCTIONS

1. General Controls

- **POWER Button:** Press to turn the unit ON or OFF.
- **FUNCTION/MODE Button:** Press to switch between CD/MP3, Radio (FM/AM), USB, SD, and Cassette modes.
- **VOLUME Knob:** Rotate clockwise to increase volume, counter-clockwise to decrease.
- **TUNING Knob:** Rotate to tune into radio stations in Radio mode.

2. Radio Operation

1. Press the FUNCTION/MODE button to select "RADIO" mode.
2. Select the desired band (FM or AM) using the BAND switch (if available, or repeatedly pressing MODE).
3. Rotate the TUNING knob to search for a station. The frequency will be displayed on the LCD.

3. CD/MP3 Playback

1. Open the CD compartment cover.
2. Place a CD or MP3 CD onto the spindle with the label side facing up.
3. Close the CD compartment cover securely.
4. Press the FUNCTION/MODE button to select "CD" mode. The unit will read the disc and begin playback automatically.
5. Use the **PLAY/PAUSE**, **STOP**, **SKIP FORWARD**, and **SKIP BACKWARD** buttons to control playback.

4. Cassette Playback/Recording

1. Press the STOP/EJECT button to open the cassette deck door.
2. Insert a cassette tape with the open edge facing upwards.
3. Close the cassette deck door.
4. Press the FUNCTION/MODE button to select "TAPE" mode.
5. Use the **PLAY**, **STOP/EJECT**, **FAST FORWARD**, and **REWIND** buttons for playback.
6. To record from Radio or CD, press the **RECORD** button while the desired source is playing. Ensure a blank cassette is inserted.

5. USB/SD Card Playback

1. Insert a USB flash drive into the USB port or an SD/MMC card into the SD card slot.
2. Press the FUNCTION/MODE button to select "USB" or "SD" mode.
3. The unit will automatically detect and begin playing MP3 files.
4. Use the playback control buttons (PLAY/PAUSE, STOP, SKIP) as with CD playback.

MAINTENANCE

1. Cleaning the Unit

- Always disconnect the power cord before cleaning.
- Use a soft, dry cloth to clean the exterior of the unit.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

2. CD Lens Care

- If the CD lens becomes dirty, use a commercially available CD lens cleaner.
- Avoid touching the lens directly.

3. Cassette Deck Care

- Periodically clean the tape heads, capstan, and pinch roller using a cotton swab lightly moistened with isopropyl alcohol.
- Demagnetize the tape heads regularly to prevent sound degradation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; Batteries depleted or incorrectly inserted.	Check power cord connection; Replace batteries or ensure correct polarity.
No sound	Volume too low; Incorrect function mode selected.	Increase volume; Select the correct function mode (CD, Radio, USB, SD, TAPE).
CD/MP3 skipping or not playing	Disc dirty or scratched; CD compartment not closed properly; Incorrect disc format.	Clean disc; Ensure compartment is closed; Use supported CD-DA or MP3 CD.
Poor radio reception	Antenna not extended; Unit position.	Fully extend FM antenna; Rotate unit for AM reception; Relocate unit.
Cassette tape not playing	Tape incorrectly inserted; Tape mechanism dirty.	Ensure tape is inserted correctly; Clean tape heads and pinch roller.

SPECIFICATIONS

- **Model:** MD 82853
- **Brand:** Medion
- **Audio Output Mode:** Stereo
- **Number of Speakers:** 2
- **Supported Audio Formats:** CD audio (CD-DA), MP3
- **Supported Standards:** CD, MP3
- **Wattage:** 15 watts
- **Power Source:** Electric with cord
- **Connectivity:** USB
- **Compatible Devices:** Smartphone, Tablet, MP3-player
- **Bluetooth Technology:** Not supported

SUPPORT AND WARRANTY

For technical support or warranty inquiries, please refer to the contact information provided with your purchase documentation or visit the official Medion website. Keep your proof of purchase for warranty claims.

© 2023 Medion. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question