

[Manuals.plus](#) /

› [Fujifilm](#) /

› Fujifilm Finepix S2995 Digital Camera User Manual

Fujifilm FINEPIX S2995

Fujifilm Finepix S2995 Digital Camera User Manual

Model: FINEPIX S2995

INTRODUCTION

This manual provides essential information for the safe and effective operation of your Fujifilm Finepix S2995 Digital Camera. Please read this manual thoroughly before using the camera and keep it for future reference. The Fujifilm Finepix S2995 is a bridge camera featuring an 18x optical zoom lens, a 14 MP CCD sensor, and HD video recording capabilities. It is designed for versatile photography in various conditions.





Figure 1: Fujifilm Finepix S2995 Digital Camera, top-down view with strap attached.

SETUP

1. Battery Installation

The Fujifilm Finepix S2995 uses 4 Alkaline batteries. Ensure correct polarity when inserting batteries.

1. Locate the battery compartment on the bottom of the camera.
2. Slide the battery compartment latch to open the cover.
3. Insert four AA-size Alkaline batteries, matching the positive (+) and negative (-) terminals as indicated inside the compartment.
4. Close the battery compartment cover securely until it clicks into place.





Figure 2: Side view of the camera, indicating the location of the battery compartment.

2. Memory Card Insertion

The camera supports SD and SDHC memory cards.

1. Open the memory card slot cover, usually located near the battery compartment.
2. Insert the SD or SDHC memory card with the label facing the front of the camera until it clicks into place.
3. Close the memory card slot cover securely.

3. Attaching the Neck Strap

Attach the provided neck strap to prevent accidental drops.

1. Thread the strap through the strap eyelet on the camera body.
2. Secure the strap by passing it through the buckle on the strap itself.

OPERATING THE CAMERA

1. Powering On/Off

To power on the camera, slide the ON/OFF switch located on the top panel. To power off, slide it again.





Figure 3: Top view of the camera, highlighting the ON/OFF switch and mode dial.

2. Basic Photography

The camera offers various modes for different shooting conditions.

- **Mode Dial:** Rotate the mode dial (Figure 3) to select your desired shooting mode (e.g., Auto, Program, Shutter Priority, Aperture Priority, Manual, Scene modes).
- **Zoom:** Use the zoom lever around the shutter button to adjust the 18x optical zoom.
- **Shutter Button:** Press the shutter button halfway to focus, then press fully to take a picture.

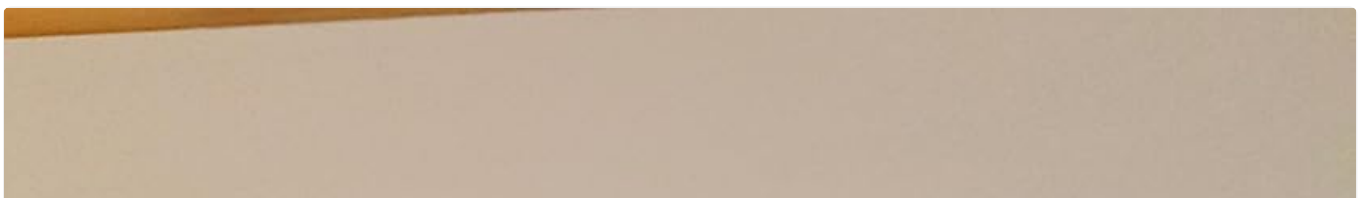






Figure 4: Rear view of the camera, displaying the LCD screen and various control buttons for navigation and settings.

3. Video Recording

The Finepix S2995 supports HD video recording (320 x 240, 640 x 480 pixels).

1. Set the mode dial to the video recording mode (indicated by a film camera icon).
2. Press the dedicated video recording button to start and stop recording.

4. Playback and Review

To view your photos and videos, press the playback button (Figure 4).

- Use the directional pad to navigate through images.
- Press the MENU/OK button to access playback options.

MAINTENANCE

1. Cleaning the Camera

- **Camera Body:** Wipe with a soft, dry cloth. For stubborn dirt, use a cloth lightly dampened with water.
- **Lens:** Use a lens brush or a blower to remove dust. For smudges, use a lens cleaning cloth and lens cleaning fluid. Avoid touching the lens surface directly.
- **LCD Screen:** Gently wipe with a soft, dry cloth.





Figure 5: The camera with its lens cap attached, protecting the lens from dust and scratches.

2. Storage

When not in use, store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for extended periods.

TROUBLESHOOTING

Problem	Solution
Camera does not power on.	Check if batteries are inserted correctly and fully charged. Ensure the battery compartment is securely closed.
"Memory Card Error" message.	Ensure the memory card is inserted correctly. Try reformatting the card (this will erase all data). If the problem persists, try a different memory card.

Problem	Solution
Images are blurry.	Check focus settings. Ensure sufficient lighting. Hold the camera steady or use a tripod. Clean the lens.
Flash does not fire.	Check flash mode settings. Ensure the flash is not obstructed. Allow time for the flash to recharge.

SPECIFICATIONS

Feature	Detail
Model Name	Fujifilm Finepix S2995
Sensor Type	1/2.3" CCD
Effective Pixels	14 MP
Optical Zoom	18x
Focal Length (35mm equiv.)	28-504mm
Digital Zoom	6.7x
Display	3" LCD (7.62 cm)
Viewfinder Type	Electrical (0.2")
ISO Sensitivity	64 - 6400
Video Recording	Yes (320x240, 640x480 pixels)
Compatible Memory Cards	SD, SDHC
Power Source	4 x AA Alkaline batteries
Connectivity	USB 2.0, HDMI (Mini)
Dimensions (W x H x D)	11.8 x 8.09 x 9.98 cm
Weight (with battery)	540 g
Water Resistance Level	Water Resistant

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Fujifilm website. Keep your proof of purchase for warranty claims.

Online Resources: For additional support, FAQs, and software updates, please visit the Fujifilm support page.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question