

[Manuals.plus](#) /

› [Atlanta](#) /

› Atlanta 1380-4 Analog Alarm Clock User Manual

## Atlanta 1380-4

# Atlanta 1380-4 Analog Alarm Clock User Manual

Model: 1380-4 | Brand: Atlanta

### PRODUCT OVERVIEW

The Atlanta 1380-4 is a compact, analog alarm clock designed for tabletop use. It features a clear, easy-to-read dial with large numbers and luminous hands for visibility in low light. Powered by a quartz movement, it provides reliable timekeeping and an alarm function.



A front view of the Atlanta 1380-4 analog alarm clock. It features a white square dial with large black numbers from 1 to 12. The clock has black hour and minute hands with luminous green tips, a thin black second hand, and a light blue alarm hand. The brand name 'Atlanta' is printed below the 12 o'clock position, and 'QUARTZ ALARM' is printed above the 6 o'clock position. The clock casing is a dark grey plastic, with a silver-colored snooze/light button visible on the top.

## SETUP

### Battery Installation

The clock requires one AA battery (not included).

1. Locate the battery compartment cover on the back of the clock.
2. Remove the cover by sliding or lifting it.
3. Insert one AA battery, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover securely.

### Setting the Time

1. Locate the "TIME SET" knob on the back of the clock.

2. Rotate the knob clockwise or counter-clockwise until the hour and minute hands display the correct time.

## OPERATION

### Setting the Alarm

1. Locate the "ALARM SET" knob on the back of the clock.
2. Rotate this knob to move the alarm hand (usually a thinner, distinct hand) to your desired alarm time.
3. Ensure the alarm ON/OFF switch (often a small slider or button) on the side or back of the clock is in the "ON" position.

### Snooze/Light Function

The large button on top of the clock serves as both the snooze and light button.

1. When the alarm sounds, press the top button to activate the snooze function. The alarm will temporarily stop and sound again after approximately 5-10 minutes.
2. Press the top button at any time to illuminate the dial for a few seconds, allowing you to read the time in the dark.

### Turning Off the Alarm

To permanently turn off the alarm, slide the alarm ON/OFF switch to the "OFF" position.

## MAINTENANCE

### Cleaning

Wipe the clock's exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the plastic casing.

### Battery Replacement

Replace the battery when the clock's timekeeping becomes inaccurate or the alarm weakens. Follow the battery installation steps outlined in the "Setup" section.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not running or running slowly	Battery is dead or incorrectly installed.	Replace the battery, ensuring correct polarity.
Alarm not sounding	Alarm is not set, or alarm switch is OFF.	Set the alarm time correctly and ensure the alarm ON/OFF switch is in the "ON" position.
Alarm sounds at wrong time	Alarm hand is not set correctly.	Re-adjust the alarm hand using the "ALARM SET" knob.
Light function not working	Battery is low or dead.	Replace the battery.

## SPECIFICATIONS

Feature	Detail
Brand	Atlanta
Model Number	1380-4
Color	White
Display Type	Analog
Movement	Quartz
Material	Plastic (Casing, Frame)
Item Weight	59 g
Dimensions (approx.)	8.4 x 7.8 x 3.8 cm (Package dimensions)
Power Source	Battery (AA, not included)
Mounting Type	Tabletop

## WARRANTY AND SUPPORT

---

For information regarding warranty coverage and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. Specific warranty terms may vary by region and retailer.