

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Fysic](#) /

› [Fysic FX-6000 Big Button DECT Phone User Manual](#)

## Fysic FX-6000

# Fysic FX-6000 Big Button DECT Phone User Manual

Model: FX-6000

## 1. INTRODUCTION

Thank you for purchasing the Fysic FX-6000 Big Button DECT Phone. This manual will guide you through the setup, operation, and maintenance of your new cordless telephone. Please read these instructions carefully before using the phone to ensure proper functionality and safety. Keep this manual for future reference.

## 2. IMPORTANT SAFETY INFORMATION

- Use only the supplied power adapter and batteries.
- Do not expose the phone to water or excessive humidity.
- Avoid placing the phone near heat sources or direct sunlight.
- Do not attempt to open or repair the phone yourself. Refer all servicing to qualified personnel.
- Dispose of batteries responsibly according to local regulations.

## 3. PACKAGE CONTENTS

Please check that all items are present in your package:

- Fysic FX-6000 Handset
- Base Station
- Power Adapter for Base Station
- Telephone Line Cord
- 2 x AAA NiMH Rechargeable Batteries
- User Manual

## 4. PRODUCT OVERVIEW

The Fysic FX-6000 features large buttons and a clear display for ease of use.



**Figure 4.1:** Front view of the Fysic FX-6000 handset in its charging base, highlighting the large, easy-to-read buttons and the clear, backlit display.



**Figure 4.2:** Side view of the Fysic FX-6000 handset docked in its base station, showing the ergonomic design and side volume buttons.



**Figure 4.3:** Detailed close-up of the Fysic FX-6000 phone's keypad, emphasizing the large, clearly labeled buttons for easy dialing.



Figure 4.4: Close-up view of the Fysic FX-6000 phone's backlit display, showing clear icons for battery status, signal strength, and call information.

## Handset Layout

- **Display:** 1.8-inch backlit screen for caller ID, menu, and status.
- **Navigation Keys:** For menu navigation and volume adjustment.
- **Dial Pad:** Large, easy-to-read numeric keys (0-9, \*, #).
- **Call/End Buttons:** Green button to answer/make calls, Red button to end calls.
- **Memory Keys (M1, M2, M3):** For speed dialing frequently used numbers.
- **Speakerphone Button:** To activate hands-free mode.

## Base Station Layout

- **Charging Cradle:** For charging the handset.
- **Paging Button:** To locate a misplaced handset.
- **Power Socket:** For connecting the power adapter.
- **Telephone Line Socket:** For connecting to the telephone line.

## 5. SETUP

---

### 5.1 Battery Installation

1. Open the battery compartment cover on the back of the handset.
2. Insert the two supplied AAA NiMH rechargeable batteries, observing the correct polarity (+ and -).
3. Close the battery compartment cover securely.

### 5.2 Connecting the Base Station

1. Connect one end of the telephone line cord to the telephone line socket on the base station.
2. Connect the other end of the telephone line cord to your telephone wall socket.
3. Connect the power adapter to the power socket on the base station.
4. Plug the power adapter into a suitable electrical outlet (220-240V).

### 5.3 Initial Charging and Handset Registration

Place the handset on the base station. The handset will automatically begin charging. For optimal battery performance, allow the handset to charge for at least 16 hours before its first use. The handset is pre-registered to the base station from the factory. If for any reason the handset loses its registration, refer to the troubleshooting section for re-registration steps.

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Making a Call

- **Pre-dialing:** Enter the phone number using the dial pad, then press the **Green Call** button.
- **Direct Dialing:** Press the **Green Call** button, then enter the phone number.
- **Using Memory Keys (M1, M2, M3):** Press and hold the desired memory key (M1, M2, or M3) to dial the stored number.

### 6.2 Receiving a Call

When the phone rings, press the **Green Call** button to answer. The display will show the caller's number if Caller ID service is active.

### 6.3 Ending a Call

Press the **Red End Call** button or place the handset back on the base station.

### 6.4 Adjusting Volume

During a call, use the volume up/down buttons on the side of the handset to adjust the earpiece volume. The ringtone volume can be adjusted via the phone's menu settings.

### 6.5 Hands-Free Operation

During a call, press the **Speakerphone** button to switch to hands-free mode. Press it again to return to earpiece mode.

### 6.6 Phonebook

The phonebook allows you to store frequently called numbers. Refer to the on-screen menu for options to add, edit, or delete contacts.

### 6.7 Redial

Press the **Redial** button (often integrated with the call log or a dedicated button) to view and redial the last dialed

numbers.

## 6.8 Mute Function

During a call, press the **Mute** button to temporarily disable your microphone. The other party will not hear you. Press it again to unmute.

## 7. MAINTENANCE

---

### 7.1 Cleaning

Wipe the phone and base station with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure the phone is disconnected from power before cleaning.

### 7.2 Battery Care

- Always use the supplied rechargeable NiMH batteries.
- If the phone will not be used for an extended period, remove the batteries to prevent leakage.
- Replace batteries when their performance significantly degrades.

## 8. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
No dial tone	Telephone line not connected; Power adapter not connected; Handset out of range or not registered.	Check all cable connections; Ensure base station is powered; Move handset closer to base; Re-register handset (see manual for specific steps).
Handset not charging	Handset not properly seated in cradle; Dirty charging contacts; Faulty batteries.	Ensure handset is correctly placed; Clean charging contacts on handset and base with a dry cloth; Replace batteries if necessary.
Poor call quality / Static	Handset too far from base; Interference from other electronic devices.	Move closer to the base station; Move base station away from other electronic devices (Wi-Fi routers, microwaves).
Display is blank	Batteries are depleted or not inserted correctly.	Charge handset for at least 16 hours; Check battery polarity.

## 9. TECHNICAL SPECIFICATIONS

---

- **Model:** FX-6000
- **Brand:** Fysic
- **Color:** Black
- **Phone Type:** Cordless DECT Phone
- **Display:** 1.8-inch Backlit LCD
- **Batteries:** 2 x AAA NiMH Rechargeable (1.2V, 500 mAh)
- **Base Power Supply:** 6 VDC, 300 mA
- **Mains Power:** 220-240V
- **Talk Time:** Up to 10 hours

- **Standby Time:** Up to 100 hours
- **Indoor Range:** Up to 50 meters
- **Outdoor Range:** Up to 300 meters
- **Dimensions (L x W x H):** Approximately 8 x 20 x 17 cm (Handset in base)
- **Weight:** Approximately 534 grams
- **Special Features:** Large buttons, Hearing aid compatible, Adjustable ringtone/call volume, Mute function, Hands-free operation, GAP compatible.

## 10. WARRANTY AND SUPPORT

---

Fysic products are designed and manufactured to the highest quality standards. For information regarding warranty terms and conditions, please refer to the warranty card included with your product or visit the official Fysic website. For technical support or service inquiries, please contact Fysic customer service through their official channels. Keep your purchase receipt as proof of purchase.

© 2024 Fysic. All rights reserved.