

[Manuals.plus](#) /

› [Moser](#) /

› Moser 1230-5400 Variable Attachment Comb User Manual

Moser 4015110012160

Moser / Ermila / Wahl 1230-5400 Variable Plastic Attachment Comb

User Instruction Manual

INTRODUCTION

This manual provides comprehensive instructions for the proper use, maintenance, and care of your Moser / Ermila / Wahl 1230-5400 Variable Plastic Attachment Comb. This accessory is designed to be used with compatible hair clippers to achieve various hair cutting lengths. Please read this manual thoroughly before first use to ensure optimal performance and longevity of the product.

PRODUCT OVERVIEW



The Moser 1230-5400 variable plastic attachment comb is a black, multi-pronged accessory designed to clip onto compatible hair clippers. It features a sliding mechanism that allows for easy adjustment of cutting lengths, typically ranging from 4mm to 18mm. The comb is constructed from durable plastic and is specifically engineered to fit various

Moser, Ermila, and Wahl clipper models, ensuring a secure and precise fit for consistent cutting results.

The attachment comb features a robust design with clearly marked length settings. Its primary function is to guide the hair into the clipper blades at a uniform distance, enabling precise and even haircuts at desired lengths.

SETUP

1. **Compatibility Check:** Ensure your hair clipper is one of the compatible models: Type 1852, 1853, 1234, 1233, 1230, 1400, or 1170.
2. **Clean Clipper Blades:** Before attaching the comb, ensure the clipper blades are clean and free of hair or debris. Refer to your clipper's manual for cleaning instructions.
3. **Attach the Comb:** Align the attachment comb with the clipper head. Gently slide the comb onto the clipper blades until it clicks securely into place. Ensure it is firmly seated and does not wobble.
4. **Verify Attachment:** Lightly tug on the comb to confirm it is securely attached to the clipper. It should not detach easily.

Note: Never force the attachment comb onto the clipper. If it does not fit easily, re-check compatibility and alignment.

OPERATING INSTRUCTIONS

1. **Select Cutting Length:** Locate the adjustment mechanism on the attachment comb. Slide the mechanism to select your desired cutting length, typically indicated in millimeters (e.g., 4mm, 9mm, 14mm, 18mm). Ensure the setting locks into place.
2. **Prepare Hair:** For best results, ensure the hair is clean, dry, and detangled before cutting.
3. **Begin Cutting:** Turn on your hair clipper. Hold the clipper with the attachment comb flat against the scalp or desired area. Move the clipper slowly and steadily against the direction of hair growth.
4. **Overlap Strokes:** Overlap each stroke slightly to ensure an even cut and avoid missed spots.
5. **Check Progress:** Periodically turn off the clipper and comb through the hair to check for evenness and desired length.
6. **Change Length (if needed):** If you need to change the cutting length during the process, turn off the clipper, adjust the comb setting, and then resume cutting.

Caution: Always ensure the clipper is turned off before adjusting or removing the attachment comb to prevent accidental injury or damage.

MAINTENANCE

- **Cleaning After Each Use:**
 - Turn off and unplug the clipper.
 - Carefully remove the attachment comb from the clipper.
 - Use a small brush (often supplied with clippers) to remove any trapped hair from the comb and the clipper blades.
 - The plastic attachment comb can be rinsed under cool running water. Ensure it is completely dry before reattaching or storing.
- **Storage:** Store the attachment comb in a clean, dry place, away from direct sunlight and extreme temperatures. Keeping it with your clipper is recommended to prevent loss.
- **Inspection:** Periodically inspect the comb for any signs of wear, cracks, or damage. A damaged comb can affect cutting performance and potentially cause injury. Replace if damaged.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Comb does not attach securely.	Incorrect alignment or incompatible clipper model.	Ensure the comb is correctly aligned with the clipper head. Verify your clipper model is listed as compatible. Do not force.
Uneven cutting.	Comb not fully seated, hair not properly prepared, or incorrect cutting technique.	Ensure the comb is securely attached and the length setting is locked. Comb hair thoroughly before cutting. Use slow, overlapping strokes.
Comb feels loose during use.	Improper attachment or comb damage.	Re-attach the comb, ensuring it clicks into place. Inspect the comb for any cracks or broken clips; replace if damaged.

SPECIFICATIONS

- **Product Type:** Variable Plastic Attachment Comb
- **Model Number:** 1230-5400 (Manufacturer's Internal Model: 4015110012160)
- **Material:** Durable Plastic
- **Adjustable Cutting Lengths:** 4mm - 18mm (specific increments may vary by model)
- **Compatible Clipper Types:** Moser, Ermila, Wahl Type 1852, 1853, 1234, 1233, 1230, 1400, 1170
- **Product Dimensions:** 3.94 x 3.15 x 1.97 inches
- **Product Weight:** 3.52 ounces
- **Manufacturer:** Moser

WARRANTY AND SUPPORT

For specific warranty information regarding your Moser / Ermila / Wahl 1230-5400 Variable Plastic Attachment Comb, please refer to the documentation provided with your original hair clipper or contact the manufacturer directly. Warranty terms and conditions may vary.

If you require further assistance or have questions not covered in this manual, please contact Moser customer support through their official website or the retailer from whom you purchased the product. Always provide the product model number (1230-5400 or 4015110012160) when seeking support.

© 2023 Moser. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question