

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Liebherr](#) /

› [Liebherr SKBes 4210-24 Refrigerator User Manual](#)

## Liebherr SKBES4210-24

# Liebherr SKBes 4210-24 Refrigerator

## USER MANUAL

### 1. Introduction & Safety Information

Thank you for choosing a Liebherr appliance. This user manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new Liebherr SKBes 4210-24 freestanding refrigerator. Please read this manual thoroughly before using the appliance and keep it for future reference.

#### Important Safety Instructions

- Ensure the appliance is disconnected from the power supply before cleaning or performing any maintenance.
- Do not damage the refrigerant circuit. If damage occurs, avoid open flames and ventilate the room thoroughly.
- This appliance is intended for household use only.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Keep ventilation openings in the appliance enclosure or in the built-in structure clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Children should be supervised to ensure that they do not play with the appliance.



Figure 1: Overview of the Liebherr SKBes 4210-24 Refrigerator with its door open, displaying the spacious interior, adjustable glass shelves, and BioFresh drawers filled with various food items.

## 2. Setup and Installation

## Unpacking

Carefully remove all packaging materials. Dispose of packaging responsibly. Check the appliance for any transport damage. If damaged, do not connect it to the power supply and contact your supplier immediately.

## Placement

- Place the appliance on a firm, level floor. Use the adjustable feet to level the appliance if necessary.
- Avoid direct sunlight and proximity to heat sources such as ovens, radiators, or dishwashers.
- Ensure adequate ventilation. Maintain a minimum distance from walls as specified in the installation instructions (usually 5-10 cm at the back and sides).

## Electrical Connection

Connect the appliance to a properly installed earthed socket. The voltage and frequency must correspond to the values on the rating plate (located inside the appliance). Do not use extension cords or multiple sockets.

## Initial Cleaning

Before first use, clean the interior and all accessories with lukewarm water and a mild detergent. Wipe dry thoroughly.

## Door Reversal

The door hinges can be reversed if required. This procedure is detailed in a separate installation guide provided with your appliance or available on the Liebherr website. It is recommended to have this performed by a qualified technician.

## 3. Operating Your Refrigerator

---

### Temperature Control

The temperature is set using the electronic control panel located at the top of the interior. Press the temperature adjustment buttons to increase or decrease the desired temperature. The recommended temperature for the refrigerator compartment is +5°C (41°F).

### Internal Features

- **Glass Shelves:** The robust glass shelves can be adjusted to various heights to accommodate different sized items. To adjust, lift the shelf slightly, pull it out, and reinsert it at the desired level.
- **Door Bins:** The door bins are ideal for storing bottles, jars, and smaller items. They can also be repositioned.
- **BioFresh Drawers:** Your SKBes 4210-24 features BioFresh drawers, which maintain optimal humidity and temperature conditions for fruits, vegetables, meat, and dairy products, keeping them fresh for significantly longer. Use the humidity control slider on each drawer to adjust for different food types (e.g., high humidity for vegetables, low humidity for meat/dairy).

### Food Storage Guidelines

- Store raw meat and fish in sealed containers on the lowest shelf to prevent dripping onto other foods.
- Wrap or cover all food items to prevent drying out and odor transfer.
- Do not place hot food directly into the refrigerator; allow it to cool down first.
- Utilize the BioFresh drawers for their intended purpose to maximize food freshness.

## 4. Maintenance and Care

## Cleaning the Interior

Clean the interior regularly with a soft cloth, lukewarm water, and a mild, pH-neutral detergent. Avoid abrasive cleaners or solvents. Remove all removable parts (shelves, drawers) for thorough cleaning. Rinse and dry thoroughly before replacing.

## Cleaning the Exterior and Door Seals

Wipe the exterior surfaces with a soft, damp cloth. For stainless steel surfaces, use a specialized stainless steel cleaner. Clean the door seals regularly to ensure they remain flexible and maintain a good seal. A toothbrush can be used for hard-to-reach areas.

## Defrosting

Your Liebherr SKBes 4210-24 refrigerator features an automatic defrosting system in the refrigerator compartment. Frost will melt automatically and evaporate. There is no need for manual defrosting of the refrigerator section.

## What to do During a Power Outage

In case of a power outage, keep the refrigerator door closed as much as possible to maintain the internal temperature. Food will remain cold for several hours depending on the ambient temperature and how full the appliance is. Check food for spoilage before consumption after a prolonged outage.

## 5. Troubleshooting

Before contacting customer service, please check the following common issues and their solutions:

Problem	Possible Cause	Solution
Appliance does not cool.	No power supply; temperature setting too high; door not closed properly.	Check power plug and fuse; adjust temperature setting; ensure door is fully closed.
Unusual noises.	Appliance not level; objects touching the back wall; compressor noise (normal).	Level the appliance using adjustable feet; move objects away from the back; compressor noise is normal operation.
Water on the bottom of the refrigerator compartment.	Drain hole blocked.	Clean the drain hole at the back of the interior with a cotton swab or pipe cleaner.
Door seal not tight.	Seal dirty or damaged.	Clean the seal thoroughly; if damaged, contact customer service for replacement.

## 6. Technical Specifications

Key specifications for the Liebherr SKBes 4210-24 Refrigerator:

- **Brand:** Liebherr
- **Model:** SKBes 4210-24
- **Model Number:** SKBES4210-24
- **Installation Type:** Freestanding

- **Color:** Stainless Steel
- **Number of Doors:** 1
- **Defrost System:** Automatic (Refrigerator)
- **Capacity:** 244 Liters (Refrigerator compartment)
- **Package Dimensions:** 190.52 x 70.85 x 64.79 cm
- **Plug Type:** Type C/EF - 2-pin (Europlug/FR-DE hybrid)

## 7. Warranty and Customer Support

---

### Warranty Information

Your Liebherr appliance comes with a manufacturer's warranty. Please refer to the separate warranty card included with your purchase or visit the official Liebherr website for detailed terms and conditions specific to your region.

### Customer Support

For technical assistance, spare parts, or service requests, please contact Liebherr customer support. You can find contact details on the official Liebherr website or in your purchase documentation. When contacting support, please have your model number (SKBes 4210-24) and serial number ready.

**Liebherr Official Website:** [home.liebherr.com](https://home.liebherr.com)