### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- > **SPC** /
- > SPC 7608N DECT Phone User Manual

### **SPC 7608N**

# SPC 7608N DECT Phone

USER MANUAL

# Introduction

This manual provides comprehensive instructions for setting up, operating, and maintaining your SPC 7608N DECT Phone. Designed for ease of use, this cordless phone features large buttons, an amplified volume option, and direct memory keys, making it suitable for various users. Please read this manual thoroughly to ensure proper use and to take full advantage of all features.



Figure 1: The SPC 7608N DECT Phone handset resting in its base station. The phone is black with a silver trim, featuring a large display and clearly visible, oversized buttons.

### 1.1 Unboxing and Components

Before you begin, ensure all components are present in the package:

- SPC 7608N Handset
- · Base Station
- · Power Adapter for Base Station
- Telephone Line Cord (RJ11)
- 2 x AAA Rechargeable Batteries
- User Manual (this document)

### 1.2 Battery Installation

- 1. Locate the battery compartment on the back of the handset.
- 2. Slide open the battery compartment cover.
- 3. Insert the 2 AAA rechargeable batteries, observing the correct polarity (+ and -) as indicated inside the compartment.
- 4. Close the battery compartment cover securely.

## 1.3 Base Station Connection

- 1. Connect the power adapter to the 'DC IN' port on the back of the base station, then plug the adapter into a standard electrical outlet.
- 2. Connect one end of the RJ11 telephone line cord to the 'LINE' port on the base station.
- 3. Connect the other end of the telephone line cord to your telephone wall jack.



Figure 2: Dimensions of the SPC 7608N DECT Phone handset and base station, showing measurements in millimeters. The handset is 177mm tall and 57mm wide. The base is 140mm long and 100mm wide.

# 1.4 Initial Charge

Place the handset on the base station. Ensure it is properly seated and the charging indicator (if present) illuminates. For optimal battery life, allow the handset to charge continuously for at least 12-15 hours before its first use, even if the display indicates a full charge sooner.

# 2. Operating Instructions

### 2.1 Making Calls

- 1. Press the Green Call Button to get a dial tone.
- 2. Dial the desired phone number using the large numeric keypad.
- 3. Press the Red End Call Button to end the call or place the handset back on the base station.



Figure 3: A close-up view of the large, easy-to-read numeric keypad on the SPC 7608N handset, designed for enhanced visibility and tactile feedback.

## 2.2 Receiving Calls and Hands-Free Function

When the phone rings, the caller's number (if available and service activated) will be displayed on the large illuminated blue screen. Press the **Green Call Button** to answer.

To use the hands-free (speakerphone) function during a call, press the Speakerphone Button . Press it again to switch

back to the handset earpiece.

## 2.3 Phonebook Management (20 Entries)

The phonebook allows you to store up to 20 contacts. Refer to the on-screen menu for detailed instructions on adding, editing, and deleting contacts. Typically, you will access the phonebook via the **OK/MENU** button.

## 2.4 Direct Memory Buttons (M1, M2)

The M1 and M2 buttons provide quick access to frequently called numbers. To program these buttons:

- 1. Press and hold the desired memory button (M1 or M2) until the display prompts you to enter a number.
- 2. Enter the phone number you wish to save.
- 3. Press the **OK/MENU** button to confirm.

To dial a stored number, simply press the M1 or M2 button.



### 2.5 Volume Adjustment and Hearing Aid Compatibility

During a call, use the Up/Down Navigation Buttons ▲ ▼ to adjust the earpiece volume. The SPC 7608N offers an additional +10 dB amplification for increased handset volume, beneficial for users with hearing difficulties.

This phone is compatible with hearing aids in T-position, ensuring clear audio for users with hearing assistance devices.

#### 3. Maintenance

#### 3.1 Cleaning

To clean your phone, use a soft, damp cloth. Do not use abrasive cleaners, solvents, or strong chemicals, as these can damage the phone's surface. Ensure no liquid enters the phone's openings.

### 3.2 Battery Care

To prolong battery life:

- · Always use the supplied rechargeable batteries.
- Place the handset on the base station when not in use to ensure it remains charged.
- If the phone will not be used for an extended period, remove the batteries to prevent leakage.

## 4. Troubleshooting

Problem	Possible Cause	Solution
No dial tone / Cannot make or receive calls.	Telephone line cord not connected; Power adapter not connected; Handset out of range or not charged.	Ensure all cables are securely connected. Place handset on base station to charge. Move closer to the base station.
Display is blank or dim.	Low battery.	Place handset on base station for charging. Ensure batteries are correctly inserted.
Caller ID not working.	Service not activated by your telephone operator.	Contact your telephone service provider to ensure Caller ID service is active on your line.
Poor sound quality / Static.	Interference from other electronic devices; Handset too far from base.	Move the base station away from other electronics (Wi-Fi routers, microwaves). Move closer to the base station.

## 5. Specifications

Feature	Detail
Brand	SPC
Model Number	7608N
Phone Type	Cordless DECT Phone
Color	Black
Material	Plastic
Dimensions (Handset)	5.7 x 2.7 x 17.7 cm (2.24 x 1.06 x 6.97 inches)

Feature	Detail
Weight (Handset)	156 g (0.34 lbs)
Batteries	2 x AAA Rechargeable (included)
Phonebook Capacity	20 entries
Volume Amplification	+10 dB (handset earpiece)
Hearing Aid Compatible	Yes (T-position)
Caller ID	Yes (requires service activation from operator)

# 6. Warranty and Support

For information regarding the product warranty, please refer to the warranty card included in your product packaging or visit the official SPC website. Keep your purchase receipt as proof of purchase for any warranty claims.

If you encounter issues not covered in the troubleshooting section or require further assistance, please contact SPC customer support. Contact details can typically be found on the manufacturer's website or in the product documentation.

© 2024 SPC. All rights reserved.

This manual is subject to change without notice.

#### **Related Documents - 7608N**



#### SPC ZEUS 2 Smartphone: Easy-to-Use Mobile for Seniors with SOS Features

Discover the SPC ZEUS 2, a 5-inch smartphone designed for seniors. Features include an Easy Mode, large icons, SOS button, remote care compatibility, 4GB RAM, 64GB storage, and a 13MP camera. Learn about its technical specifications and user-friendly design.



## SPC ZEUS 2: Smartphone Fácil y Seguro para Mayores con Control Remoto SPC CARE

Descubre el SPC ZEUS 2, un smartphone diseñado para personas mayores. Ofrece Modo Fácil, iconos XL, botón SOS, control remoto SPC CARE, y especificaciones técnicas robustas para una vida conectada y segura.



#### SPC Atenea Fit 3 Quick Guide: Setup and Usage

A quick guide for setting up and using the SPC Atenea Fit 3 smart scale, including app download, device pairing, and usage instructions.



#### Manual de Usuario SPC Espirare ION: Guía Completa y Consejos de Uso

Descubre cómo usar tu purificador de aire SPC Espirare ION. Incluye instrucciones, precauciones de seguridad, mantenimiento y control por app para un ambiente limpio.



## SPC Harmony 2: Simple and Accessible 4G Flip Phone

Discover the SPC Harmony 2, a user-friendly 4G flip phone designed for simplicity and ease of use. Featuring a large display, hearing aid compatibility, SOS button, and one-touch dialing for essential contacts.



### SPC Fortune 2 Max: Stylish and Secure Feature Phone

Discover the SPC Fortune 2 Max, a stylish and secure feature phone designed for ease of use. It features large buttons, an SOS emergency function, a long-lasting battery, and an ergonomic design, making it ideal for everyday communication.