

[Manuals.plus](#) /

› [Citizen](#) /

› Citizen Eco-Drive Analog Grey Dial Men's Watch AT0821-59H User Manual

Citizen AT0821-59H

Citizen Eco-Drive Analog Grey Dial Men's Watch

MODEL: AT0821-59H

Introduction

Thank you for choosing the Citizen Eco-Drive Analog Grey Dial Men's Watch, Model AT0821-59H. This timepiece combines classic analog design with Citizen's innovative Eco-Drive technology, which harnesses light from any source to power the watch, eliminating the need for battery replacement. This manual provides essential instructions for the proper setup, operation, and maintenance of your watch.

Watch Components Overview





Image 1: Front view of the Citizen Eco-Drive AT0821-59H watch, showcasing the grey dial, three sub-dials, date window, and stainless steel case and band. The crown and pushers are visible on the right side of the case.

- **Crown:** Used for setting time and date.
- **Pushers (A & B):** Used for operating the chronograph function.
- **Main Hands:** Hour, minute, and second hands for current time.
- **Sub-dials:** Typically for chronograph minutes, chronograph seconds, and a 24-hour indicator or chronograph hour counter.
- **Date Window:** Displays the current date.

Setup

1. Initial Charging

Your Eco-Drive watch is powered by light. Before initial use, or if the watch has stopped, expose it to bright light (natural sunlight or fluorescent lamp) for several hours to ensure a full charge. The second hand may move in two-second intervals when power is low, indicating a need for charging.

2. Setting the Time

1. Pull the crown out to the second click position. The second hand will stop.
2. Rotate the crown to set the hour and minute hands. Ensure the AM/PM is correctly set if your watch has a 24-hour sub-dial that synchronizes with the main time.
3. Push the crown back in to the normal position. The second hand will resume movement.

3. Setting the Date

1. Pull the crown out to the first click position.
2. Rotate the crown to set the date. Avoid setting the date between 9:00 PM and 1:00 AM, as this may interfere with the automatic date change mechanism.
3. Push the crown back in to the normal position.

Operating the Chronograph

Your watch features a chronograph function for measuring elapsed time.

1. **Starting:** Press pusher **A** (top pusher) to start the chronograph. The chronograph second hand will begin to move.
2. **Stopping:** Press pusher **A** again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. **Resetting:** After stopping, press pusher **B** (bottom pusher) to reset the chronograph hands to their zero positions.
4. **Split Time (if applicable):** Some chronographs allow for split time measurement. Consult the full Citizen module manual for advanced chronograph operations if needed.

Maintenance

1. Charging Guidelines

- To maintain optimal performance, ensure your watch is regularly exposed to light.
- Avoid prolonged storage in dark places, which can lead to power depletion.
- A fully charged Eco-Drive watch can typically run for several months in total darkness.

2. Cleaning

Wipe the watch case and band with a soft, dry cloth. For stainless steel bands, a slightly damp cloth can be used, followed by a dry cloth. Avoid using harsh chemicals or abrasive materials.

3. Water Resistance (50 Meters / 5 ATM)

Your watch is water resistant to 50 meters (5 ATM). This means it is suitable for everyday use, such as hand washing, rain, and splashes. It is **not** suitable for swimming, showering, or diving. Ensure the crown is fully pushed in before any contact with water.

Image Coming Soon



Image 2: Side view of the Citizen Eco-Drive AT0821-59H watch, highlighting the crown and pushers on the right side of the case. This view also shows the thickness of the watch case and the detail of the stainless steel band links.

Troubleshooting

- **Watch Stops or Loses Time:** This typically indicates insufficient power. Expose the watch to bright light for an extended period (e.g., 8-10 hours in direct sunlight or 24-48 hours under a fluorescent lamp).
- **Date Does Not Change:** Ensure the time is set correctly, especially the AM/PM cycle. If the watch has stopped due to low power, the date may also be affected. Recharge the watch and reset the time and date.
- **Chronograph Hands Do Not Reset to Zero:** If the chronograph hands are not aligned to the 12 o'clock position when reset, they may need calibration. Refer to the detailed Citizen module manual for specific calibration

procedures, which usually involve pulling the crown to a specific position and using the pushers to adjust the hands.

Specifications

Model Number	AT0821-59H
Movement Type	Eco-Drive (Light Powered)
Display Type	Analog
Dial Color	Grey
Dial Glass Material	Sapphire
Case Material	Stainless Steel
Band Material	Stainless Steel
Band Color	Stainless Steel (Silver-tone)
Water Resistance Depth	50 meters (5 ATM)
Weight	600 g

Warranty and Support

Your Citizen Eco-Drive watch comes with a **1 Year International Guarantee** from the manufacturer. This warranty covers manufacturing defects under normal use. For warranty claims, service, or further technical assistance, please contact an authorized Citizen service center or refer to the official Citizen website for detailed support information. For more detailed instructions specific to the watch module, please refer to the comprehensive manual available on the official Citizen website, usually identifiable by the movement caliber number found on the watch case back.

© Citizen. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B007R9W17M>

More documents and user manuals: <https://manuals.plus/>