

## CLP Washington

# CLP Washington Mesh Ergonomic Office Chair Instruction Manual

Model: Washington

## INTRODUCTION

---

Thank you for choosing the CLP Washington Mesh Ergonomic Office Chair. This manual provides detailed instructions for the assembly, operation, maintenance, and specifications of your new office chair. Please read this manual carefully before assembly and use to ensure proper function and longevity of the product. Keep this manual for future reference.

## 1. SETUP AND ASSEMBLY

---

Your CLP Washington office chair requires assembly. Please ensure all components are present before beginning. An Allen key is typically included for assembly. Follow these general steps:

- Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
- Attach Wheels to Base:** Insert the five gliding wheels into the openings at the ends of the chrome metal base. Push firmly until they click into place.
- Insert Gas Lift:** Place the gas lift cylinder into the central hole of the assembled base.
- Attach Mechanism to Seat:** Secure the rocking/tilt mechanism to the underside of the seat using the provided screws. Ensure the front of the mechanism aligns with the front of the seat.
- Attach Armrests to Seat and Backrest:** Connect the armrests to both the seat and the backrest using the appropriate screws. Ensure they are securely fastened.
- Connect Seat Assembly to Gas Lift:** Carefully place the assembled seat (with mechanism and armrests attached) onto the gas lift cylinder. The tapered end of the gas lift should fit snugly into the mechanism.



Figure 1.1: Gliding wheels for the chair base.



Figure 1.2: Premium gas lift for height adjustment.



Figure 1.3: Tilt and height adjustment mechanism.

## 2. OPERATING INSTRUCTIONS

The CLP Washington office chair offers several adjustment features to enhance your comfort and support.

- **Height Adjustment:** To adjust the seat height, pull the lever located under the seat upwards while taking your weight off the chair to raise it, or while seated to lower it. Release the lever at your desired height.
- **Tilt/Rocking Mechanism:** The chair features a rocking mechanism. Use the lever under the seat to engage or disengage the tilt function. Some models may also have a tension knob to adjust the resistance of the rocking motion.
- **Swivel Function:** The chair is designed to swivel 360 degrees, allowing for easy movement and access to different areas of your workspace without needing to reposition the entire chair.
- **Mobility:** The five gliding wheels on the chrome base allow for smooth movement across various floor surfaces.

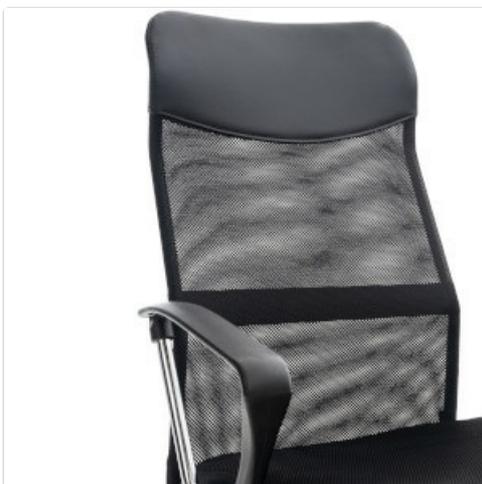


Figure 2.1: Adjustable dimensions and features for optimal comfort.



Figure 2.2: The chair's design promotes an ergonomic sitting posture.

### 3. CARE AND MAINTENANCE

---

Proper care will help maintain the appearance and functionality of your office chair.

- **Cleaning:** Wipe clean with a damp cloth. For synthetic leather and mesh surfaces, use a mild soap solution if necessary, then wipe with a clean, dry cloth. Avoid harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically check all screws and bolts to ensure they are tight. Re-tighten if necessary to prevent wobbling or instability.
- **Avoid Overloading:** Do not exceed the maximum weight capacity of 140 kg.
- **Protect from Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading or damage to the upholstery materials.



Figure 3.1: Chair materials include breathable mesh and a padded seat for comfort.

## 4. TROUBLESHOOTING

If you encounter any issues with your chair, refer to the following common problems and solutions:

- **Chair does not adjust height:** Ensure the gas lift lever is fully engaged. If the issue persists, the gas lift cylinder may need replacement.
- **Chair wobbles:** Check all assembly screws and bolts. Tighten any loose connections. Ensure the base is properly seated on the gas lift.
- **Wheels do not roll smoothly:** Check for debris (hair, dust) caught in the wheels. Clean them thoroughly. Ensure wheels are correctly inserted into the base.
- **Squeaking noises:** Apply a small amount of silicone lubricant to moving parts, such as the tilt mechanism or where the gas lift meets the base. Avoid oil-based lubricants on plastic parts.

## 5. SPECIFICATIONS

Feature	Detail
Brand	CLP
Model Number	1012801
Product Dimensions (Overall)	Height: 110 - 118 cm, Depth: 53 cm, Width: 53 cm
Seat Height	47 – 55 cm
Seat Area (Width x Depth)	50 x 50 cm
Backrest Height	67 cm
Armrest Height	22 cm
Maximum Load Capacity	140 kg
Item Weight	10 kg
Materials	Synthetic leather, Mesh (100% microfiber), Chrome-plated metal base
Special Features	Height adjustable, Swivel, Rocking mechanism, Rolling wheels



Figure 5.1: Key dimensions of the CLP Washington office chair.



Figure 5.2: The chair supports a maximum load capacity of 140 kg.

## 6. WARRANTY INFORMATION

---

Specific warranty details for the CLP Washington Office Chair may vary by region and retailer. Please refer to the warranty documentation provided with your purchase or contact your point of sale for information regarding warranty coverage, terms, and conditions. Generally, products are covered against manufacturing defects for a specified period from the date of purchase.

## 7. CUSTOMER SUPPORT

---

For further assistance, parts replacement, or any questions not covered in this manual, please contact the retailer or manufacturer directly. Have your purchase receipt and product model number (Washington) ready when contacting support.

Manufacturer: CLP

