

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [RM-Series](#) /

› [RM Series Replacement Remote Control COM COM 1589 User Manual](#)

RM-Series COM COM 1589

RM Series Replacement Remote Control

USER MANUAL FOR MODEL COM COM 1589

1. INTRODUCTION

This manual provides comprehensive instructions for the RM Series Replacement Remote Control, model COM COM 1589. This remote is designed as a dedicated replacement for your original device's remote control, offering full functionality without the need for complex programming or setup. It is ready to use straight out of the box.

Please read this manual carefully to ensure proper use and to maximize the lifespan of your remote control.

2. PRODUCT OVERVIEW

The RM Series Replacement Remote Control is engineered to replicate the exact functions of your original remote. Below are images illustrating the design and key features of the handset.





Figure 2.1: Front view of the remote control, displaying the layout of all operational buttons including power, number pad, navigation, volume, channel, and function keys.



Figure 2.2: Angled view of the remote control, showcasing its slim profile and ergonomic shape designed for comfortable handling.





Figure 2.3: Rear view of the remote control, showing the closed battery compartment and the CE marking.





Figure 2.4: Rear view of the remote control with the battery cover removed, illustrating the two AAA battery slots.

3. SETUP

The RM Series Replacement Remote Control is designed for immediate use without any complex setup procedures. It works straight out of the box.

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control (refer to Figure 2.3 and 2.4).
2. Slide the battery cover downwards or press the latch to open it.

3. Insert two AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery cover by sliding it back into place until it clicks securely.

Once batteries are installed, the remote is ready for operation.

4. OPERATING INSTRUCTIONS

This replacement remote control provides full functionality of the original remote supplied with your device. It performs all fixed functions of the original remote, excluding any reprogrammable buttons that may have been present on the original.

4.1 Basic Operation

- **Power Button:** Press the **POWER** button (usually located at the top left) to turn your device on or off.
- **Number Buttons (0-9):** Use these buttons to directly input channel numbers or other numerical selections.
- **Navigation Pad:** The central directional buttons (**UP, DOWN, LEFT, RIGHT**) and the **OK/ENTER** button are used to navigate menus and confirm selections.
- **Volume Control:** Use the **VOL+** and **VOL-** buttons to adjust the audio volume.
- **Channel Control:** Use the **P+** and **P-** buttons to change channels.
- **Mute Button:** Press the **MUTE** button to instantly silence the audio. Press again to restore.
- **Playback Controls:** Buttons such as **PLAY, PAUSE, STOP, REC, PREV, REW, FWD, NEXT** are used for media playback functions.
- **Menu/Home:** Access your device's main menu or home screen.
- **Back/Exit:** Return to the previous screen or exit a menu.
- **Source/Input:** Change the input source on your device.

4.2 LED Indicator

The remote control features a red LED indicator, typically located near the top. This LED will illuminate briefly when a button is pressed, confirming that a signal is being transmitted. If the LED does not light up, check the batteries.

5. MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your remote control.

5.1 Battery Replacement

Replace batteries when the remote's response becomes sluggish, the LED indicator dims, or the remote stops functioning. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

5.2 Cleaning

To clean the remote control, gently wipe the surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's finish or internal components.

5.3 Storage

When not in use for extended periods, it is advisable to remove the batteries to prevent leakage, which can damage the remote. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

If you encounter issues with your RM Series Replacement Remote Control, refer to the following common problems and solutions:

- **Remote is not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and your device's infrared receiver.
 - Make sure you are within the effective operating range and pointing the remote directly at the device.
- **LED indicator does not light up:**
 - This usually indicates dead or incorrectly installed batteries. Replace them.
- **Some buttons do not work:**
 - Ensure the remote is compatible with your specific device model. This remote is a dedicated replacement for COM COM 1589.
 - Verify that the button is a fixed function button and not a reprogrammable button from the original remote, as this replacement remote only supports fixed functions.
 - Clean the remote as described in the Maintenance section, as dirt or debris might be obstructing button contacts.

If the problem persists after trying these solutions, please contact the seller for further assistance.

7. SPECIFICATIONS

Feature	Detail
Product Model Number	COM COM 1589
Brand	RM-Series
Compatibility	Dedicated replacement for original COM COM 1589 remote
Dimensions (L x W x H)	22.7 x 5 x 2.4 cm
Weight	91.47 g
Power Source	2 x AAA Batteries (not included)
Setup Required	None (works straight out of the box)
Assembly/Testing	Assembled and tested in the UK

8. WARRANTY AND SUPPORT

Information regarding a specific warranty period for this product is not provided in the available documentation. However, all RM Series remotes are assembled and tested in the UK, ensuring a high standard of quality.

For any product-related inquiries, technical support, or issues not covered in this manual, please contact the seller or the RM-Series customer service directly. When contacting support, please provide your product model number (COM COM 1589) and a detailed description of the issue.

Related Documents - COM COM 1589

	<p>Full Nutrition Blender User Manual - Model SC-1589</p> <p>User manual for the Full Nutrition Blender, Model SC-1589. Provides instructions on how to use, safety precautions, troubleshooting, and maintenance for the blender.</p>
	<p>HP Pavilion All-in-One MS200 Series PC: Upgrading and Servicing Guide</p> <p>Comprehensive guide for upgrading and servicing the HP Pavilion All-in-One MS200 series PC. Learn how to replace the wireless keyboard/mouse, memory modules, computer stand, hard disk drive, and CD/DVD drive, with troubleshooting tips.</p>
HMD 	<p>HMD Pulse Bedienungsanleitung: Ihr umfassender Leitfaden</p> <p>Entdecken Sie die HMD Pulse Bedienungsanleitung für detaillierte Informationen zur Einrichtung, Nutzung, Sicherheit und Fehlerbehebung Ihres HMD Pulse Smartphones. Optimieren Sie Ihr mobiles Erlebnis.</p>
HMD 	<p>HMD Pulse User Guide: Setup, Features, and Safety</p> <p>Comprehensive user guide for the HMD Pulse smartphone by HMD Global, covering setup, features, connectivity, and essential safety information.</p>
HMD 	<p>Panduan Pengguna HMD Pulse: Fitur, Pengaturan, dan Keamanan</p> <p>Panduan lengkap untuk HMD Pulse, mencakup pengaturan awal, penggunaan fitur dasar, konektivitas, kamera, keamanan, dan informasi penting lainnya untuk memaksimalkan pengalaman pengguna.</p>



HMD Pulse
Ръководство на потребителя

Издание 2025-08-11 | стр. 50

[HMD Pulse: Ръководство на потребителя за смартфон](#)

Научете как да използвате вашия HMD Pulse смартфон с това изчерпателно ръководство на потребителя от HMD Global. Включва инструкции за настройка, функции, камера, интернет, безопасност и поддръжка.