

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [De'Longhi](#) /

› [De'Longhi EDG 605.B NESCAFÉ Dolce Gusto Circolo Automatic Capsule Coffee Machine User Manual](#)

De'Longhi EDG605.B

De'Longhi EDG 605.B NESCAFÉ Dolce Gusto Circolo Automatic Capsule Coffee Machine User Manual

INTRODUCTION

Welcome to the user manual for your De'Longhi EDG 605.B NESCAFÉ Dolce Gusto Circolo Automatic capsule coffee machine. This machine is designed to provide a wide variety of hot and cold beverages with convenience and quality. Featuring a 15-bar pump pressure system and a 1.3-liter removable water tank, it ensures optimal extraction for your favorite drinks. Please read these instructions carefully before first use to ensure proper operation and maintenance.



Image: Front view of the De'Longhi EDG 605.B Circolo Automatic capsule coffee machine.

1. SETUP

1.1 Unpacking and Initial Cleaning

1. Carefully remove the coffee machine from its packaging.
2. Remove all protective films and packaging materials.
3. Wash the water tank and drip tray with warm water and mild detergent. Rinse thoroughly.
4. Perform two flush cycles (one hot, one cold) without a capsule to clean the internal system. Fill the water tank, place a cup under the dispenser, and run a cycle. Repeat for the second flush.

1.2 Filling the Water Tank

- Remove the water tank from the back of the machine.

- Fill the tank with fresh, clean drinking water. For areas with hard water, consider using filtered water or a 50% mix of demineralized and tap water. Do not use distilled water or chemical additives.
- Reinsert the water tank firmly into its position.



Image: Side view of the coffee machine showing the transparent water tank.

1.3 Power Connection and Initial Start-up

- Plug the power cord into a suitable electrical outlet.
- Press the power button to turn on the machine. The indicator light will illuminate.
- If water does not dispense during initial use, an airlock may be present. To resolve this, partially insert the water tank without fully clicking it into place, then repeatedly press the tank down and release it about 30-40 times to dislodge the airlock. Water should then begin to flow.

2. OPERATING INSTRUCTIONS

2.1 Preparing a Beverage

1. Ensure the machine is powered on and the water tank is filled.
2. Lift the locking handle and pull out the capsule holder.
3. Insert a NESCAFÉ Dolce Gusto capsule into the holder.
4. Slide the capsule holder back into the machine and push down the locking handle until it clicks.
5. Place a cup or glass on the drip tray. Adjust the drip tray height if necessary for taller glasses.



Image: Close-up view of the coffee machine with the capsule holder open, ready for capsule insertion.

2.2 Selecting Water Volume and Brewing

1. Refer to the recommended water volume indicated on your NESCAFÉ Dolce Gusto capsule packaging.
2. Use the selection wheel on the machine to adjust the water volume according to the capsule's recommendation.
3. Press the hot (red) or cold (blue) beverage button to start brewing. The machine will automatically stop

when the selected volume is dispensed, thanks to the Flow-Stop technology.

- Once brewing is complete, wait a few seconds for any remaining drips, then lift the locking handle to eject the used capsule into the integrated waste bin.



Image: The coffee machine in operation, with a cup receiving a beverage and various Dolce Gusto capsules displayed.

2.3 Beverage Variety

Your De'Longhi Circolo machine supports a wide range of NESCAFÉ Dolce Gusto capsules, allowing you to enjoy over 30 different hot and cold beverages. These include:

- Espresso
- Latte Macchiato
- Cappuccino
- Lungo
- Grande
- Tea
- Cocoa
- Iced Coffee



Image: A selection of NESCAFÉ Dolce Gusto capsules, including Latte Macchiato, Espresso, and Chococino.

3. MAINTENANCE

3.1 Cleaning the Drip Tray and Water Tank

- The drip tray is height-adjustable and dishwasher safe for easy cleaning. Remove it and wash regularly.
- Clean the water tank regularly with warm water and mild detergent. Rinse thoroughly to remove any soap residue.

3.2 Cleaning the Capsule Holder

- After each use, remove the capsule holder and rinse it under running water. Ensure no coffee residue remains.
- The magnetic capsule holder design facilitates easy removal and cleaning.

3.3 Descaling

Regular descaling is crucial to maintain the performance and longevity of your coffee machine, especially in areas with hard water. While specific descaling instructions are not provided here, generally, you should:

- Use a descaling solution specifically designed for coffee machines.
- Follow the instructions provided with the descaling solution.
- Typically, this involves filling the water tank with the solution, running cycles through the machine, and then flushing with clean water multiple times.

4. TROUBLESHOOTING

Problem	Possible Cause	Solution
No water dispenses / Pump makes noise but no water flows.	Airlock in the system.	Partially insert the water tank (do not fully click into place) and repeatedly press it down and release 30-40 times to clear the airlock.
Red light blinking after pump noise.	Indicates an issue with water flow or system pressure.	Check water tank level. Ensure capsule is correctly inserted. Try clearing airlock as described above. If problem persists, contact customer support.
Beverage is cold or not hot enough.	Machine not fully heated, or descaling needed.	Allow machine to preheat fully. Perform a descaling cycle if not done recently.
Water leaks from machine.	Water tank not properly seated, or internal seal issue.	Ensure water tank is correctly and firmly inserted. Check for any visible cracks or damage to the tank. If leaking persists, discontinue use and contact support.

5. SPECIFICATIONS

Feature	Detail
Brand	De'Longhi
Model Number	EDG605.B
Color	Black
Product Dimensions	20.4 x 32.6 x 32.7 cm (8.03 x 12.83 x 12.87 inches)
Weight	3.7 kg (8.16 lbs)
Water Tank Capacity	1.3 Liters
Power/Voltage	1500 Watts / 240 Volts
Material	Stainless Steel
Compatible Models	Dolce Gusto capsules
Special Features	Programmable, Automatic Flow-Stop



Image: Diagram illustrating the height of the De'Longhi Circolo coffee machine, approximately 14 inches (35 cm).

6. WARRANTY AND SUPPORT

6.1 Product Warranty

This De'Longhi coffee machine typically comes with a two-year manufacturer's guarantee. Please refer to the warranty card included with your product for specific terms and conditions, and details on how to register your product.

6.2 Customer Support

For technical assistance, spare parts, or warranty claims, please contact De'Longhi customer support. You may also find additional resources and frequently asked questions on the official NESCAFÉ Dolce Gusto website.

Upon product registration on the Dolce Gusto site, you may be eligible for credit to use on their site for pods or accessories.