

Manuals.plus /

- › Braun /
- › Braun CCR4 Clean and Renew Cartridge Refills Instruction Manual

Braun CCR4

Braun CCR4 Clean and Renew Cartridge Refills Instruction Manual

Model: CCR4

INTRODUCTION

The Braun CCR4 Clean and Renew Cartridge Refills are designed to maintain your Braun electric shaver in optimal condition. These cartridges contain an alcohol-based cleaning solution that cleans, lubricates, and refreshes your shaver, contributing to its longevity and performance. This manual provides instructions for the proper use and maintenance of these refill cartridges.

SAFETY INFORMATION

Please read and understand the following safety precautions before using the Braun Clean and Renew Cartridge Refills:

- Always keep the cleaning solution away from heat sources and open flames.
- Avoid contact with eyes and skin. In case of contact, rinse thoroughly with water.
- Do not use the shaver near water or while charging in the Clean & Renew station.
- Always follow the manufacturer's instructions for cleaning and maintaining your shaver to prevent skin irritation and ensure safe operation.

SETUP AND INSTALLATION

The Braun CCR4 Clean and Renew Cartridge Refills are compatible with all Braun Cleaning Centres (Activator, Synchro, Pulsonic, and Series models).

1. **Unpack the Cartridge:** Carefully remove a new refill cartridge from its packaging.
2. **Open the Clean & Renew Station:** Press the release button on your Braun Clean & Renew station to open the housing.
3. **Remove Used Cartridge (if applicable):** If a used cartridge is present, carefully remove it and dispose of it

according to local regulations.

4. **Insert New Cartridge:** Slide the new Braun CCR4 refill cartridge into the station until it clicks securely into place. Ensure the cartridge is fully seated.
5. **Close the Station:** Close the housing of the Clean & Renew station.



Image: The Braun CCR4 Clean and Renew Cartridge Refills 4-pack packaging, showing the product and its features.

Compatible with all Braun Clean&Charge units



Image: A hand pressing a button on a Braun Clean&Charge unit, illustrating compatibility with all Braun Clean&Charge units.

OPERATING THE CLEAN & RENEW SYSTEM

Once the CCR4 cartridge is installed, your Braun Clean & Renew station is ready for use. The system provides automatic cleaning, charging, and lubrication for your shaver.

- **Automatic Cleaning:** The alcohol-based cleaning solution removes shaved stubble and hygienically cleans the shaver, eliminating 99.99% of germs.
- **Lubrication:** The cleaning formula automatically lubricates the shaver blades, maintaining optimal cutting efficiency.
- **Charging:** The station simultaneously charges your shaver while it is being cleaned.

**Hygienically
cleans your
shaver.**



Image: A Braun electric shaver being cleaned in a Clean & Renew station, showing the cleaning fluid in action.

Cleans
10x more
effectively
than water

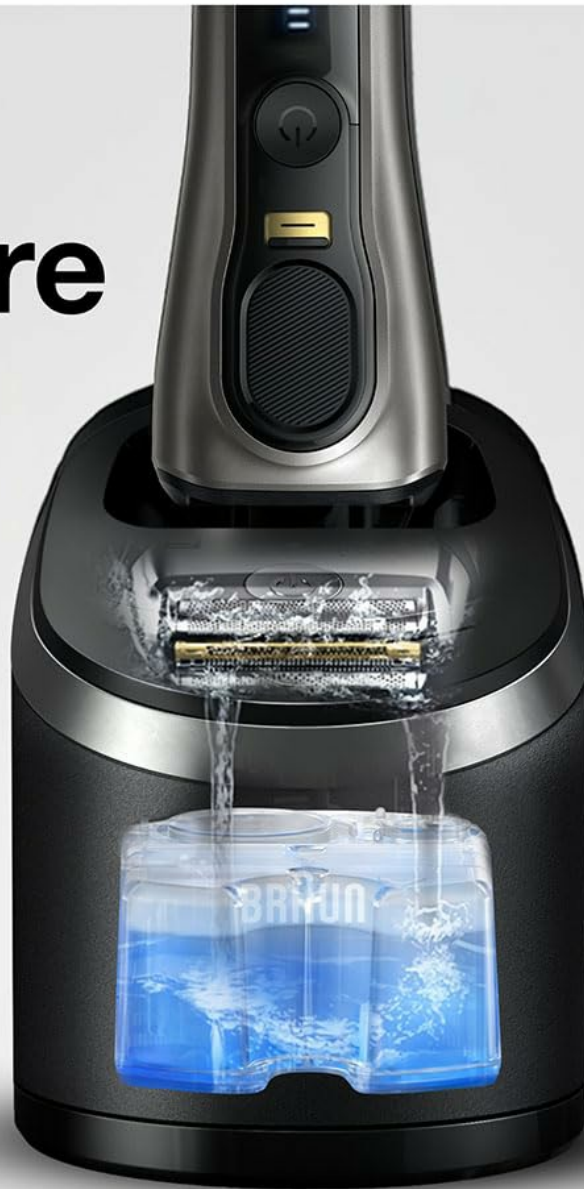


Image: A Braun electric shaver undergoing cleaning in a Clean & Renew station, emphasizing 10x more effective cleaning than water.

Demonstration Video

Your browser does not support the video tag.

Video: Official Braun video demonstrating the functionality of the Clean & Renew System, including automatic cleaning, charging, and lubrication processes for Braun electric shavers.

MAINTENANCE AND REPLACEMENT

For optimal performance and hygiene, the refill cartridge should be replaced regularly.

- **Replacement Frequency:** Replace the refill cartridge approximately every 2 to 3 months. This duration is based on an average cleaning frequency of 2 times per week and is effective for about 16 cleaning cycles.
- **Storage:** Unopened cartridges can be stored without losing volume or efficacy.

**Replace
every two
months*
for a
shaver
like new,
every day**



*Based on average cleaning of 2 times per week. Effective for 16 cleaning cycles.

Image: A Braun Clean & Renew cartridge inserted into a shaver cleaning station, with text indicating replacement every two months for sustained performance.

Refreshing lemon scent



Image: A single Braun Clean & Renew cartridge, highlighting its refreshing lemon scent.

TROUBLESHOOTING

This manual does not contain specific troubleshooting information for the Braun CCR4 Clean and Renew Cartridge Refills. If you encounter issues with your Clean & Renew system or the cartridges, please refer to the instruction manual provided with your Braun electric shaver or contact Braun customer support.

SPECIFICATIONS

Feature	Specification
Model Number	CCR4
Product Dimensions	7.95 x 5 x 3.7 inches
Item Weight	1.76 Pounds (0.8 Kilograms)
Item Form	Liquid
Scent	Lemon
Special Features	Alcohol Based
Unit Count	4 Count
Item Volume	680 Milliliters
UPC	069055864807

WARRANTY AND SUPPORT

Specific warranty information for the Braun CCR4 Clean and Renew Cartridge Refills is not provided in this document. For details regarding product warranty, returns, or customer support, please refer to the official Braun website or contact Braun customer service directly. Information may also be available on the product packaging or through your retailer.