

[Manuals.plus](#) /

> [Cuisinart](#) /

> Cuisinart Chopper Instruction Manual

## Cuisinart CTG-00-SCHP

# Cuisinart Chopper Instruction Manual

Model: CTG-00-SCHP | Brand: Cuisinart

## PRODUCT OVERVIEW

---

The Cuisinart Stainless Steel Food Chopper is designed for efficient and quick preparation of various ingredients. It is ideal for chopping vegetables, hard cheeses, nuts, herbs, and garlic. Its versatile design allows for use with or without a cutting board, providing flexibility in your kitchen.

### Key Features:

- **Exceptional Design:** Features an easy push-down handle for rapid chopping of ingredients like hard cheese, nuts, or vegetables.
- **Versatile Base:** The integrated base allows for convenient chopping directly into the container or onto a cutting board.
- **Durable Construction:** Constructed with stainless steel housing and blades for long-lasting performance.
- **Easy Cleanup:** Stainless steel components and blades are dishwasher safe for effortless cleaning.
- **BPA Free:** This product is manufactured without BPA.





Figure 1: Cuisinart Chopper, Stainless Steel/Black.

## PRODUCT COMPONENTS

---

The Cuisinart Chopper consists of several key components designed for ease of use and effective chopping.

- **Push-Down Handle:** The top part of the chopper, which you press to activate the blades.
- **Stainless Steel Housing:** The main body of the chopper, providing durability and a sleek appearance.
- **Blade Assembly:** Sharp stainless steel blades located inside the housing, designed for efficient cutting.
- **Transparent Collection Cup/Base:** A clear container at the bottom that collects chopped ingredients and can also serve as a stable base for chopping.



## Simple to use

Easy push-down handle with durable stainless steel blade for quick chopping. Dishwasher safe.

Figure 2: Illustration of the push-down handle and internal blade mechanism.



**Chop anywhere**  
Convenient base allows chopping  
with or without using a cutting board.

Figure 3: The transparent collection cup and base for convenient chopping.

## SETUP

---

1. **Unpack:** Carefully remove all components from the packaging.
2. **Wash Components:** Before first use, wash the collection cup and blade assembly in warm, soapy water. Rinse thoroughly and dry. The stainless steel housing can be wiped clean with a damp cloth.
3. **Assemble:** Place the blade assembly into the collection cup. Align the stainless steel housing over the blade assembly and collection cup, ensuring it sits securely. The base of the chopper should fit snugly onto the collection cup.

## OPERATING INSTRUCTIONS

---

Follow these steps to effectively use your Cuisinart Chopper:

1. **Prepare Ingredients:** Cut ingredients into smaller, manageable pieces that will fit within the collection cup and allow

the blades to move freely. Avoid overfilling the cup.

2. **Place Ingredients:** Place the prepared ingredients into the collection cup.
3. **Position Chopper:** Place the chopper on a stable, flat surface. Ensure the collection cup is securely attached to the main housing.
4. **Chop:** Hold the top of the chopper firmly with one hand. With the other hand, press down on the push-down handle. The blades will extend and chop the ingredients.
5. **Repeat:** Lift the handle slightly to allow the blades to retract, then press down again. Repeat this motion until your ingredients reach the desired consistency. More presses will result in finer chops.
6. **Retrieve Ingredients:** Once chopping is complete, carefully separate the main housing from the collection cup to access your chopped ingredients.



**Chop, dice, and mince**  
Quickly prep vegetables, garlic, herbs, nuts,  
hard cheeses, and more.

Figure 4: The Cuisinart Chopper in action, demonstrating its chopping capabilities.

Proper cleaning and maintenance will ensure the longevity and optimal performance of your Cuisinart Chopper.

- **Disassembly:** Separate the stainless steel housing from the collection cup and blade assembly.
- **Dishwasher Safe Parts:** The stainless steel housing and blade assembly are dishwasher safe. Place them on the top rack for cleaning.
- **Hand Washing:** For best results and to prolong the life of the product, hand washing with warm, soapy water is recommended, especially for the transparent collection cup. Use a brush to clean around the blades carefully.
- **Drying:** Ensure all parts are thoroughly dried before reassembling or storing to prevent water spots and maintain hygiene.
- **Storage:** Store the chopper in a dry place.

## TROUBLESHOOTING

If you encounter any issues with your Cuisinart Chopper, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blades not reaching the bottom or chopping inconsistently.	Improper assembly of the base or blade mechanism. Ingredients are too large or too much.	Ensure the collection cup and blade assembly are correctly seated and latched into the main housing. Cut ingredients into smaller, uniform pieces. Do not overfill.
Collection cup detaches or spills contents during use.	Base not securely fastened. Damage to plastic components.	Verify that the collection cup is firmly twisted or latched onto the main unit before each use. Inspect plastic components for cracks or damage. If damaged, contact customer support.
Chopper feels dull or struggles to cut tougher ingredients.	Blades may be dull or food items are too hard/fibrous.	Ensure ingredients are suitable for manual chopping. For very tough items, pre-cut into smaller pieces. If blades are consistently dull, consider contacting customer support for replacement options.
Difficulty cleaning stuck food particles.	Food dried onto blades or inside mechanism.	Clean immediately after use. Use a small brush or sponge to dislodge stubborn particles. Refer to the Cleaning and Maintenance section for detailed instructions.

## SPECIFICATIONS

Attribute	Detail
Brand	Cuisinart
Model Number	CTG-00-SCHP
Product Dimensions	3.75"L x 3.88"W x 9.75"H
Material	Stainless Steel
Color	Black
Operation Mode	Manual

Attribute	Detail
Blade Material	Stainless Steel
Blade Shape	Square
Item Weight	13.7 ounces
Recommended Uses	Cheese, Vegetables, Nuts, Herbs, Garlic
Care Instructions	Hand Wash Only (for optimal care, some parts are dishwasher safe)

# Stainless Steel Chopper



Figure 5: Product dimensions and warranty information.

## WARRANTY AND SUPPORT

The Cuisinart Chopper (Model CTG-00-SCHP) comes with a **Limited Lifetime Warranty**. This warranty covers defects in

materials and workmanship under normal household use.

For detailed information regarding warranty policies, troubleshooting steps not covered in this manual, or to inquire about replacement parts, please refer to the official Cuisinart User Manual PDF available online or visit the Cuisinart official website. You can often find comprehensive support resources, including FAQs and contact information, on the manufacturer's product support pages.

For additional assistance, you may also consult the digital user guide provided by the retailer, which can be found at: [Cuisinart Chopper User Manual \(PDF\)](#).