

[Manuals.plus](#) /

› [Fagor](#) /

› Fagor Halogen Tabletop Oven User Manual

Fagor 670041750

Fagor Halogen Tabletop Oven User Manual

Model: 670041750

1. INTRODUCTION

The Fagor Halogen Tabletop Oven is a versatile cooking appliance designed for efficient and healthy meal preparation. Utilizing a powerful halogen heating element and convection technology, it circulates hot air to cook food uniformly, often reducing cooking times by 25-50% compared to traditional methods. This oven is capable of broiling, baking, roasting, grilling, steaming, air frying, and dehydrating a variety of foods.

Its compact and portable design makes it suitable for various kitchen sizes, including recreational vehicles, boats, dorm rooms, and small apartments. The transparent glass bowl allows for easy monitoring of the cooking process.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is unplugged before cleaning or assembly/disassembly.
- Do not immerse the lid, which contains electrical components, in water or any other liquid.
- This appliance generates heat during use. Use oven mitts or gloves when handling hot surfaces, especially the glass bowl and lid.
- Keep children and pets away from the appliance during operation.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from flammable materials.
- Do not operate the oven if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- The handle on the lid serves as a safety switch. Ensure it is properly engaged for operation. Handle with care, especially when hot.

3. COMPONENTS AND ACCESSORIES



Figure 3.1: Assembled Oven. This image shows the Fagor Halogen Tabletop Oven fully assembled, featuring the red lid with control dials, the clear glass bowl, and the base stand.



Figure 3.2: Oven Components. This image displays all the individual components included with the oven: the lid with heating element, the glass bowl, the base stand, the extender ring, high and low racks, tongs, and a nonstick fry pan.

- **Oven Lid:** Contains the halogen heating element, fan, and control panel.
- **Glass Bowl:** 12-Quart capacity, made of tempered glass.
- **Base Stand:** Supports the glass bowl.
- **Extender Ring:** 5-Quart capacity, increases total volume to 17-Quarts.
- **High Rack:** For cooking items closer to the heating element.
- **Low Rack:** For cooking items further from the heating element.
- **Tongs:** For safe removal of hot food and racks.
- **Nonstick Fry Pan:** Provides easy release and cleanup for certain dishes.

4. SETUP AND FIRST USE

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Clean:** Before first use, wash the glass bowl, racks, extender ring, and nonstick fry pan with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the oven lid with a damp cloth. Do not immerse the lid in water.
3. **Assemble:** Place the base stand on a stable, heat-resistant surface. Carefully place the clean glass bowl into the base stand. If additional capacity is needed, place the extender ring on top of the glass bowl.
4. **Insert Rack:** Place either the high or low rack inside the glass bowl, depending on your cooking needs.
5. **Lid Placement:** Carefully place the oven lid on top of the glass bowl (or extender ring). Ensure the handle is in the down/locked position for the oven to operate.

5. OPERATING INSTRUCTIONS



Figure 5.1: Control Panel. This image provides a close-up view of the oven's control panel, showing the time dial on the left and the temperature dial on the right, along with the power and heat indicator lights.



Figure 5.2: Oven in Operation. This image shows the Fagor Halogen Tabletop Oven with its heating element illuminated, indicating it is actively cooking. The

transparent glass bowl allows visibility of the food inside.

1. **Prepare Food:** Place food on the appropriate rack or in the nonstick fry pan. For best results, ensure food is not overcrowded to allow for proper air circulation.
2. **Set Temperature:** Use the temperature dial on the oven lid to select the desired cooking temperature (ranging from 250°F to 480°F).
3. **Set Time:** Use the time dial to set the cooking duration (up to 60 minutes). The oven will automatically shut off when the timer reaches zero.
4. **Start Cooking:** Ensure the lid handle is fully lowered. Plug the oven into a standard electrical outlet. The 'POWER' light will illuminate, and the 'HEAT' light will turn on when the heating element is active.
5. **Monitor Cooking:** The transparent glass bowl allows you to visually monitor the cooking progress without opening the lid.
6. **Finish Cooking:** Once the timer expires, the oven will turn off. Carefully lift the lid using the handle. Place the hot lid on a heat-resistant surface or use the metal extender ring as a temporary lid rest. Use the provided tongs to remove hot food and racks.

Cooking Functions:

- **Broil:** Ideal for browning and crisping the top layer of food.
- **Bake:** For even cooking of items like pastries, casseroles, and vegetables.
- **Roast:** Perfect for meats and poultry, ensuring a tender interior and crispy exterior.
- **Grill:** Provides a grilling effect for meats and vegetables without smoke or flames.
- **Steam:** Can be used to steam vegetables while retaining vitamins.
- **Air Fry:** Achieves crispy results with little to no added oil.
- **Dehydrate:** Low temperature settings can be used for dehydrating fruits and vegetables.

6. MAINTENANCE AND CLEANING

Regular cleaning will ensure the longevity and optimal performance of your Fagor Halogen Tabletop Oven.

- **Always unplug the oven and allow it to cool completely before cleaning.**
- **Glass Bowl and Racks:** The 12-Quart tempered glass bowl, extender ring, and cooking racks are dishwasher safe for convenient cleaning. For stubborn residue, soak in warm, soapy water before washing.
- **Nonstick Fry Pan:** Wash with warm, soapy water. Avoid abrasive scrubbers to protect the nonstick coating.
- **Oven Lid (Heating Element & Fan):** Do not immerse the lid in water. Wipe the exterior with a damp cloth. For internal splatter on the fan blades or bulb, it may be necessary to partially disassemble the lid with a screwdriver. This is a delicate operation and should only be performed when the unit is unplugged and cool. Exercise extreme caution to avoid damaging components.
- **Handle Care:** The lid handle is crucial for operation and lifting. While robust, avoid excessive force when lifting the hot lid. Consider using two hands or placing the lid directly on the metal extender ring on a heat-resistant surface to reduce stress on the handle.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; Lid handle not fully lowered; Timer not set.	Ensure power cord is securely plugged in. Lower the lid handle completely. Set the timer to the desired cooking duration.
Food not cooking evenly.	Overcrowding; Incorrect rack placement.	Avoid overcrowding the bowl. Ensure proper air circulation around food. Adjust rack height as needed (high rack for browning, low rack for slower cooking).
Oven produces smoke.	Food residue or grease buildup; Fatty foods.	Clean the glass bowl and heating element area thoroughly. For fatty foods, use a drip tray or ensure excess fat is trimmed.
Handle feels loose or breaks.	Wear and tear; Improper handling when hot.	Always lift the hot lid carefully, using two hands if necessary. Place the hot lid on a stable, heat-resistant surface or the extender ring. Contact customer support for replacement parts if within warranty.

8. SPECIFICATIONS

- **Brand:** Fagor
- **Model Name:** 670041750
- **Color:** Red
- **Special Features:** Broil, Bake, Roast, Grill, Steam, Air Fry, Dehydrate
- **Control Type:** Knob
- **Door Style:** Lid
- **Included Components:** Grill (racks), Extender Ring, Tongs, Nonstick Fry Pan
- **Door Material Type:** Glass
- **Power Source:** Electric
- **Number of Shelves:** 2 (racks)
- **Product Dimensions:** 15 x 10.25 x 15 inches
- **Item Weight:** 12 pounds

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Fagor America website. Keep your purchase receipt as proof of purchase for any warranty claims.

For technical assistance or replacement parts, please contact Fagor customer service. Ensure you have your model number (670041750) and purchase date available when contacting support.