

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [NutriBullet](#) /

› [NutriBullet NBR-1201 12-Piece High-Speed Blender/Mixer System User Manual](#)

## NutriBullet NBR-1201

# NutriBullet NBR-1201 High-Speed Blender/Mixer System User Manual

Model: NBR-1201 | Brand: NutriBullet

## INTRODUCTION

The NutriBullet NBR-1201 is a high-speed blender and mixer system designed to effortlessly pulverize fruits, vegetables, superfoods, and protein shakes into smooth, nutritious beverages. Its powerful 600-watt motor, patented blade design, and cyclonic action work together to extract vital nutrients from your food, supporting a healthier lifestyle. This system is portable, easy to use, and suitable for daily use.

## IMPORTANT SAFEGUARDS

When using any electrical appliance, basic safety precautions should always be observed. Read all instructions carefully before operating the NutriBullet system.

- Do not immerse the power base, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always operate on a flat, stable surface.
- Do not use the appliance for other than intended use.
- This product is manufactured in compliance with US & Canadian Electrical Standards. Do not use with any type of adapter or voltage converter device, nor outside of the United States or Canada. Use of adapters and converters is considered an unauthorized modification and will void the warranty.

## COMPONENTS INCLUDED

The NutriBullet NBR-1201 12-Piece System includes the following components:

- 1 High-torque Power Base (600 Watts)
- 1 Extractor Blade
- 1 Milling Blade
- 1 Tall Cup (24 oz capacity)
- 2 Short Cups (18 oz capacity each)
- 1 Handled Lip Ring
- 1 Regular Lip Ring
- 2 Stay-Fresh Resealable Lids
- 1 User Manual & Cookbook
- 1 Pocket Nutritionist



Image: Overview of the NutriBullet 12-Piece System, showcasing the power base, extractor blade, milling blade, tall cup, short cups, lip rings, and resealable lids. Two cups are shown with prepared smoothies.



Image: The NutriBullet 12-Piece System components laid out, including the power base, various cups, and blades, all empty and ready for use.

## SETUP

Before first use, wash all parts except the Power Base in warm soapy water. Rinse and dry thoroughly. The cups and blades are dishwasher safe (top rack only).

1. Place the Power Base on a clean, dry, and level surface.
2. Ensure the Power Base is unplugged from the electrical outlet.
3. Select the appropriate cup (Tall or Short) and blade (Extractor or Milling) for your recipe.



Image: A close-up view of the NutriBullet power base, highlighting its compact design and the area where the cup and blade assembly connect.



Image: An alternative close-up of the NutriBullet power base, showing its sleek gray finish and stable base.

## OPERATING INSTRUCTIONS

The NutriBullet is designed for simple and efficient operation.

- 1. Load Ingredients:** Add your desired ingredients into the Tall or Short Cup. Do not fill past the MAX line.
- 2. Add Liquid:** Always add liquid (water, milk, juice, etc.) to your ingredients.
- 3. Attach Blade:** Screw the Extractor Blade or Milling Blade onto the cup until it is tightly sealed.
- 4. Place on Power Base:** Invert the cup and blade assembly and place it onto the Power Base.
- 5. Activate:** Push down on the cup and twist clockwise to activate the motor. The NutriBullet will begin blending.
- 6. Blend:** Blend until your desired consistency is reached. Most smoothies are ready in under 60 seconds.
- 7. Deactivate:** To stop blending, push down on the cup and twist counter-clockwise. Lift the cup assembly off the Power Base.
- 8. Serve:** Unscrew the blade from the cup. You can attach a Lip Ring for comfortable drinking or a Stay-Fresh Resealable Lid for storage.



Image: A person demonstrating how to load ingredients, including leafy greens, fruits, nuts, and liquid, into the NutriBullet cup before blending.



Image: A user holding a NutriBullet cup with a freshly prepared smoothie, indicating the end result of the blending process.



Image: The NutriBullet system set up on a kitchen counter, with a bowl of fresh ingredients nearby and a person holding a cup, ready to enjoy their blended creation.

## CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and hygiene of your NutriBullet system.

- **Cups and Lids:** The cups and lids are dishwasher safe (top rack only). You can also hand wash them with warm soapy water.
- **Blades:** Twist off the blade from the cup. Rinse the blade with soap and water immediately after use to prevent food from drying on it. The blades are also dishwasher safe (top rack only).
- **Power Base:** Never immerse the Power Base in water or any other liquid. Wipe the Power Base clean with a damp cloth. If necessary, use a mild dish soap on the cloth.
- **Storage:** Store the NutriBullet system in a clean, dry place when not in use.



Image: A detailed view of the NutriBullet extractor blade, showing its sharp stainless steel construction designed for efficient blending.

## TROUBLESHOOTING

If you encounter issues with your NutriBullet, refer to these common solutions:

Problem	Possible Cause	Solution
Motor does not start.	Not properly assembled or plugged in.	Ensure the cup and blade assembly is securely twisted onto the Power Base. Check if the unit is properly plugged into a working electrical outlet.
Leaking during blending.	Blade not tightened enough or cup overfilled.	Ensure the blade is screwed on tightly to the cup. Do not fill ingredients past the MAX line. Check the gasket on the blade for damage.

Problem	Possible Cause	Solution
Unit stops during operation.	Overheating due to continuous use or too thick ingredients.	Unplug the unit and let it cool down for 15-20 minutes. Reduce the amount of ingredients or add more liquid. Do not operate for more than 1 minute continuously.
Loud noise or burning smell.	Motor strain or foreign object.	Immediately unplug the unit. Check for any foreign objects in the blade or cup. If the issue persists after cooling, contact customer support.

## SPECIFICATIONS

- Model:** NBR-1201
- Wattage Output:** 600 Watts
- Number of Speeds:** 1
- Capacity (volume):** 24 Fluid Ounces (Tall Cup), 18 Fluid Ounces (Short Cups)
- Appliance Capabilities:** Blends, Grinds, Chops, Shreds
- Material:** BPA-Free Plastic (Cups), Stainless Steel (Blades)
- Care and Cleaning:** Dishwasher Safe Parts (Top Rack)
- Base Dimensions:** 5.375" Diameter x 8" Height
- Item Weight:** 3.6 lbs
- Color:** Gray
- Power Source:** AC/DC
- Voltage:** 120V
- Manufacturer:** Homeland Housewares
- UPC:** 898078001285

## WARRANTY AND SUPPORT

The NutriBullet NBR-1201 comes with a **1-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please refer to the included User Manual & Cookbook for full warranty details and limitations.

For technical support, troubleshooting assistance, or warranty claims, please contact NutriBullet Customer Service. Contact information can typically be found on the official NutriBullet website or within the product packaging.