

[manuals.plus](#) /› [Waring](#) /› [Waring Commercial Food Processor Adjustable Slicing Disc User Manual](#)

Waring WFP14S10

Waring Commercial Food Processor Adjustable Slicing Disc User Manual

Model: WFP14S10

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Waring Commercial Food Processor Adjustable Slicing Disc, Model WFP14S10. This disc is designed to enhance the versatility of compatible Waring Commercial Food Processors (WFP14S, WFP14SC, and WFP14SW models) by providing precise and adjustable slicing capabilities for various food items.

2. PRODUCT OVERVIEW

The Waring Commercial Adjustable Slicing Disc is a high-quality accessory crafted from durable stainless steel. It allows users to achieve consistent slices for a wide range of ingredients, from vegetables and fruits to other food items suitable for processing. Its design prioritizes ease of use and cleaning.

Key Features:

- Adjustable slicing capability for varied thickness.
- Constructed from high-quality stainless steel for durability and hygiene.
- Specifically designed for seamless integration with Waring Commercial Food Processor models WFP14S, WFP14SC, and WFP14SW.
- Ideal for preparing ingredients for recipes, salads, and buffets.
- Removable components for easy handling and dishwasher-safe for convenient cleaning.



Figure 2.1: Top view of the Waring Commercial Adjustable Slicing Disc, showing the central hub and slicing blade.



Figure 2.2: Bottom view of the Waring Commercial Adjustable Slicing Disc, illustrating the adjustable mechanism.

3. SETUP AND INSTALLATION

Before installing the adjustable slicing disc, ensure your Waring Commercial Food Processor is unplugged and all components are clean and dry. Refer to your food processor's main instruction manual for specific safety guidelines and assembly steps.

- 1. Safety First:** Always ensure the food processor is unplugged from the power outlet before handling any blades or discs.
- 2. Prepare the Work Bowl:** Place the food processor's work bowl onto the motor base, ensuring it is securely locked into position.
- 3. Install the Stem:** If your food processor model requires a stem for disc attachment, place the stem onto the drive shaft in the center of the work bowl.
- 4. Attach the Slicing Disc:** Carefully place the adjustable slicing disc onto the stem (or directly onto the drive shaft if no stem is used), ensuring it sits flat and securely. The sharp edge of the blade should be facing upwards.
- 5. Adjust Slicing Thickness:** Locate the adjustment mechanism on the disc (refer to Figure 2.2). Rotate or slide the mechanism to select your desired slicing thickness. Ensure the mechanism is locked into place before operation.
- 6. Secure the Cover:** Place the food processor cover onto the work bowl and lock it securely. Ensure the feed tube is clear.
- 7. Power On:** Once fully assembled, you may plug in the food processor.

4. OPERATING INSTRUCTIONS

This adjustable slicing disc is designed for efficient and consistent slicing. Always operate the food processor according to its main instruction manual.

- 1. Pre-Preparation:** Wash and peel (if necessary) the food items you intend to slice. Cut larger items into pieces that fit comfortably into the food processor's feed tube.
- 2. Load Food:** With the food processor assembled and the slicing disc installed, place the food items into the feed tube. Do not overfill.
- 3. Process:** Turn on the food processor. Use the food pusher to guide the food through the feed tube and onto the rotating

slicing disc. Apply even, gentle pressure. Do not force food through.

4. **Monitor:** Observe the slicing process. Once all food is sliced, turn off the food processor.
5. **Unload:** Unplug the food processor. Carefully remove the cover, then the slicing disc, and finally the work bowl to access the sliced food.

Tips for Best Results:

- For softer foods (e.g., tomatoes), chill them slightly before slicing for cleaner cuts.
- For firmer foods (e.g., carrots, potatoes), ensure they are cut to fit the feed tube without excessive force.
- Always use the food pusher. Never use your hands or other utensils to push food into the feed tube while the motor is running.

5. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your adjustable slicing disc and ensure optimal performance.

- **Immediate Cleaning:** After each use, unplug the food processor and carefully remove the slicing disc. Rinse it immediately under warm running water to remove any food residue.
- **Dishwasher Safe:** The adjustable slicing disc is dishwasher-safe. Place it on the top rack of your dishwasher.
- **Hand Washing:** If hand washing, use warm, soapy water and a non-abrasive sponge or brush. Exercise extreme caution when handling the sharp blade.
- **Drying and Storage:** Thoroughly dry the disc before storing to prevent water spots or corrosion. Store it in a safe place where the blade cannot cause injury.
- **Regular Inspection:** Periodically inspect the disc for any signs of wear, damage, or dullness. A dull blade may affect slicing performance.

6. TROUBLESHOOTING

If you encounter issues with your adjustable slicing disc, consider the following common solutions:

Problem	Possible Cause	Solution
Uneven slices or shredding	Disc not properly installed; food not firm enough; dull blade.	Ensure disc is securely seated. Chill softer foods. Inspect blade for sharpness.
Food processor not starting with disc installed	Lid or work bowl not properly locked; disc not seated correctly.	Verify all food processor components are securely locked. Re-seat the slicing disc.
Difficulty adjusting slicing thickness	Food residue or debris in the adjustment mechanism.	Clean the disc thoroughly, paying attention to the adjustment area.

If troubleshooting steps do not resolve the issue, please contact Waring Commercial customer support or refer to your food processor's main manual for further assistance.

7. SPECIFICATIONS

Attribute	Detail
Model Number	WFP14S10
Material	Stainless Steel

Attribute	Detail
Color	Silver
Product Dimensions	5.7 x 2.5 x 5.6 inches
Item Weight	0.72 Pounds (11.52 ounces)
Compatibility	Waring Commercial Food Processor models WFP14S, WFP14SC, WFP14SW
Care Instructions	Dishwasher Safe

8. WARRANTY AND SUPPORT

The Waring Commercial Food Processor Adjustable Slicing Disc comes with a **2-year warranty**. For warranty claims, technical support, or replacement parts, please contact Waring Commercial customer service directly. Keep your purchase receipt as proof of purchase.

For additional resources and contact information, visit the official Waring Commercial website:

www.waringcommercialproducts.com

© 2024 Waring Commercial. All rights reserved.