

[Manuals.plus](#) /

› [AROMA](#) /

› AROMA® Select Stainless® Rice Cooker User Manual

AROMA ARC-753SG

AROMA® Select Stainless® Rice Cooker User Manual

Model: ARC-753SG

INTRODUCTION

Thank you for purchasing the AROMA Select Stainless Rice Cooker. This appliance is designed to simplify your cooking process, allowing you to prepare perfect rice, steamed meals, and one-pot dishes with ease. Its durable stainless steel inner pot ensures worry-free cooking and superior results. Please read this manual thoroughly before first use to ensure safe and efficient operation.



Image: AROMA Select Stainless Rice Cooker (ARC-753SG)

IMPORTANT SAFEGUARDS

Basic safety precautions should always be followed when using electrical appliances, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plug, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.
- This appliance is for household use only.

PARTS IDENTIFICATION

Familiarize yourself with the components of your rice cooker:

Main Unit: The outer housing of the rice cooker.

Stainless Steel Inner Pot: The removable cooking pot made of food-grade 304 stainless steel.

Glass Lid: Transparent lid with a handle to cover the inner pot during cooking.

Measuring Cup: A standard rice measuring cup (approximately 3/4 U.S. Cup or 180ml).

Serving Spatula: A non-scratch spatula for serving rice.

ACCESSORIES INCLUDED

All accessories can be placed inside the rice cooker for convenience.

INCLUDING



Stainless Steel
Inner Pot



Serving Spatula



Rice Measuring Cup



Image: Included Accessories

SETUP

1. **Unpack:** Carefully remove all packaging materials and accessories.
2. **Clean:** Wash the inner pot, glass lid, measuring cup, and serving spatula thoroughly with warm, soapy water. Rinse

well and dry completely. The stainless steel inner pot and accessories are dishwasher-safe.

3. **Placement:** Place the rice cooker on a dry, level, heat-resistant surface. Ensure there is adequate ventilation around the appliance.

OPERATING INSTRUCTIONS

Cooking White Rice

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of uncooked rice. One full measuring cup yields approximately 2 cups of cooked rice.
2. **Rinse Rice:** Rinse the rice in a separate bowl until the water runs clear. This helps remove excess starch.
3. **Add to Inner Pot:** Place the rinsed rice into the stainless steel inner pot.
4. **Add Water:** Fill the inner pot with water up to the corresponding water line for the number of cups of uncooked rice you added. For example, if you added 2 cups of uncooked rice, fill water to line '2'.
5. **Place Pot in Cooker:** Ensure the exterior of the inner pot is clean and dry, then place it into the main unit of the rice cooker.
6. **Cover:** Place the glass lid securely on the rice cooker.
7. **Start Cooking:** Plug the power cord into a 120V AC electrical outlet. Press the "COOK" switch down. The "COOK" indicator light will illuminate.
8. **Automatic Keep-Warm:** Once the rice is cooked, the cooker will automatically switch to "WARM" mode, and the "WARM" indicator light will illuminate. Do not open the lid during cooking.
9. **Serve:** After the cooker switches to "WARM", allow the rice to rest for 5-10 minutes before serving. This allows for further steaming and results in fluffier rice. Use the serving spatula to fluff and serve.


6 CUP CAPACITY

Cook up to 6 cooked rice cups of white rice.



3 rice cups of
rinsed white rice

+

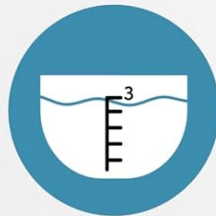

add water to
line 3

+



press the switch

=



6 rice cups
cooked!



Image: 6 Cup Capacity Cooking Process

WHITE RICE CHART

*Cups referenced are with the included measuring cup
1 Rice Measuring Cup = 3/4 U.S. Cup (180ml)

WHITE RICE uncooked	WATER LINE	COOK TIME	COOKED YIELD
1 Cups*	Water Line 1	18-23 Min	2 Cups*
2 Cups*	Water Line 2	20-25 Min	4 Cups*
3 Cups*	Water Line 3	25-30 Min	6 Cups*

Image: White Rice Cooking Chart

Versatile Cooking

Beyond rice, your AROMA Select Stainless Rice Cooker can prepare a variety of dishes:

- **Oatmeal:** Cook perfect oatmeal for breakfast.
- **Soups & Stews:** Prepare delicious one-pot soups, chili, or stews.
- **Pasta:** Cook pasta directly in the inner pot.

ONE-POT MEALS

Perfect rice, grains, and so much more! Simply add ingredients and cover with the lid to enjoy easy meals with the press of a switch.



Image: One-Pot Meal Versatility



Image: Rice Cooker Preparing a Stew

MAINTENANCE & CLEANING

Proper maintenance ensures the longevity and performance of your rice cooker.

1. **Always Unplug:** Before cleaning, always unplug the rice cooker from the electrical outlet and allow it to cool completely.
2. **Inner Pot & Accessories:** The stainless steel inner pot, glass lid, measuring cup, and serving spatula are dishwasher-safe. For hand washing, use warm, soapy water and a non-abrasive sponge or cloth. Rinse thoroughly and dry completely.
3. **Rice Sticking:** While the stainless steel pot is durable and coating-free, some rice may stick to the bottom. Soaking the pot in warm water for a short period will make cleaning easier. Avoid using abrasive cleaners or metal scouring pads on the inner pot.
4. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid.

5. **Storage:** Ensure all parts are clean and dry before storing. Store the rice cooker in a cool, dry place.

SS

304

Select Stainless[®]

Dishwasher-safe, non-reactive and ultra durable.
Free of PFOAs, PFAs, and BPA.



Image: Stainless Steel Inner Pots

TROUBLESHOOTING

If you experience issues with your rice cooker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Rice is too hard or undercooked.	Not enough water; lid not sealed properly; rice not rested after cooking.	Ensure correct water-to-rice ratio. Check lid for proper seating. Allow rice to rest for 5-10 minutes on "WARM" before serving.
Rice is too soft or mushy.	Too much water.	Reduce water slightly for future batches. Ensure rice is rinsed properly.

Problem	Possible Cause	Solution
Rice sticks to the bottom of the pot.	Insufficient water; prolonged "WARM" cycle; not enough oil (optional).	Ensure correct water-to-rice ratio. Unplug the cooker once rice is done if not serving immediately. A small amount of cooking oil can be added to the water before cooking. Soaking the pot in warm water will aid cleaning.
Water boils over during cooking.	Too much water; starchy rice.	Reduce water slightly. Ensure rice is thoroughly rinsed before cooking.
Cooker does not turn on.	Not plugged in; power outage; faulty outlet.	Check power cord connection. Verify power to the outlet. Try a different outlet.

SPECIFICATIONS

- Brand:** AROMA
- Model Name:** Select Stainless Rice Cooker & Warmer
- Model Number:** ARC-753SG
- Capacity:** 3 Cups (Uncooked) / 6 Cups (Cooked)
- Product Dimensions:** 8.2"D x 10.3"W x 8.1"H
- Power Source:** Corded Electric
- Material:** Steel (Inner Pot: Food-grade 304 Stainless Steel)
- Lid Material:** Glass
- Item Weight:** 4.1 Pounds
- Wattage:** 500 watts
- Voltage:** 120 Volts
- Special Feature:** Dishwasher Safe (Inner Pot & Accessories), Automatic Keep Warm
- Included Components:** Inner Pot, Measuring Cup, Rice Cooker, Serving Spatula

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official AROMA website or contact their customer service. You may also find detailed user guides and manuals available for download:

- User Guide (PDF): [Download User Guide](#)
- User Manual (PDF): [Download User Manual](#)

For further assistance, please visit the [AROMA Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B007TNXYYA>

More documents and user manuals: **<https://manuals.plus/>**