



Manuals.plus /

› Moulinex /

› Moulinex Fresh Express 5-in-1 Electric Vegetable Slicer and Grater User Manual (Model DJ755G10)

## Moulinex DJ755G10

# Moulinex Fresh Express 5-in-1 Electric Vegetable Slicer and Grater User Manual (Model DJ755G10)

Brand: Moulinex | Model: DJ755G10

## 1. INTRODUCTION

This user manual provides comprehensive instructions for the safe and efficient operation, maintenance, and care of your Moulinex Fresh Express 5-in-1 Electric Vegetable Slicer and Grater, Model DJ755G10. Please read this manual thoroughly before first use and retain it for future reference.

## 2. SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons.

- Ensure the appliance is unplugged before assembly, disassembly, or cleaning.
- Keep hands and utensils away from moving blades during operation.
- Do not immerse the motor unit in water or any other liquid.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only attachments and accessories recommended by the manufacturer.

## 3. PRODUCT COMPONENTS

The Moulinex Fresh Express DJ755G10 includes the main motor unit, a feeding tube, a pusher, and five color-coded cones for various functions.



**Figure 1:** Overview of the Moulinex Fresh Express DJ755G10 electric vegetable slicer and grater, showing the main unit and the five interchangeable cones.

**Included Cones and Functions:**

# INCLUS AVEC FRESH EXPRESS 5-EN-1



**Figure 2:** Detailed view of the five color-coded cones included with the Fresh Express, illustrating their specific functions: fine grating, thick grating, mandoline slicing, wavy mandoline slicing, and fine vegetable grating.

- **Fine Grater Cone:** For finely grating hard cheeses, carrots, and other firm vegetables.
- **Thick Grater Cone:** For coarsely grating vegetables like carrots, zucchini, or potatoes.
- **Mandoline Slicer Cone:** For uniform slices of vegetables such as cucumbers, potatoes, or onions.
- **Wavy Mandoline Slicer Cone:** For decorative wavy slices of vegetables.
- **Fine Vegetable Grater Cone:** Specifically designed for fine shredding of vegetables like cabbage or zucchini for salads.

## 4. SETUP AND ASSEMBLY

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all components listed in Section 3 are present.
2. **Attach Feeding Tube:** Align the feeding tube with the motor unit and twist until it locks securely into place.

3. **Insert Cone:** Select the desired color-coded cone for your task. Insert the cone into the feeding tube, ensuring it is seated correctly.
4. **Position Pusher:** Place the pusher into the feeding tube.
5. **Connect Power:** Plug the appliance into a suitable electrical outlet (240 Volts).



Figure 3: The large feeding tube design facilitates easy insertion of vegetables, minimizing pre-cutting.

## 5. OPERATING INSTRUCTIONS

1. **Prepare Ingredients:** Wash and peel vegetables as needed. Cut larger items to fit into the feeding tube if necessary, though the large opening accommodates most vegetables.
2. **Place Receptacle:** Position a bowl or plate directly under the outlet of the appliance to collect the processed ingredients. The direct service system ensures ingredients fall directly into your serving dish.
3. **Start Appliance:** Press and hold the power button to activate the appliance. The motor operates at 150 Watts.
4. **Feed Ingredients:** Gently push the vegetables into the feeding tube using the pusher. Do not force ingredients, as

this may damage the motor or blades.

5. **Stop Appliance:** Release the power button to turn off the appliance.



**Figure 4:** The direct service system allows processed ingredients to fall directly into your chosen bowl, ready for immediate use.

# DÉCOUPE-LÉGUMES ÉLECTRIQUE 5-EN-1

## TRANCHER, RÂPER ET ÉMINCER



Figure 5: The appliance in use, demonstrating its capability to prepare various vegetables for different dishes.

## 6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your Moulinex Fresh Express.

1. **Unplug Appliance:** Always unplug the appliance from the power outlet before cleaning.
2. **Disassemble:** Remove the feeding tube and the cone from the motor unit.
3. **Wash Components:** The feeding tube, pusher, and all five cones are dishwasher-safe. Alternatively, wash them by hand with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry.
4. **Clean Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water.
5. **Storage:** Store the appliance and its accessories in a dry place. The cones can be compactly stored within the appliance itself, and the cord is retractable for easy storage.

## COMPATIBLE LAVE-VAISSELLE FACILE À NETTOYER ET À RANGER



**Figure 6:** Removable parts, including the cones and feeding tube, are dishwasher-safe for convenient cleaning.

## GAIN DE PLACE SYSTÈME DE RANGEMENT DES CÔNES ET ENROULEMENT DU CORDON



Figure 7: The appliance features integrated storage for the cones and a retractable cord for compact and tidy storage.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in. Power button not held down. Cone or feeding tube not correctly assembled.	Ensure the appliance is securely plugged into a working outlet. The appliance requires the power button to be continuously pressed during operation. Check that the feeding tube and cone are properly locked into place.
Ingredients are not processed efficiently.	Incorrect cone selected for ingredient type. Ingredients too large or too soft. Overfilling the feeding tube.	Refer to Section 3 for appropriate cone usage. Cut larger ingredients to fit comfortably. For softer ingredients, ensure they are firm enough to be processed. Feed ingredients gradually.
Excessive vibration or noise.	Improper assembly of components. Foreign object inside the feeding tube or cone.	Disassemble and reassemble all parts, ensuring they are securely locked. Unplug the appliance and check for any obstructions.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Moulinex
Model Number	DJ755G10
Color	Cherry Red/White
Dimensions (L x W x H)	28 x 16 x 26.2 cm
Weight	1.4 Kilograms
Power	150 Watts
Voltage	240 Volts
Number of Accessories	5 (interchangeable cones)
Dishwasher Safe Parts	Yes (removable parts)
Country of Origin	France



28 cm



Figure 8: Diagram illustrating the dimensions of the Moulinex Fresh Express unit.

## 9. WARRANTY AND SUPPORT

Moulinex is committed to the durability and reparability of its products.

- **Repairability:** This product benefits from a 15-year reparability commitment at a fair price, supported by a network of 6,200 repairers worldwide. This initiative aims to contribute to environmental protection and waste reduction.
- For further assistance, spare parts, or to locate a service center, please visit the official Moulinex website or contact

their customer support.

- You can also visit the Moulinex Brand Store for product information and support.

