

Manuals.plus /

› Bosch /

› Bosch Raclette Grill 1200 Watt 8 Persons - Instruction Manual

Bosch 2000

Raclette Grill Instruction Manual

Model: 2000 | Brand: Bosch

1. INTRODUCTION

Thank you for choosing the Bosch Raclette Grill, Model 2000. This appliance is designed for preparing delicious raclette dishes and grilling various foods for up to 8 persons. Please read this instruction manual carefully before first use to ensure safe and optimal operation. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or heating unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

This product has been tested and certified for safety. Look for the following marks:



Image: TÜV SÜD and GS (Geprüfte Sicherheit) certification marks, indicating tested safety and quality.

3. PRODUCT OVERVIEW

The Bosch Raclette Grill consists of several key components designed for versatile cooking.



Image: The complete Raclette Grill set, showing the main unit with the grill plate, eight individual raclette pans, and wooden spatulas.

Components:

- **Main Unit:** Houses the heating element and provides a stable base.
- **Grill Plate:** Non-stick surface for grilling meats, vegetables, and other items.
- **Raclette Pans (8x):** Small, individual non-stick pans for melting cheese or cooking small portions.
- **Wooden Spatulas:** For handling food in the raclette pans and on the grill plate without scratching the non-stick coating.
- **Temperature Control Knob:** To adjust the heating intensity.
- **Drip Tray:** Collects excess fats and liquids (integrated or removable, depending on model).



Image: Detailed views highlighting the non-stick grill surface with a "Teflon" label, the temperature control knob (0 to MAX), and the underside of the unit showing the power cord and ventilation.

4. SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for storage or disposal.
2. **Initial Cleaning:** Before first use, wipe the grill plate and raclette pans with a damp cloth. Dry thoroughly. The grill plate and pans are non-stick, so avoid abrasive cleaners or scourers.
3. **Placement:** Place the raclette grill on a stable, heat-resistant, and level surface. Ensure there is sufficient space around the appliance for ventilation and to prevent heat damage to surrounding objects.
4. **Power Connection:** Ensure the temperature control knob is set to "0" (off) before plugging the appliance into a grounded 230V AC power outlet.

5. OPERATING INSTRUCTIONS

1. **Preheating:** Plug in the appliance. Turn the temperature control knob to the desired setting (e.g., MAX for faster preheating). Allow the grill to preheat for approximately 10-15 minutes. The indicator light will illuminate when the unit is on.
2. **Using the Grill Plate:** Place thinly sliced meats, vegetables, or other grillable items directly onto the preheated grill plate. Cook to your desired doneness.
3. **Using the Raclette Pans:** Place cheese, pre-cooked vegetables, or other small portions into the individual raclette pans. Slide the pans into the designated slots beneath the heating element. The heat from above will melt the cheese or cook the contents.

4. **Serving:** Use the wooden spatulas to remove food from the raclette pans and grill plate. Avoid using metal utensils that could scratch the non-stick coating.
5. **Adjusting Temperature:** Adjust the temperature control knob as needed during cooking. The appliance has 3 settings, from minimum to maximum heat.
6. **Switching Off:** After use, turn the temperature control knob to "0" (off) and unplug the appliance from the wall outlet. Allow the unit to cool completely before cleaning or storing.

6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your raclette grill.

1. **Cool Down:** Always allow the appliance to cool down completely before cleaning.
2. **Grill Plate and Pans:** The non-stick grill plate and raclette pans can be cleaned with warm, soapy water and a soft sponge or cloth. For stubborn food residue, soak them in warm water for a few minutes before cleaning. Rinse thoroughly and dry completely. Do not use abrasive pads, steel wool, or harsh detergents.
3. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit, cord, or plug in water or any other liquid.
4. **Storage:** Once clean and dry, store the raclette grill and its components in a dry place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet faulty; temperature knob set to "0".	Ensure plug is securely in a working outlet. Turn temperature knob to a setting above "0".
Food not cooking evenly.	Insufficient preheating time; uneven food distribution.	Allow sufficient preheating (10-15 minutes). Distribute food evenly on the grill plate.
Smoke or unusual odor during first use.	Protective coating burning off; residual manufacturing oils.	This is normal for first use. Ensure good ventilation. It should dissipate quickly. If it persists, unplug and contact support.

8. SPECIFICATIONS

Model Number: 2000

Power: 1200 Watt

Voltage: 230 Volt

Material: Stainless Steel (base), Non-stick coating (grill plate, pans)

Capacity: 8 Persons

Included Components: Drip tray, Spatulas

Number of Settings: 3

Manufacturer: Bosch

9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Bosch website for your region.

Please have your model number (2000) and purchase date available when contacting support.