

[Manuals.plus](#) /

› [Nordic Ware](#) /

› Nordic Ware 67404H 1 Qt. Microwaveable Sauce Pan User Manual

Nordic Ware 67404H

Nordic Ware 67404H 1 Qt. Microwaveable Sauce Pan User Manual

Model: 67404H | Brand: Nordic Ware

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Nordic Ware 67404H 1-quart microwaveable sauce pan with lid. Designed for convenience, this pan allows for quick reheating and cooking of small food quantities in a microwave oven. It is constructed from durable polycarbonate and is BPA and Melamine free. Please read all instructions carefully before first use and retain this manual for future reference.



Image: The Nordic Ware 1-quart microwaveable sauce pan with its lid, showcasing its white color and integrated handle.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the sauce pan and lid from its packaging. Inspect for any signs of damage.
2. **Initial Cleaning:** Before first use, wash the sauce pan and lid thoroughly by hand with warm, soapy water. Rinse completely and dry.
3. **Placement:** Ensure your microwave oven's turntable is clean and properly seated before placing the sauce pan inside.

OPERATING INSTRUCTIONS

General Microwave Use

- Place food items into the sauce pan.
- Cover the pan with the provided lid to prevent splattering and aid in even heating.

- Place the covered pan in the center of your microwave's turntable.
- Heat according to your food's instructions or until desired temperature is reached.
- Use the integrated handle to safely remove the hot pan from the microwave. The handle is designed to remain cool to the touch during typical microwave use.

Important Usage Guidelines

- **Capacity:** The pan has a 1-quart capacity. Do not overfill. For optimal performance and to prevent potential damage, *never fill above 2/3rds of the depth*. Overfilling can lead to overheating and material stress.
- **Lid Function:** The lid helps contain steam and prevent splatters. Ensure it is properly seated during microwave operation.
- **Microwave Only:** This product is designed exclusively for microwave use. Do not use on stovetops, in conventional ovens, under broilers, or on grills.
- **Food Safety:** Always ensure food is heated to a safe internal temperature. Stir food halfway through heating for even results.

MAINTENANCE AND CARE

- **Cleaning:** Wash the sauce pan and lid by hand with warm, soapy water after each use. Rinse thoroughly and dry.
- **Dishwasher Warning:** *NEVER wash this product in a dishwasher.* High temperatures and harsh detergents in dishwashers can cause the material to crack or degrade over time.
- **Stains:** For stubborn food stains, a non-abrasive plastic scrubber or sponge can be used. Avoid abrasive cleaners or scouring pads, as these can scratch the surface.
- **Storage:** Store the pan and lid in a clean, dry place when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Pan cracks or shows signs of damage.	Washing in a dishwasher; overfilling the pan (above 2/3rds capacity) leading to overheating.	Always hand wash the pan. Do not fill the pan beyond 2/3rds of its depth to prevent overheating and material stress.
Lid is difficult to remove or secure.	Food residue build-up; slight warping from improper cleaning or extreme temperature changes.	Ensure the lid and pan rim are clean and free of food debris. Avoid exposing the lid to extreme temperature changes.
Food heats unevenly.	Food not stirred; microwave power settings too high or too low.	Stir food halfway through the heating process. Adjust microwave power and time as needed for your specific food item.

SPECIFICATIONS

Model Number: 67404H
Brand: Nordic Ware
Capacity: 1 Quart (approximately 0.95 liters)
Material: Polycarbonate

Color: White

Product Dimensions (D x W x H): 6"D x 9"W x 3.75"H (15.24 cm D x 22.86 cm W x 9.53 cm H)

Item Weight: 11.2 ounces (approximately 317.5 grams)

Features: Microwaveable, includes lid, BPA and Melamine free.

Manufacturer: Nordic Ware - Food Service

UPC: 011172674043

WARRANTY INFORMATION

Nordic Ware products are manufactured to high-quality standards. For specific warranty details, please refer to the packaging or visit the official Nordic Ware website. Keep your purchase receipt as proof of purchase may be required for warranty claims.

CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your Nordic Ware 67404H sauce pan, please contact Nordic Ware customer service directly. You can typically find contact information on the official Nordic Ware website or product packaging.

Official Website: www.nordicware.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question