

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ARB](#) /

› [ARB R/Drawer R/Floor RDRF1355 Instruction Manual](#)

## ARB RDRF1355

# ARB R/Drawer R/Floor RDRF1355 Instruction Manual

Model: RDRF1355

## 1. INTRODUCTION

---

This manual provides essential information for the safe and effective installation, operation, and maintenance of your ARB R/Drawer R/Floor RDRF1355 cargo management system. Please read these instructions thoroughly before proceeding with installation or use to ensure proper function and longevity of the product.

## 2. SAFETY INFORMATION

---

- Always read and understand all instructions before installation and use.
- Ensure the unit is securely mounted to the vehicle's floor according to the installation guidelines to prevent movement during transit.
- Do not exceed the maximum weight capacity of the drawer or the roller floor. Refer to the specifications section for details.
- Secure all cargo within and on top of the drawer system to prevent shifting during vehicle movement, which could cause injury or damage.
- Keep hands and fingers clear of moving parts, especially when opening or closing the drawer.
- Regularly inspect the unit for any signs of wear, damage, or loose fasteners. Address any issues promptly.

## 3. PACKAGE CONTENTS

---

Verify that all components are present and undamaged before beginning installation. The package should contain:

- ARB R/Drawer R/Floor RDRF1355 unit
- Mounting hardware kit (bolts, washers, nuts, brackets)
- Keys for drawer lock (if applicable)
- Instruction manual (this document)

*Note: Specific contents may vary slightly. Contact your dealer if any parts are missing or damaged.*

## 4. SETUP AND INSTALLATION

---

Proper installation is critical for the safety and performance of your ARB R/Drawer R/Floor system. It is recommended that installation be performed by a qualified technician if you are unsure of any steps.

1. **Prepare Vehicle Cargo Area:** Clear the vehicle's cargo area of any existing mats, liners, or obstructions. Ensure the surface is clean and dry.
2. **Position the Unit:** Carefully place the ARB R/Drawer R/Floor unit into the desired position in the vehicle's cargo area. Ensure it is centered and aligned as required.
3. **Mark Mounting Points:** Using the provided mounting brackets and the unit's base, mark the drilling locations on the vehicle's floor. Ensure no critical vehicle components (fuel lines, wiring, etc.) are beneath the drilling points.
4. **Drill Mounting Holes:** Drill pilot holes and then the appropriate size holes as indicated in the mounting hardware instructions. Deburr any sharp edges.
5. **Secure the Unit:** Attach the ARB R/Drawer R/Floor unit to the vehicle floor using the supplied mounting hardware. Tighten all bolts securely, but do not overtighten.
6. **Final Inspection:** Verify that the unit is firmly secured and does not move. Check that the drawer slides smoothly and locks correctly.



This image illustrates the ARB R/Drawer R/Floor RDRF1355 system installed in the rear cargo area of a vehicle. The drawer unit is securely mounted, providing a stable platform. A portable refrigerator is shown strapped down to the top of the drawer system, demonstrating how cargo can be safely transported. A vehicle's rear spare tire carrier is also visible on the left.

## 5. OPERATING INSTRUCTIONS

---

- **Opening the Drawer:** Locate the latch or handle on the front of the drawer. Engage the release mechanism and pull the drawer outwards until it fully extends.
- **Closing the Drawer:** Push the drawer firmly inwards until it is fully retracted and the latch engages, securing it in the closed position. Ensure it is properly latched before driving.
- **Locking Mechanism:** If your unit includes a lock, use the provided key to secure the drawer in the closed position. This helps prevent unauthorized access and accidental opening.
- **Cargo Loading:** Distribute weight evenly within the drawer and on the roller floor. Always secure items using tie-down points or cargo barriers to prevent movement during transit.

- **Weight Capacity:** Adhere strictly to the specified weight limits for both the drawer and the top roller floor to prevent damage to the unit or vehicle.

## 6. MAINTENANCE

---

Regular maintenance will ensure the smooth operation and longevity of your ARB R/Drawer R/Floor system.

- **Cleaning:** Clean the drawer interior and exterior with a mild detergent and water. Avoid abrasive cleaners. Wipe down the roller slides to remove dirt and debris.
- **Lubrication:** Periodically apply a silicone-based lubricant to the drawer runners and moving parts to ensure smooth operation. Do not use oil-based lubricants as they can attract dirt.
- **Inspection:** Regularly check all mounting bolts and fasteners for tightness. Inspect the drawer slides, latch mechanism, and overall structure for any signs of wear, damage, or corrosion.
- **Damage:** If any damage is observed, discontinue use and contact ARB support or a qualified technician for repair.

## 7. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Drawer is difficult to open or close	Dirt/debris in runners, lack of lubrication, overloaded drawer, bent runner.	Clean runners, apply silicone lubricant, reduce load, inspect for damage.
Drawer does not latch securely	Obstruction, misaligned latch, damaged latch mechanism.	Clear obstruction, check alignment, inspect latch for damage.
Unit feels loose or rattles	Loose mounting bolts, unsecured cargo.	Tighten all mounting bolts, ensure all cargo is secured.

## 8. SPECIFICATIONS

---

**Model Number:** RDRF1355

**Brand:** ARB

**Manufacturer:** ARB

**Item Weight:** 121 pounds (approximate)

**Product Dimensions (External):** 55.51 x 21.65 x 14.57 inches (Length x Width x Height)

**Internal Drawer Dimensions (Approximate):** 49 x 17 x 10 inches (Length x Width x Height)

**Material:** Durable construction for off-road use

## 9. WARRANTY AND SUPPORT

---

For warranty information, technical support, or to purchase replacement parts, please contact your authorized ARB dealer or visit the official ARB website. Keep your proof of purchase for warranty claims.