

[Manuals.plus](#) /

› [Fasco](#) /

› Fasco D1041 1/15 HP OEM Replacement Motor Instruction Manual

Fasco D1041

Fasco D1041 1/15 HP OEM Replacement Motor Instruction Manual

Model: D1041 | Brand: Fasco

INTRODUCTION

This manual provides essential information for the safe and efficient installation, operation, and maintenance of your Fasco D1041 1/15 HP OEM Replacement Motor. Please read these instructions thoroughly before attempting to install or operate the motor. Retain this manual for future reference.

The Fasco D1041 is a Permanent Split Capacitor (PSC) motor designed for various applications requiring a 1/15 horsepower motor. It features a 1/2-inch x 7-1/8-inch shaft and operates at 1075 RPM with a 265 Volt power supply.

SAFETY INSTRUCTIONS

WARNING: Risk of electric shock, fire, or injury. Always disconnect power before installing, servicing, or cleaning this motor.

- Ensure all electrical connections comply with local and national electrical codes.
- Only qualified personnel should perform installation and servicing.
- Verify that the power supply voltage matches the motor's rated voltage (265 Volts).
- Do not operate the motor in wet or damp conditions unless specifically designed for such environments.
- Keep hands, clothing, and tools clear of moving parts during operation.
- Ensure proper grounding to prevent electrical hazards.
- Protect the motor from excessive dust, debris, and corrosive atmospheres.

PACKAGE CONTENTS

Upon unpacking, verify that the following item is present and undamaged:

- Fasco D1041 1/15 HP OEM Replacement Motor (1 unit)

If any components are missing or damaged, contact your supplier immediately.

SETUP AND INSTALLATION

Proper installation is crucial for the motor's performance and longevity.

1. Mounting

- Mount the motor securely to a stable, vibration-free surface using appropriate fasteners.
- Ensure adequate ventilation around the motor to prevent overheating.
- Align the motor shaft precisely with the driven component to avoid undue stress on bearings. The shaft dimension is 1/2-inch x 7-1/8-inch.

2. Electrical Connections

1. **Disconnect Power:** Ensure the main power supply is OFF before making any electrical connections.
2. **Verify Voltage:** Confirm that the power source is 265 Volts, matching the motor's rating.
3. **Wiring:** Connect the motor wiring according to the wiring diagram provided on the motor label or within the equipment it is replacing. Ensure all connections are tight and insulated.
4. **Grounding:** Connect the motor to an appropriate ground according to local electrical codes.



Image: Fasco D1041 1/15 HP OEM Replacement Motor. This image displays the motor unit, highlighting its compact design and electrical connection points. The shaft is visible, extending from one end of the motor housing.

OPERATING INSTRUCTIONS

1. **Pre-Operation Check:** Before applying power, double-check all mounting and electrical connections. Ensure

no obstructions are present around the motor shaft or cooling vents.

- 2. **Power On:** Restore power to the circuit.
- 3. **Start-up:** Activate the motor via its control switch. The motor should start smoothly and reach its operating speed of 1075 RPM.
- 4. **Monitoring:** During initial operation, observe the motor for any unusual noises, vibrations, or excessive heat. If any anomalies are detected, immediately shut off power and investigate.
- 5. **Shut-down:** Deactivate the motor via its control switch.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the motor's lifespan.

- **Cleaning:** Periodically clean the exterior of the motor, especially the cooling fins and vents, to prevent dust and debris buildup. Use a soft brush or compressed air. Ensure power is disconnected before cleaning.
- **Inspection:** Regularly inspect the motor for signs of wear, damage, or loose connections. Check mounting bolts for tightness.
- **Lubrication:** This motor typically features sealed bearings that do not require periodic lubrication. Refer to the motor label for specific lubrication requirements if any.
- **Environmental Protection:** Ensure the motor is protected from moisture, corrosive chemicals, and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Motor does not start	No power supply	Check power source and circuit breaker.
	Incorrect wiring	Verify wiring against diagram.
	Overload protection tripped	Reset overload. Reduce load if necessary.
	Damaged motor winding	Consult a qualified technician for repair or replacement.
Motor runs hot	Insufficient ventilation	Clear obstructions from vents. Ensure proper airflow.
	Overload condition	Reduce mechanical load on the motor.
	High ambient temperature	Ensure operating environment is within specified temperature limits.
	Bearing issues	Consult a qualified technician.
Excessive noise or vibration	Loose mounting	Tighten mounting bolts.
	Misalignment of shaft	Realign motor and driven component.
	Worn bearings	Consult a qualified technician.
	Unbalanced load	Balance the driven load.

For issues not listed or if troubleshooting steps do not resolve the problem, contact a qualified service technician.

SPECIFICATIONS

Brand	Fasco
Model Number	D1041
Horsepower (HP)	1/15 HP
Speed	1075 RPM
Voltage	265 Volts
Shaft Dimension	1/2-inch x 7-1/8-inch
Material	Copper
Manufacturer	Fasco
UPC	815585027669
ASIN	B007VJV4YY

WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or replacement parts, please refer to the official Fasco website or contact your authorized Fasco dealer. Keep your purchase receipt as proof of purchase.

