

[Manuals.plus](#) /

› [Indesit](#) /

› Indesit NCAA 55 Fridge-Freezer User Manual

Indesit 869991603360

Indesit NCAA 55 Fridge-Freezer User Manual

Model: NCAA 55 (869991603360)

1. INTRODUCTION

Thank you for choosing an Indesit appliance. This user manual is designed to provide you with all the necessary information for the safe and efficient use of your new Indesit NCAA 55 freestanding fridge-freezer. Please read these instructions carefully before installing and using the appliance, and keep them for future reference. Proper installation and operation are crucial for the longevity and performance of your appliance.



This image displays the full front view of the Indesit NCAA 55 fridge-freezer, showcasing its sleek white design and two-door configuration with the freezer compartment at the bottom.

2. SAFETY INFORMATION

Your safety and the safety of others are paramount. This manual contains important safety messages that must be read and observed at all times. Failure to follow these instructions may result in serious injury or damage to the appliance.

General Safety

- This appliance is intended for domestic use only.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Ensure adequate ventilation around the appliance. Do not obstruct ventilation openings.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

3. SETUP AND INSTALLATION

Proper installation is essential for the optimal performance and safety of your fridge-freezer. Follow these steps carefully.

Unpacking

- Remove all packaging materials, including polystyrene, plastic bags, and protective films.
- Check the appliance for any transport damage. If damaged, do not plug it in and contact your retailer.

Placement

- Place the appliance on a firm, level floor.
- Ensure there is sufficient space around the appliance for proper ventilation. Refer to the dimensions diagram for clearance requirements.
- Avoid placing the appliance near heat sources such as radiators, ovens, or direct sunlight, as this will increase energy consumption.
- The climate class of this appliance is SN, ST, T, N, meaning it is designed to operate in ambient temperatures ranging from 10°C to 43°C.



The fridge-freezer is shown integrated into a kitchen environment, demonstrating its freestanding nature and how it fits alongside kitchen cabinets and appliances.



This diagram illustrates the precise external measurements of the appliance, indicating its height (157 cm), width (54 cm), and depth (55 cm), crucial for installation planning.

Leveling

- Adjust the front feet to ensure the appliance is level and stable. This prevents vibrations and noise.

Electrical Connection

- Before plugging in, ensure the voltage and frequency indicated on the rating plate match your household power supply.
- The appliance must be properly earthed.
- Do not use extension cords or multiple sockets.
- Allow the appliance to stand upright for at least 2-4 hours before plugging it in. This allows the refrigerant fluid to settle.

First Use

- Clean the interior of the appliance with a damp cloth and a mild detergent. Dry thoroughly.
- After plugging in, allow the appliance to operate for at least 4-6 hours empty before loading food, to ensure it reaches the correct operating temperature.

4. OPERATING INSTRUCTIONS

Understanding the controls and proper food storage techniques will help you maximize the efficiency and lifespan of your appliance.

Temperature Control

- The temperature of the refrigerator compartment is controlled by a thermostat dial located inside the fridge.
- Settings typically range from 1 (warmest) to 5 (coldest). A setting of 3 or 4 is generally recommended for normal use.
- Adjust the setting based on ambient temperature, frequency of door opening, and amount of food stored.



A detailed shot of the internal thermostat dial, used to adjust the temperature settings of the refrigerator, located near the interior light.

Refrigerator Compartment (150 L Net Capacity)

- The refrigerator is equipped with multiple shelves and two vegetable crispers for organized storage.
- The door bins provide convenient storage for bottles and smaller items.
- The interior light illuminates the compartment when the door is open.
- The refrigerator features an antibacterial function to help maintain hygiene.



A closer look at the refrigerator's interior, displaying the arrangement of adjustable shelves and door storage bins, filled with various food items.

Freezer Compartment (67 L Net Capacity)

- The freezer is located at the bottom and has 3 compartments for storing frozen food.
- It has a 4-star rating, suitable for freezing fresh food and long-term storage of pre-frozen items.
- Freezing capacity: 2 kg/24 hours.
- An ice cube holder is included for convenience.



This image provides a view inside the freezer, showing a hand accessing items by lifting a transparent flap, illustrating the design of the freezer compartments.



Both the refrigerator and freezer doors are open, offering a comprehensive view of the internal layout, including glass shelves, vegetable crispers in the fridge, and transparent drawers in the freezer.

5. MAINTENANCE

Regular maintenance ensures your appliance operates efficiently and extends its lifespan.

Cleaning

- Always unplug the appliance before cleaning.
- Clean the interior and exterior surfaces regularly with a soft cloth and a mild, non-abrasive detergent.

- Do not use abrasive cleaners, solvents, or harsh chemicals.
- Clean the door seals regularly to ensure a tight seal.
- Dust the condenser coils at the back of the appliance (if accessible) periodically to maintain efficiency.

Defrosting

- The refrigerator compartment features an automatic defrost system. Frost on the rear wall will melt periodically and drain away.
- The freezer compartment requires manual defrosting when the layer of ice reaches approximately 3-5 mm thickness.
- To defrost the freezer, turn off the appliance, remove all food, and leave the freezer door open. Place towels or a tray to collect melted water.
- Do not use sharp objects or heating devices to remove ice.

Power Outage

- In case of a power outage, keep the doors closed to maintain the internal temperature for as long as possible.
- The appliance can maintain food temperature for a limited time (check specifications for hold time).

6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions.

Problem	Possible Cause	Solution
Appliance does not operate.	No power supply; plug not inserted correctly; fuse blown.	Check power cord connection; check household fuse/circuit breaker.
Appliance is not cold enough.	Temperature setting too high; door opened too frequently; large amount of warm food added; poor ventilation.	Adjust thermostat to a colder setting; avoid frequent door openings; allow hot food to cool before placing in fridge; ensure adequate ventilation.
Excessive noise.	Appliance not level; touching wall or other objects; normal operating sounds.	Adjust leveling feet; move appliance away from walls/objects; gurgling/humming sounds are normal.
Water on the bottom of the refrigerator compartment.	Drain hole blocked.	Clear the drain hole at the back of the refrigerator compartment with a small tool (e.g., pipe cleaner).

If the problem persists after checking these points, please contact qualified service personnel.

7. SPECIFICATIONS

Detailed technical specifications for your Indesit NCAA 55 fridge-freezer.

- **Model:** NCAA 55
- **Product Number:** 869991603360


- **Type:** Freestanding Fridge-Freezer
- **Color:** White
- **Dimensions (H x W x D):** 157 cm x 54 cm x 55 cm
- **Weight:** 58 kg
- **Total Gross Capacity:** 228 L
- **Total Net Capacity:** 217 L
- **Refrigerator Gross Capacity:** 155 L
- **Refrigerator Net Capacity:** 150 L
- **Freezer Gross Capacity:** 73 L
- **Freezer Net Capacity:** 67 L
- **Freezer Star Rating:** 4-star
- **Freezing Capacity:** 2 kg/24h
- **Annual Energy Consumption:** 253 kWh
- **Energy Efficiency Class:** F (formerly A+)
- **Noise Level:** 43 dB
- **Climate Class:** SN, ST, T, N
- **Defrost System (Refrigerator):** Automatic
- **Special Features:** Thermostat, Ice Cube Holder, Antibacterial Function

8. WARRANTY AND SUPPORT

Indesit is committed to providing reliable appliances. Your Indesit NCAA 55 fridge-freezer comes with a manufacturer's warranty.

Warranty Information

This appliance is covered by a **10-year guarantee on the motor and parts**. For full terms and conditions, please refer to the warranty card included with your appliance or visit the official Indesit website.

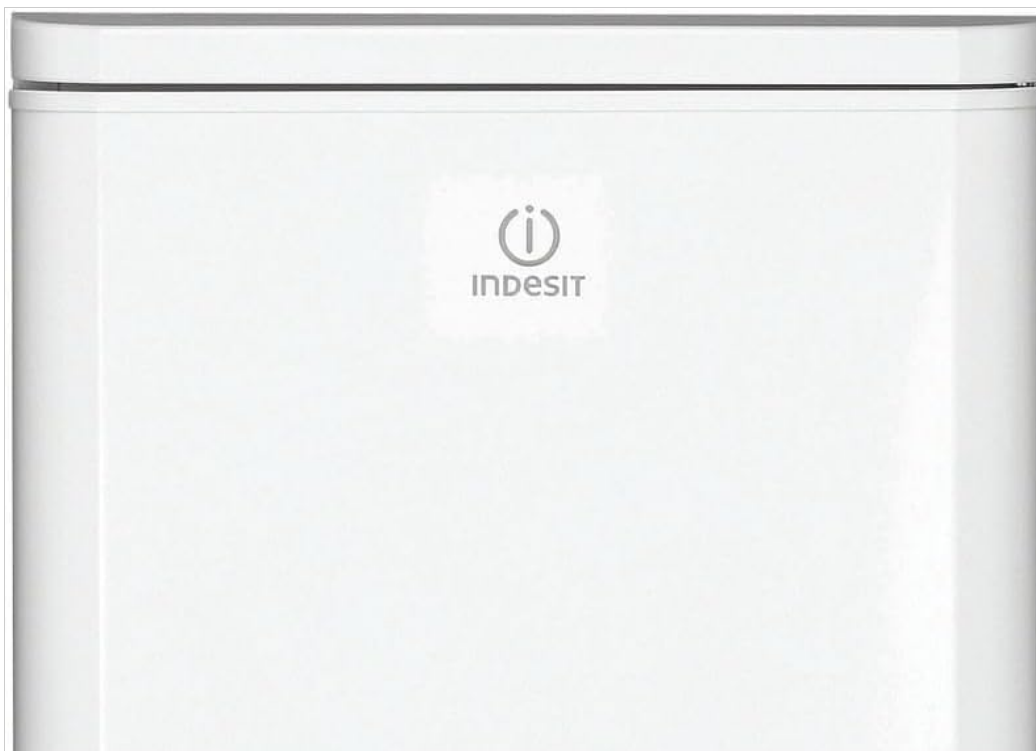

A close-up of the upper part of the appliance, highlighting the Indesit brand logo and a blue circular sticker indicating a 10-year guarantee on the motor and parts.

Customer Support

For technical assistance, spare parts, or to schedule a service appointment, please contact Indesit customer service. Have your appliance's model number and serial number ready when you call. This information can typically be found on a label inside the refrigerator compartment.

You can find contact details for your region on the official Indesit website: www.indesit.com

© 2024 Indesit. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B007VZU3PE>

More documents and user manuals: <https://manuals.plus/>