

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Karlsson](#) /

› [Karlsson Mini Flip Clock User Manual](#)

Karlsson KA5364WH

Karlsson Mini Flip Clock User Manual

Model: KA5364WH

INTRODUCTION

Thank you for purchasing the Karlsson Mini Flip Clock. This automatic flip clock combines classic design with modern functionality, providing an easy-to-read display of time, day, date, and year. This manual provides essential information for setting up, operating, and maintaining your clock to ensure optimal performance and longevity.

PRODUCT OVERVIEW



Figure 1: Front view of the Karlsson Mini Flip Clock, showing the time, day, date, and year display panels, along with the analog clock face.

The Karlsson Mini Flip Clock features a unique automatic flip mechanism for displaying the calendar information. It includes a traditional analog clock for timekeeping and separate panels for the year, month, date, and day of the week. The clock is designed for both wall mounting and tabletop placement.

- **Automatic Flip Mechanism:** Displays day, date, and year.
- **Analog Time Display:** Features a red second hand for precise timekeeping.
- **Durable Casing:** Constructed with a white plastic casing.
- **Versatile Placement:** Suitable for wall mounting or as a tabletop clock.

PACKAGE CONTENTS

Please ensure all items are present before proceeding with setup:

- Karlsson Mini Flip Clock (Model: KA5364WH)

- Set of numbers for manual year adjustment
- User Manual (this document)

Note: 5 AA batteries are required for operation and are not included in the package.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert 5 new AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

2. Initial Time and Date Setting

After battery installation, the clock will begin to operate. You will need to set the correct time and calendar details manually.

1. Setting the Time:

Locate the time adjustment knob on the side or back of the clock. Rotate the knob to set the correct hour and minute. The analog clock will advance, and the flip mechanism for AM/PM will change accordingly.

2. Setting the Date and Day:

The date and day flip automatically. To set them initially, you may need to manually advance the time until the correct date and day are displayed. There is typically a separate mechanism or button to advance the day/date if needed, or it will synchronize as the time is set. Refer to the specific markings on your clock for precise controls.

3. Setting the Year:

The year display is manual. Use the provided year numbers to set the current year. These numbers are typically inserted into slots on the year panel. This adjustment is usually only required once a year.

3. Mounting Options



Figure 2: The Karlsson Mini Flip Clock displayed as a wall-mounted unit.

- **Wall Mount:** Use a suitable screw or hook (not included) in your desired wall location. Align the mounting slot on the back of the clock with the screw/hook and secure it firmly. Ensure the wall can support the clock's weight.
- **Tabletop:** Place the clock on any flat, stable surface.

OPERATING INSTRUCTIONS

Timekeeping

The analog clock continuously displays the current time. The red second hand provides a visual indication of continuous movement.

Calendar Function

The calendar panels automatically flip to display the correct day, date, and month. The AM/PM indicator also updates automatically with the time.

- **Daily Flip:** The day and date will flip over at midnight (12:00 AM).
- **Monthly Flip:** The month will flip over on the 1st of each new month.
- **Year Adjustment:** The year must be changed manually at the beginning of each new year using the provided year numbers.

MAINTENANCE

- **Cleaning:** Wipe the clock's casing and display panels with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Battery Replacement:** Replace all 5 AA batteries when the clock's movement becomes sluggish or stops. It is recommended to replace all batteries at the same time with new, high-quality alkaline batteries.
- **Environment:** Avoid exposing the clock to extreme temperatures, direct sunlight for prolonged periods, or high humidity, as these conditions can affect its performance and lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock is not running or running slowly.	Low or dead batteries. Incorrect battery installation.	Replace all 5 AA batteries with new ones. Ensure batteries are inserted with correct polarity.
Date/Day display is incorrect.	Not set correctly during initial setup.	Manually advance the time until the correct date and day are displayed. Ensure the time is set accurately to allow for proper automatic flipping.
Year display is incorrect.	Year not manually updated.	Manually change the year numbers on the display panel to the current year.
Flip mechanism is stuck or not flipping smoothly.	Dust accumulation. Low battery power.	Gently clean the flip mechanism area with a soft brush or compressed air. Replace batteries if they are low.

SPECIFICATIONS

Feature	Detail
Brand	Karlsson
Model Number	KA5364WH
Color	White
Display Type	Digital (Flip) and Analog
Special Feature	Calendar Display (Day, Date, Month, Year, AM/PM)
Dimensions (W x H x D)	24.5 x 24.5 x 10 cm (9.65"W x 9.65"H)
Power Source	Battery Powered (5 x AA batteries required)
Material	Plastic
Mounting Type	Wall Mount / Tabletop
Item Weight	1.18 kg (2.6 lbs)
Watch Movement	Automatic

WARRANTY AND SUPPORT


Karlsson products are designed for quality and durability. For warranty information and support, please refer to the documentation provided with your purchase or visit the official Karlsson website. Keep your proof of purchase for any warranty claims.

For further assistance, you may contact Karlsson customer support through their official channels. Please have your model number (KA5364WH) ready when contacting support.

Note: Warranty terms and conditions may vary by region and retailer.

Related Documents - KA5364WH

	<p>Karlsson Cuckoo Clock KA5768, KA5964, KA5968 User Manual</p> <p>User manual for Karlsson Cuckoo Clocks models KA5768, KA5964, and KA5968. Provides instructions on setup, operation, cuckoo function, battery replacement, and troubleshooting.</p>
	<p>Karlsson Wall Clock Cuckoo Instruction Manual - KA5768, KA5964, KA5968, KA5867</p> <p>Comprehensive instruction manual for Karlsson Cuckoo Wall Clocks (models KA5768, KA5964, KA5968, KA5867). Learn how to set up, operate, and troubleshoot your cuckoo clock.</p>
	<p>Karlsson KA5652BK/KA5652DW Block Alarm Clock: Instruction Manual & Features</p> <p>Official instruction manual for the Karlsson KA5652BK and KA5652DW Block alarm clock. Learn how to set time, date, alarms, use temperature display, and power saving features.</p>
	<p>Karlsson KA6045 Retro Tube Calendar Flip Clock: Instruction Manual</p> <p>Comprehensive instruction manual for the Karlsson KA6045 Retro Tube Calendar Flip Clock. Covers setup, time and alarm setting, battery installation, maintenance, warranty, and symbol explanations in English.</p>
	<p>Karlsson Grato Cuckoo Wall Clock KA6026 Instruction Manual</p> <p>Detailed instructions for setting up and operating the Karlsson Grato Cuckoo Wall Clock KA6026, including battery installation, time setting, volume control, and bird voice timing.</p>

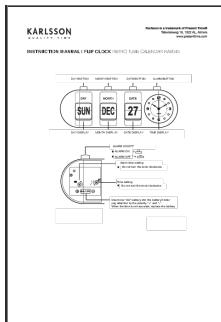

[Karlsson KA6045 Retro Tube Calendar Flip Clock - Instruction Manual](#)

Comprehensive instruction manual for the Karlsson KA6045 Retro Tube Calendar Flip Clock, covering setup, operation, alarm setting, maintenance, and warranty information.

Documents - Karlsson – KA5364WH



[\[pdf\]](#)

Összeszerelési útmutatóFalióra Mini Flip Karlsson BonamiKA5364WH IMf bonami hu 3c c2 3cc281ff079b7c12bbb549d2b73609803b849bff KA5364WH IM útmutatóManuálFalióra BonamiNástenné hodiny Bonamif sk |||

2 3 4 5 6 7 8 ...

lang: **score:14** filesize: 2.59 M page_count: 8 document date: 2011-06-20