

[manuals.plus](#) /› [RM-Series](#) /› [RM-Series Replacement Remote Control for LOGIK LOG19WHD17 User Manual](#)

## RM-Series LOGIK LOG19WHD17

# RM-Series Replacement Remote Control User Manual

Model: **LOGIK LOG19WHD17** | Brand: **RM-Series**

## INTRODUCTION

This RM-Series remote control is specifically designed to serve as a direct replacement for the original LOGIK LOG19WHD17 remote control. It provides 100% functionality, ensuring all original key functions are available and operate as expected. This is a dedicated replacement, not a generic "universal" remote, meaning it requires no complex programming or setup.

Key features include:

- Full functionality of the original remote control.
- Specialized replacement, not a generic universal remote.
- Equipped with an LED indicator for signal transmission.
- No programming or installation required; works immediately out of the box.
- Superior quality construction for reliable performance.



Figure 1: Front view of the RM-Series replacement remote control, showing all buttons and layout.

## SETUP

The RM-Series replacement remote control is designed for immediate use without any complex setup procedures. Simply insert the batteries, and it is ready to operate your LOGIK LOG19WHD17 television.

### Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect battery orientation can prevent the remote from functioning.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote control is ready to be used with your LOGIK LOG19WHD17 television. No pairing or code entry is required.



Figure 2: Angled view of the remote control, illustrating its design and button arrangement.

## OPERATING INSTRUCTIONS

This remote control replicates the full functionality of your original LOGIK LOG19WHD17 remote. Below are common functions and how to use them:

- **Power Button (●):** Located at the top, press to turn the television On or Off.
- **Number Buttons (0-9):** Use these to directly select channels or input numerical values.
- **Volume Up/Down (VOL +/-):** Adjusts the audio volume.
- **Channel Up/Down (CH +/-):** Changes the television channel sequentially.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate menus, select options, and confirm choices. The "OK" button typically confirms a selection.
- **Menu Button:** Accesses the television's main menu for settings and options.
- **Source/Input Button:** Switches between different input sources (e.g., HDMI, AV, USB).
- **Mute Button:** Toggles audio mute On or Off.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** If your television supports media playback, these buttons control media functions.
- **Color Buttons (Red, Green, Yellow, Blue):** These buttons often correspond to specific functions displayed on-screen within menus or interactive services.

Ensure there are no obstructions between the remote control and the television's infrared receiver for optimal performance. The remote operates using infrared (IR) signals.

## MAINTENANCE

---

Proper care and maintenance will extend the life of your remote control.

### Battery Replacement

Replace batteries when the remote's response becomes sluggish or the LED indicator (if present and visible during operation) does not light up consistently. Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries, or different types of batteries.

### Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's electronics or finish.

### Storage

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage and potential damage.

## TROUBLESHOOTING

---

If you encounter issues with your RM-Series replacement remote control, refer to the following common troubleshooting steps:

- **Remote is unresponsive:**
  - Check the batteries. Ensure they are inserted correctly with the correct polarity (+/-) and are not depleted. Replace with fresh batteries if necessary.
  - Ensure there is a clear line of sight between the remote's IR emitter and the television's IR receiver. Obstructions can block the signal.
  - Verify that the television is powered on and not in standby mode.
- **Certain buttons do not work:**

- This is rare for a direct replacement remote. Check if the button is physically stuck or damaged.
- Ensure the function you are trying to use is supported by your specific LOGIK LOG19WHD17 television model.

- **Short operating range:**

- Replace the batteries with new ones. Low battery power can reduce the remote's effective range.
- Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the IR signal.

If these steps do not resolve the issue, please refer to the support information provided with your purchase.

## SPECIFICATIONS

Attribute	Detail
<b>Brand</b>	RM-Series
<b>Manufacturer</b>	RM-Series
<b>Model</b>	LOGIK LOG19WHD17
<b>Part Number</b>	LOGIK LOG19WHD17
<b>Compatible Devices</b>	Television
<b>Connector Type</b>	Infrared
<b>Item Model Number</b>	LOGIK LOG19WHD17
<b>Product Dimensions</b>	22.71 x 5 x 2.39 cm; 86.18 g
<b>ASIN</b>	B007WDJXLA
<b>First Available Date</b>	January 15, 2020



Figure 3: Side view of the remote control, illustrating its physical dimensions.

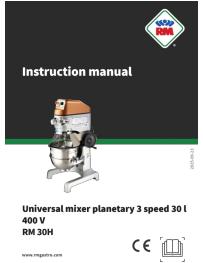
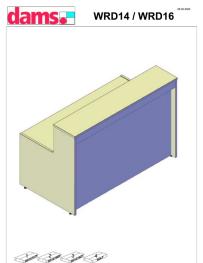
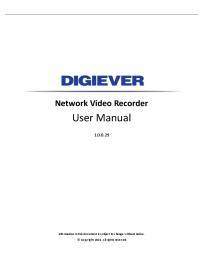
## WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information, please refer to the documentation provided at the time of purchase or contact the seller directly. The standard return policy for this product is 30 days for refund or replacement. For technical support or further assistance, please contact the seller: **On-Line Audio and Electrical Ltd.** You can typically find their contact information through your purchase history on the platform where the item was acquired.

© 2024 RM-Series. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

## Related Documents - LOGIK LOG19WHD17

 <p>Návod k použití Robot univerzální 3 rychlosti 20 l 230 V RM 200H www.rmgastro.com</p> <p>CE</p>	<p><a href="#"><u>Návod k použití Robot univerzální 3 rychlosti 20 l 230 V RM 200H - RM Gastro</u></a></p> <p>Kompletní návod k použití pro robot univerzální RM 200H od RM Gastro. Obsahuje technická data, instalacní pokyny, bezpečnostní opatření, návod k obsluze a údržbě.</p>
 <p>Instruction manual Universal mixer planetary 3 speed 30 l 400 V RM 30H www.rmgastro.com</p> <p>CE</p>	<p><a href="#"><u>RM Gastro RM 30H Universal Planetary Mixer Instruction Manual</u></a></p> <p>Comprehensive instruction manual for the RM Gastro RM 30H Universal Planetary Mixer (30L, 400V). Covers technical data, installation, operation, safety, cleaning, and maintenance for professional use.</p>
 <p>KR-RM Rack/Tower Series UPS (1-10kVA) - Technical Specifications and Features www.KEHUA-UPS.com</p> <p>CE</p>	<p><a href="#"><u>Kehua KR-RM Rack/Tower Series UPS (1-10kVA) - Technical Specifications and Features</u></a></p> <p>Detailed information on the Kehua KR-RM Rack/Tower Series of Uninterruptible Power Supplies (UPS), covering models from 1kVA to 10kVA. Features include true on-line double conversion, green power efficiency, flexible rear panel configuration, hot-swappable batteries, and a user-friendly LCD display. Includes technical specifications for input, output, battery, and communication interfaces.</p>
 <p>POWER SOLID 20KVA RM UPS PS-POU20KR#40BC0K USER MANUAL www.POWEROLID.VN</p>	<p><a href="#"><u>Power Solid KR-RM Series UPS User Manual: 10kVA-40kVA</u></a></p> <p>Comprehensive user manual for Power Solid KR-RM Series Uninterruptible Power Systems (UPS), covering models from 10kVA to 40kVA. Learn about installation, operation, maintenance, safety, and technical specifications.</p>
 <p>dams. WRD14 / WRD16</p>	<p><a href="#"><u>Dams WRD14 / WRD16 Assembly Instructions</u></a></p> <p>Assembly instructions for the Dams WRD14 and WRD16 reception desk. Includes parts list, tools required, and step-by-step assembly guidance.</p>
 <p>DIGIEVER Network Video Recorder User Manual 100-9</p>	<p><a href="#"><u>DIGIEVER Network Video Recorder User Manual</u></a></p> <p>This user manual provides comprehensive instructions for the installation, configuration, and operation of DIGIEVER Network Video Recorders (NVRs). It covers hardware descriptions for various series, LED indicator statuses, connection methods, and detailed guides for local display and remote web browser usage. The manual also includes sections on IP camera settings, recording configurations, disk management, network setup, system management, and troubleshooting.</p>