

[Manuals.plus](#) /

› [AROMA](#) /

› Aroma Housewares Select Stainless Rice Cooker & Warmer ARC-757SG User Manual

AROMA ARC-757SG

Aroma Housewares Select Stainless Rice Cooker & Warmer

MODEL: ARC-757SG

Introduction

This manual provides essential information for the safe and efficient operation of your Aroma Housewares Select Stainless Rice Cooker & Warmer. Please read all instructions carefully before first use and retain for future reference.

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plug, or the appliance body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.
- Always unplug from the base of the wall outlet. Never pull on the cord.
- The rice cooker is for countertop use only.

Parts and Features

Your Aroma Select Stainless Rice Cooker & Warmer includes the following components:

- Rice Cooker Base with Control Panel (Cook/Warm switch)
- 100% Surgical-Grade 304 Stainless Steel Inner Pot
- Tempered Glass Lid with Stay-Cool Knob
- Rice Measuring Cup
- Serving Spatula

ACCESSORIES INCLUDED

Includes a stainless steel inner pot and glass lid, rice measuring cup, and serving spatula.

INCLUDING



Stainless Steel
Inner Pot



Serving Spatula



Rice Measuring Cup



Image: The Aroma Select Stainless Rice Cooker with its stainless steel inner pot, serving spatula, and rice measuring cup displayed alongside.



Select Stainless[®]

Dishwasher-safe, non-reactive and ultra durable.
Free of PFOAs, PFAs, and BPA.



Image: Two stainless steel inner pots, highlighting the durable, non-reactive, and BPA-free material.

Setup

1. Read all instructions and important safeguards.
2. Remove all packaging materials and check that all items have been received in good condition.
3. Wash the inner pot, glass lid, rice measuring cup, and serving spatula in warm, soapy water. Rinse and dry thoroughly.
4. Wipe the exterior of the rice cooker base with a damp cloth. Do not immerse the base in water.
5. Place the rice cooker on a dry, level, heat-resistant surface.

Operating Instructions

Cooking Rice

1. Using the provided measuring cup, measure the desired amount of rice. Rinse rice in a separate bowl until water is relatively clear.
2. Place rinsed rice into the stainless steel inner pot.
3. Add water to the inner pot according to the measurements on the side of the pot or refer to the White Rice Cooking Chart below.
4. Place the inner pot into the rice cooker base. Cover with the glass lid.
5. Plug the power cord into a wall outlet.
6. Press the Cook switch down. The 'Cook' indicator light will illuminate.
7. Once the rice is cooked, the Cook switch will automatically flip up and the 'Warm' indicator light will illuminate.
8. For best results, allow rice to rest on Warm for 5-10 minutes before serving. This allows for further steaming and fluffier rice.
9. Unplug the rice cooker when not in use.

14 CUP CAPACITY

Cook up to 14 cooked rice cups of white rice.

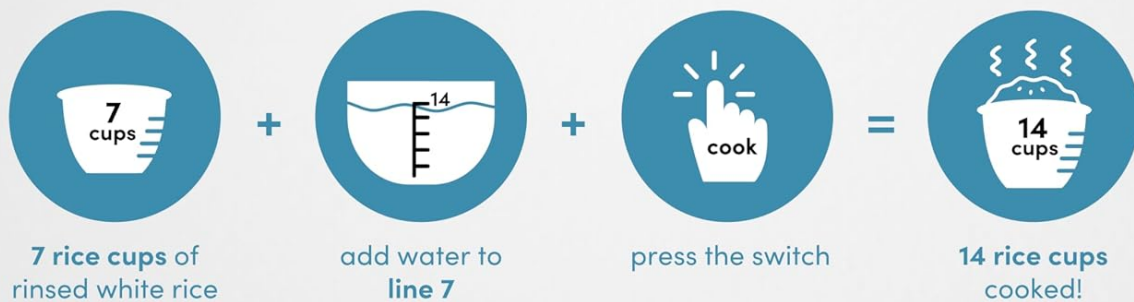


Image: Visual guide for measuring rice and water using the inner pot's markings to achieve up to 14 cups of cooked white rice.

White Rice (uncooked)	Water Line	Cook Time	Cooked Yield
2 Cups*	Water Line 2	15-20 Min	4 Cups*
3 Cups*	Water Line 3	19-24 Min	6 Cups*
4 Cups*	Water Line 4	23-28 Min	8 Cups*
5 Cups*	Water Line 5	28-33 Min	10 Cups*
6 Cups*	Water Line 6	32-37 Min	12 Cups*
7 Cups*	Water Line 7	36-41 Min	14 Cups*

*Cups referenced are with the included measuring cup. 1 Rice Measuring Cup = 3/4 U.S. Cup (180ml).

WHITE RICE CHART

*Cups referenced are with the included measuring cup
1 Rice Measuring Cup = 3/4 U.S. Cup (180ml)

WHITE RICE uncooked	WATER LINE	COOK TIME	COOKED YIELD
2 Cups*	Water Line 2	15-20 Min	4 Cups*
3 Cups*	Water Line 3	19-24 Min	6 Cups*
4 Cups*	Water Line 4	23-28 Min	8 Cups*
5 Cups*	Water Line 5	28-33 Min	10 Cups*
6 Cups*	Water Line 6	32-37 Min	12 Cups*
7 Cups*	Water Line 7	36-41 Min	14 Cups*

Image: A detailed chart outlining the recommended uncooked white rice to water ratios, cooking times, and resulting cooked yields.

Versatile Cooking Options

Beyond rice, your cooker can prepare a variety of one-pot meals, including soups, jambalaya, chili, oatmeal, and more. Simply add your ingredients to the inner pot, cover, and press the Cook switch. The cooker will automatically switch to Warm when cooking is complete.

ONE-POT MEALS

Perfect rice, grains, and so much more! Simply add ingredients and cover with the lid to enjoy easy meals with the press of a switch.



Image: An illustration showcasing the versatility of the rice cooker for preparing various one-pot meals like rice, grains, and other dishes.



Image: The Aroma Rice Cooker filled with a hearty soup, demonstrating its capability for preparing diverse meals.

Maintenance and Cleaning

Proper maintenance ensures the longevity and performance of your rice cooker.

Cleaning the Inner Pot and Accessories

- Always unplug the rice cooker and allow it to cool completely before cleaning.
- The stainless steel inner pot, glass lid, rice measuring cup, and serving spatula are dishwasher safe.
- Alternatively, wash them in warm, soapy water using a sponge or cloth. Rinse thoroughly and dry.
- Do not use abrasive cleaners or scouring pads on the inner pot as they may damage the surface.

Cleaning the Rice Cooker Base

- Wipe the exterior of the rice cooker base with a damp cloth.
- Do not immerse the rice cooker base in water or any other liquid.

- Ensure the heating plate is clean and free of any food debris to ensure proper contact with the inner pot.

Troubleshooting

Problem	Possible Cause	Solution
Rice is too dry/hard after cooking.	Not enough water added; rice not allowed to steam on Warm.	Add a little more water next time; allow rice to rest on Warm for 5-10 minutes after cooking.
Rice is too wet/soggy after cooking.	Too much water added.	Reduce water slightly next time; ensure rice is rinsed properly.
Rice sticks to the bottom of the inner pot.	Insufficient oil or water; rice not rinsed.	Add a small amount of cooking oil to the inner pot before adding rice and water; ensure rice is thoroughly rinsed.
Cooker does not turn on.	Not plugged in; power outage; Cook switch not pressed down.	Ensure power cord is securely plugged into a working outlet; check household circuit breaker; press Cook switch down firmly.

Specifications

- **Brand:** AROMA
- **Model Name:** Select Stainless Rice Cooker & Warmer
- **Model Number:** ARC-757SG
- **Capacity:** 14 Cups (cooked) / 3Qt
- **Product Dimensions:** 9.4"D x 9.6"W x 12.3"H
- **Power Source:** Corded Electric
- **Wattage:** 500 watts
- **Voltage:** 120 Volts
- **Material:** Steel (exterior), 304 Stainless Steel (inner pot)
- **Lid Material:** Stainless Steel, Glass
- **Product Care Instructions:** Dishwasher Safe (inner pot and accessories)
- **Included Components:** Aroma Simply Stainless 14-Cup, Inner Pot, Measuring Cup, Serving Spatula

Warranty and Support

This product comes with a **1 Year Limited Warranty** on parts and labor. For warranty claims, technical support, or product inquiries, please refer to the official Aroma Housewares website or contact their customer service department. Keep your purchase receipt as proof of purchase. For more information, visit the [AROMA Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B007WQ9Z56>

More documents and user manuals: <https://manuals.plus/>