

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Samsonite](#) /

› [Samsonite S'Cure Spinner M \(69 cm - 79 L\) Luggage Instruction Manual](#)

Samsonite 1103

Samsonite S'Cure Spinner M (69 cm - 79 L) Luggage Instruction Manual

Model: 1103

INTRODUCTION

The Samsonite S'Cure Spinner M (69 cm - 79 L) is a lightweight and durable luggage solution designed for travel. Constructed from Flowlite polypropylene, it offers robust protection without excessive weight. This manual provides essential information for the proper use and care of your S'Cure Spinner luggage.

FEATURES

- **Dimensions:** 49 x 29 x 69 cm (79 L capacity), weighing 4.20 kg. Suitable for approximately a one-week trip.
- **Material:** Made in Europe using Flowlite polypropylene for an extremely lightweight yet strong hard shell.
- **Security:** Features a three-point locking system for enhanced security and a seal to minimize moisture penetration.
- **Mobility:** Equipped with smooth-rolling double wheels and a dual tube wheel handle for effortless maneuverability.
- **Interior Organization:** Includes lowered cross ribbons to secure contents, a zipped divider pad, and a large side pocket for organized packing.

SETUP: SETTING YOUR COMBINATION LOCK

Your Samsonite S'Cure Spinner luggage comes with an integrated three-point combination lock. The lock is preset to 0-0-0. To set your personal combination, follow these steps:

1. Ensure the lock is set to the factory default combination (0-0-0) and is unlocked.
2. Locate the reset button, usually a small, recessed button on the side of the lock mechanism. Use a pen or a pointed object to push and hold this button.
3. While holding the reset button, set your desired three-digit combination by turning the dials.
4. Release the reset button. Your new combination is now set. Remember your combination as Samsonite cannot open your lock without it.

Your browser does not support the video tag.

Video: How to Reset Your Combination Lock. This video demonstrates the process of setting or resetting the combination lock on a Samsonite suitcase.

OPERATION

Opening and Closing the Luggage

To open the S'Cure Spinner, ensure the combination lock is set to your personal code. Slide the main lock release mechanism to disengage the three-point locking system. To close, align the two halves of the shell, ensuring the three locking points engage securely, and then scramble the combination dials to lock.

Using the Retractable Handle and Wheels

The dual tube wheel handle extends and retracts with a push-button mechanism located on the top of the handle. Extend the handle to your preferred height for comfortable pulling. The smooth-rolling double spinner wheels allow for 360-degree maneuverability, enabling you to push, pull, or roll the suitcase alongside you with ease.





Image: Front view of the Samsonite S'Cure Spinner M luggage with its retractable handle extended. This shows the overall design and the handle mechanism.



Image: A close-up view of the smooth-rolling double wheels on the Samsonite S'Cure Spinner luggage, highlighting their design for easy movement.

MAINTENANCE

Cleaning Instructions

- **Exterior:** Wipe the hard shell exterior with a soft, damp cloth and mild soap. Avoid abrasive cleaners or solvents that could damage the finish.
- **Interior:** The interior lining can be spot cleaned with a damp cloth and mild detergent. Allow to air dry completely before closing the luggage.
- **Wheels:** Periodically check the wheels for debris (hair, lint, etc.) and clean them to ensure smooth rolling.
- **Zippers/Locks:** Keep zippers and lock mechanisms free of dirt and grit. A silicone-based lubricant can be used sparingly if they become stiff.

Storage

Store your luggage in a cool, dry place away from direct sunlight when not in use. Avoid placing heavy objects on top of the suitcase for extended periods to prevent deformation.

TROUBLESHOOTING

Combination Lock Issues

- **Forgot Combination:** Unfortunately, if you forget your combination, Samsonite cannot provide a master key or reset the lock without damaging the luggage. It is crucial to remember your chosen code.
- **Lock Not Engaging/Disengaging:** Ensure the dials are perfectly aligned with your set combination. If the issue persists, gently try resetting the lock as per the "Setup" instructions. Avoid forcing the mechanism.

Wheel Performance

- **Stiff or Squeaky Wheels:** Clean any accumulated dirt or hair from the wheel axles. A small amount of silicone spray lubricant can improve smoothness.
- **Damaged Wheels:** While designed for durability, extreme impact can damage wheels. Contact Samsonite customer support for potential replacement parts or service.

SPECIFICATIONS

Product Dimensions	27.17 x 11.42 x 27.17 inches (49 x 29 x 69 cm)
Item Weight	9.24 pounds (4.20 Kilograms)
Capacity	79 Liters
Material	Flowlite Polypropylene
Model Number	1103
ASIN	B007WQJPCE
Manufacturer	Samsonite

WARRANTY AND SUPPORT

Samsonite products are rigorously tested to ensure they meet stringent standards. If a problem occurs with this Samsonite product (the "Product") and the problem is caused by manufacturing defects in material and

workmanship, Samsonite will, in its discretion, either repair or replace the Product in accordance with the warranty terms and conditions. The warranty does not cover damage caused by misuse, neglect, accidents, abrasion, exposure to extreme temperatures, solvents, acids, water, normal wear and tear, or transport damage (by airlines, for example).

For warranty claims or support, please visit the official Samsonite website or contact their customer service department. Keep your proof of purchase for warranty validation.

Safety Information: 49307/1041