

OKI C822

OKI C822 Magenta Toner Cartridge User Manual

Model: C822 | Part Numbers: 44844614, 1784193

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your OKI C822 Magenta Toner Cartridge. Please read this manual thoroughly before installation and retain it for future reference. Proper installation and handling ensure optimal print quality and cartridge longevity.

2. SAFETY INFORMATION

- Keep toner cartridges out of reach of children.
- Do not attempt to open, disassemble, or modify the toner cartridge. Toner powder can be harmful if inhaled or ingested.
- Avoid direct contact with toner powder. If contact occurs, wash thoroughly with soap and water.
- Store cartridges in their original packaging in a cool, dry place, away from direct sunlight and extreme temperatures.
- Dispose of used cartridges according to local environmental regulations.

3. SETUP AND INSTALLATION

Follow these steps to correctly install the OKI C822 Magenta Toner Cartridge into your compatible OKI printer.

3.1 Unpacking the Cartridge

1. Carefully remove the new toner cartridge from its packaging.
2. Avoid touching the green drum surface or electrical contacts on the cartridge.
3. Gently rock the cartridge horizontally several times to distribute the toner evenly inside.

3.2 Preparing the Printer

1. Ensure your printer is powered on.
2. Open the front cover or access panel of your printer to expose the toner cartridge slots. Refer to your printer's specific manual for exact instructions on accessing the toner area.
3. Locate the magenta toner slot.

3.3 Installing the Cartridge

1. Remove any protective covers or seals from the new toner cartridge as indicated on the cartridge itself.
2. Align the new magenta toner cartridge with the corresponding slot in the printer.
3. Gently slide the cartridge into the slot until it clicks securely into place. Do not force the cartridge.
4. Close the printer's front cover or access panel. The printer will typically perform a self-test or calibration after installation.



Image 1: OKI C822 Magenta Toner Cartridge. This image displays the OKI C822 Magenta Toner Cartridge alongside its retail packaging. The cartridge is gray with a blue end cap, and the box is white with a prominent red band and the 'OKI' logo.

4. OPERATING INSTRUCTIONS

Once the toner cartridge is installed, your printer is ready for use. The printer's control panel or software will indicate toner levels and any necessary actions.

- **Print Quality:** For best results, use genuine OKI paper and ensure printer settings are appropriate for your document type.
- **Toner Level Monitoring:** Monitor toner levels through your printer's utility software or control panel. Replace the cartridge when the printer indicates low toner or print quality degrades significantly.
- **Print Yield:** The cartridge is designed to provide a specific page yield under standard printing conditions. Actual yield may vary based on print content, paper type, and environmental factors.

5. MAINTENANCE

Proper maintenance ensures consistent performance and extends the life of your printer and toner cartridge.

- **Storage:** Store unused toner cartridges in their sealed packaging in a cool, dark, and dry environment. Avoid exposure to direct sunlight or extreme temperatures.
- **Handling:** Always handle cartridges carefully to prevent damage. Do not shake or drop them excessively.

- **Disposal:** When the cartridge is empty, remove it from the printer and place it in a sealed bag to prevent toner leakage. Recycle the cartridge through an authorized OKI recycling program or local electronic waste disposal facilities. Do not incinerate used cartridges.

6. TROUBLESHOOTING

If you encounter issues after installing your toner cartridge, refer to the following common problems and solutions.

- **Poor Print Quality (Faded, Streaky, or Incomplete Prints):**
 - Gently remove the cartridge and rock it horizontally a few times to redistribute toner. Reinstall it.
 - Check the printer's toner level indicator. The cartridge may be nearing its end of life.
 - Ensure the printer's print settings are appropriate for the document and paper type.
 - Clean the printer's drum unit or fuser unit if recommended by your printer's manual.
- **Cartridge Not Recognized:**
 - Remove the cartridge and check for any protective seals or tapes that may not have been fully removed.
 - Ensure the cartridge is seated correctly and clicks into place.
 - Turn the printer off, wait 30 seconds, then turn it back on.
 - Inspect the electrical contacts on the cartridge and in the printer for any debris or damage.
- **Toner Leaks:**
 - If toner is leaking, carefully remove the cartridge, place it in a plastic bag, and contact OKI support or your supplier.

7. SPECIFICATIONS

Key specifications for the OKI C822 Magenta Toner Cartridge (OEM: 44844614).

Feature	Detail
Brand	OKI
Model Number	44844614
Manufacturer Part Number	1784193
Color	Magenta (Ink Color: Pink)
Page Yield	Approximately 1200 pages
Item Weight	1.32 pounds (600 Grams)
Product Dimensions	0.17 x 0.06 x 0.03 inches
Included Components	Toner Cartridge
Compatible Devices	Printer (OKI C822 series)

8. WARRANTY AND SUPPORT



OKI toner cartridges are manufactured to high-quality standards. For information regarding product warranty, please refer to the official OKI website or the warranty documentation included with your printer.

For technical support, troubleshooting assistance, or to inquire about recycling programs, please contact OKI customer service through their official website or the contact information provided with your printer documentation.

OKI Official Website: www.oki.com

© 2023 OKI. All rights reserved. Information subject to change without notice.

Related Documents - C822

<div><div>PT340/341</div><div>OKI</div><div>User's Guide</div></div>	<div>OKI PT340/341 Thermal Printer User's Guide - Setup and Operation</div> <div>Comprehensive user manual for the OKI PT340/341 thermal printer. Covers installation, operation, paper handling, interface connections, troubleshooting, and maintenance for optimal performance.</div>
<div><div>Complete Full List of OKI® USA-Based Toll-Free Numbers, Full Support & Contact Guide</div></div>	<div>OKI USA Toll-Free Support Numbers: Complete Contact Guide</div> <div>A comprehensive guide to OKI USA's toll-free support numbers, contact methods including phone, live chat, email, and social media, along with tips for efficient customer service.</div>
<div><div>B433/B513</div><div>OKI</div><div>User's Manual</div></div> <div></div>	<div>OKI B433/B513 User's Manual</div> <div>The official User's Manual for OKI B433 and B513 printers. This guide offers detailed instructions on installation, setup, network connectivity (wired, wireless, Wi-Fi Direct), basic and advanced operations, printing from PCs and mobile devices, essential maintenance procedures, and comprehensive troubleshooting tips. Ensure optimal performance and efficient use of your OKI printing devices.</div>
<div><div>B433/B513</div><div>OKI</div><div>Benutzerhandbuch</div></div> <div></div>	<div>OKI B433/B513 Benutzerhandbuch: Installation, Bedienung & Wartung</div> <div>Umfassendes Benutzerhandbuch für den OKI B433/B513 Laserdrucker, das detaillierte Anleitungen zur Installation, Einrichtung, Bedienung, Wartung und Fehlerbehebung bietet.</div>



[OKI Microline 420/421 User's Guide - Operation and Maintenance](#)

Comprehensive user guide for OKI Microline 420 and 421 dot matrix printers, covering setup, operation, maintenance, troubleshooting, and specifications. Learn to maximize printer performance and reliability.



[OKI B2500 MFP User's Guide](#)

Comprehensive user guide for the OKI B2500 MFP multifunction printer, covering installation, operation, copying, scanning, WLAN and USB connectivity, PC software setup (Companion Suite Pro LL), maintenance, troubleshooting, and technical specifications.