

[Manuals.plus](#) /

› [Ardes](#) /

› Ardes 8100 Slicer Instruction Manual

Ardes 8004032081008

Ardes 8100 Slicer Instruction Manual

Model: 8004032081008

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Ardes 8100 Slicer. Please read all instructions carefully before operating the appliance and retain this manual for future reference. The Ardes 8100 is designed for slicing various food items with precision and ease.

Important Safety Information

- Always ensure the slicer is placed on a stable, flat, and dry surface before use.
- Keep hands and fingers away from the blade during operation and cleaning.
- Always use the food pusher to guide food towards the blade. Never use your bare hand.
- Unplug the appliance from the power outlet before cleaning, assembling, or disassembling parts.
- Do not immerse the motor unit in water or any other liquid.
- This appliance is for household use only.

2. SETUP

2.1 Unpacking

Carefully remove the slicer and all its components from the packaging. Retain packaging materials for storage or disposal according to local regulations. Ensure all parts are present and undamaged.

2.2 Placement

Place the Ardes 8100 Slicer on a clean, dry, and stable countertop. The four anti-slip feet on the base will help secure the unit during operation. Ensure there is adequate space around the slicer for safe operation and ventilation.

2.3 Initial Cleaning

Before first use, clean all parts that will come into contact with food. Refer to the "Maintenance and Cleaning" section for detailed instructions. Ensure all parts are completely dry before assembly and use.

2.4 Power Connection

Connect the power cord to a grounded 230V, 50Hz electrical outlet. Ensure the power switch is in the "OFF" position before plugging in the appliance.



Figure 1: Ardes 8100 Slicer. This image shows the overall design of the slicer, highlighting its stainless steel blade, food carriage, and the main body constructed from aluminum and stainless steel. The thickness adjustment knob is also visible.

3. OPERATING INSTRUCTIONS

3.1 Adjusting Slice Thickness

The Ardes 8100 features an adjustable cutting width. Turn the thickness adjustment knob, typically located on the side or back of the slicer, to set your desired slice thickness. Start with a thicker setting and adjust as needed.

3.2 Loading Food

Place the food item (e.g., meat, cheese, bread) firmly onto the food carriage tray. Secure it against the food guide plate using the food pusher. Ensure the food is stable and will not shift during slicing.

3.3 Powering On and Slicing

1. Ensure your hands are clear of the blade.
2. Press the safety button to activate the slicer. The stainless steel blade will begin rotating at 260 RPM.
3. Using the food pusher, gently guide the food item along the carriage towards the rotating blade.
4. Collect the sliced food from the receiving tray. The tray has a travel distance of 252 mm.
5. When finished, release the safety button to turn off the slicer.

Caution: Never attempt to slice frozen foods or foods containing bones, as this can damage the blade and motor.

4. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Ardes 8100 Slicer.

4.1 General Cleaning

- **Always unplug the slicer before cleaning.**
- The product care instructions specify "Hand wash only." Do not place any parts in a dishwasher.
- Wipe the exterior of the slicer with a damp cloth. Do not use abrasive cleaners or scouring pads.
- Remove the food carriage and food pusher for separate cleaning. Wash them with warm, soapy water, rinse thoroughly, and dry completely.

4.2 Blade Cleaning

- Exercise extreme caution when cleaning the stainless steel blade. The blade is very sharp.
- It is recommended to wear cut-resistant gloves during blade cleaning.
- Carefully wipe both sides of the blade with a damp cloth and mild detergent.
- Rinse the blade carefully with a damp cloth to remove all soap residue.
- Dry the blade completely before reassembly or storage to prevent rust.

4.3 Storage

When not in use, store the Ardes 8100 Slicer in a clean, dry place, out of reach of children. Ensure the slice thickness is set to the "0" or fully closed position to protect the blade edge.

5. TROUBLESHOOTING

If you encounter issues with your Ardes 8100 Slicer, please consult the following table before contacting customer support.

Problem	Possible Cause	Solution
Slicer does not turn on.	Not plugged in, power outlet issue, safety button not pressed.	Ensure the power cord is securely plugged into a working 230V outlet. Press the safety button firmly.
Slices are uneven or jagged.	Food not secured, blade dull, incorrect thickness setting.	Ensure food is firmly held by the food pusher. Check blade for sharpness (if dull, professional sharpening may be required). Adjust thickness setting.
Motor sounds strained.	Overloading, attempting to slice hard or frozen items.	Reduce the pressure on the food. Do not slice frozen or excessively hard items. Allow the motor to cool if it has been running for an extended period.

6. SPECIFICATIONS

Feature	Detail
Model	Ardes 8100
Model Number	8004032081008
Power Supply	230V, 50 Hz
Construction Material	Aluminum, Stainless Steel
Blade Material	Stainless Steel
Blade Diameter	22 cm
Cutting Speed	260 RPM
Tray Travel Distance	252 mm
Dimensions (L x W x H)	310 x 490 x 380 mm
Weight	11 kg

Feature	Detail
Care Instructions	Hand wash only
Operating Mode	Automatic

7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact Ardes customer service. Keep your proof of purchase for warranty claims.
You can visit the official Ardes store for more information: [Ardes Official Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question