

[Manuals.plus](#) /

> [Air Wick](#) /

> Air Wick Freshmatic Automatic Air Freshener Spray Dispenser User Manual

## Air Wick ASA-152

# Air Wick Freshmatic Automatic Air Freshener Spray Dispenser

Model: ASA-152

## PRODUCT OVERVIEW

The Air Wick Freshmatic automatic air freshener spray dispenser is designed to provide continuous and long-lasting fragrance in various living spaces. Its automatic time-release mechanism ensures a consistent scent experience. The dispenser is compatible with Air Wick Ultra automatic air freshener spray refills, allowing for easy replacement and fragrance variety.





Image: Front view of the Air Wick Freshmatic Automatic Air Freshener Spray Dispenser in white.

## SETUP AND INSTALLATION

---

Follow these steps to set up your Air Wick Freshmatic dispenser:

1. First, ensure the Air Wick Ultra unit is turned to the **OFF** position.
2. Open the dispenser by pressing the button on the side.
3. If replacing an empty can, discard it and ensure the red lever inside is pushed up.
4. Insert the new refill can with the nozzle facing outward.
5. Close the dispenser securely.
6. Insert 2 AA batteries into the battery compartment (batteries not included with all units).



Image: Air Wick Freshmatic dispenser showing its approximate height of 7.9 inches (20 cm).

## OPERATING INSTRUCTIONS

Once the refill is inserted and the dispenser is closed, you can select your preferred spray interval:

1. Locate the switch on the side of the dispenser.
2. Turn the switch to your preferred time setting: 9, 18, or 36 minutes.
3. The first spray will occur after a 15-second delay.

**Important:** Keep the unit directed away from your face at all times when turning it on or changing settings.

## MAINTENANCE

To ensure optimal performance and longevity of your Air Wick Freshmatic dispenser:

- When a spray refill runs out, replace it with a new Air Wick Ultra automatic air freshener spray refill.
- If any spray comes into contact with surfaces, wipe immediately with a damp cloth.
- Replace batteries when the unit stops spraying or the indicator light (if present) signals low power.

## TROUBLESHOOTING

If your Air Wick Freshmatic dispenser is not functioning as expected, consider the following:

- **No Spray:** Ensure the unit is turned to an ON position (9, 18, or 36 minutes) and not OFF. Check if the refill can is empty and replace if necessary. Verify that the red lever inside is pushed up after inserting a new can. Ensure batteries are correctly inserted and have sufficient charge; replace if needed.
- **Weak Scent:** Adjust the spray interval to a shorter duration (e.g., from 36 minutes to 9 minutes) for more frequent sprays. Consider changing to a different fragrance refill.
- **Unusual Noise:** This is normal operation as the mechanism prepares to spray.

For further assistance, please visit [www.Freshmatic.Com](http://www.Freshmatic.Com).

## SAFETY INFORMATION

Please read and adhere to all safety warnings:

- **Keep Out Of Reach Of Children And Pets.**
- **Flammable.** Harmful Or Fatal If Swallowed. Eye Irritant. May Be Harmful If Directly Inhaled. May Cause Allergic Reaction In Some Individuals.
- Do Not Spray Towards Face Or Body. Do Not Get In Eyes. Avoid Contact With Skin.
- Container May Explode If Heated. Do Not Puncture Or Incinerate Container. Do Not Expose To Heat Or Store At Temperatures Above 120°F (49°C).
- Do Not Position Near Heat Or Electrical Sources. Do Not Spray Directly Onto Surfaces. Do Not Spray Into Open Flames. In Case Of Contact With Surfaces, Wipe Immediately With A Damp Cloth.
- Do Not Use In Infant Or Children Rooms. Use In Well-Ventilated Room. For Adult Use Only. Product Is Not A Toy.
- Contains Propellant, Petroleum Solvent And Fragrance.
- **First Aid:** If Swallowed, Do Not Induce Vomiting. Immediately Call A Physician Or Poison Control Center. If In Eyes, Immediately Rinse Eyes With Water. Remove Any Contact Lenses And Continue Rinsing For At Least 15 Minutes. If Irritation Persists, Get Medical Attention. If On Skin, Wash With Soap And Water. Discontinue Use Immediately And Get Medical Attention If A Reaction Develops.
- **Note To Parents:** Use Only As Directed. Intentional Misuse By Deliberately Concentrating And Inhaling The Contents Can Be Harmful Or Fatal. Help Stop Inhalant Abuse. For More Information, Visit [www.inhalant.org](http://www.inhalant.org).
- Do Not Reuse Batteries. Batteries Contain % Mercury/% Lead/% Cadmium.

For a full ingredient list for this product, please visit our North American Product Information website.

## SPECIFICATIONS

<b>Brand</b>	Air Wick
<b>Model Number</b>	ASA-152
<b>Color</b>	White
<b>Product Dimensions</b>	3.32 x 4.65 x 9.72 inches; 0.01 ounces
<b>Item Form</b>	Spray
<b>Power Source</b>	Battery Powered (2 AA batteries required)
<b>Scent</b>	Ocean Breeze (Note: Refill scent may vary)
<b>Manufacturer</b>	Reckitt Benckiser

## WARRANTY AND SUPPORT

For product support, troubleshooting, and warranty information, please visit the official Air Wick website or contact customer service.

- Official Website: [www.airwick.us](http://www.airwick.us)
- Troubleshooting: [www.Freshmatic.Com](http://www.Freshmatic.Com)

Please retain your proof of purchase for any warranty claims.

