



Manuals.plus /

› Kensington /

› Kensington Pro Fit M01119-M 2.4 GHz Wireless Full-Size Mouse User Manual

Kensington M01119-M

Kensington Pro Fit M01119-M 2.4 GHz Wireless Full-Size Mouse User Manual

Model: M01119-M (P/N: K72342)

INTRODUCTION

Thank you for choosing the Kensington Pro Fit M01119-M 2.4 GHz Wireless Full-Size Mouse. This ergonomic, right-handed mouse is designed for comfort and productivity, featuring a soft rubber grip and a pointer speed quick-select button. This manual provides instructions for setting up, operating, and maintaining your wireless mouse.

PACKAGE CONTENTS

- Kensington Pro Fit M01119-M Wireless Mouse
- 2.4 GHz USB Receiver
- User Manual (this document)

Batteries are not included and must be purchased separately.

SETUP

1. Install Batteries

The Kensington Pro Fit Wireless Mouse requires batteries for operation. Ensure the mouse is switched OFF before installing or replacing batteries.

1. Locate the battery compartment cover on the underside of the mouse.
2. Slide the cover open to reveal the battery compartment.
3. Insert the required batteries (typically AA or AAA, check markings inside the compartment) according to the polarity indicators (+/-).
4. Close the battery compartment cover securely.



Image: Underside of the Kensington Pro Fit Wireless Mouse. This view shows the battery compartment, the optical sensor, the ON/OFF switch, and the CONNECT button. The USB receiver is typically stored within the battery compartment or a dedicated slot near it.

2. Connect the USB Receiver

1. Locate the 2.4 GHz USB receiver. It is often stored inside the mouse's battery compartment for

convenience during transport.

2. Remove the USB receiver from its storage slot.
3. Plug the USB receiver into an available USB port on your computer.
4. Your computer should automatically detect and install the necessary drivers. This may take a few moments.

3. Power On and Connect

1. Slide the ON/OFF switch on the underside of the mouse to the "ON" position.
2. If the mouse does not immediately respond, press the "CONNECT" button located near the optical sensor on the underside of the mouse. This initiates the pairing process with the USB receiver.
3. The mouse should now be ready for use.

OPERATING YOUR MOUSE

Basic Functions

- **Left Button:** Primary click function, used for selecting items, opening links, etc.
- **Right Button:** Secondary click function, typically opens context menus.
- **Scroll Wheel:** Scroll documents and web pages vertically. The scroll wheel may also function as a middle button when pressed.

Pointer Speed Quick-Select Button

This mouse features a dedicated button to quickly adjust the pointer speed (DPI) without needing to access software settings. Press this button to cycle through different sensitivity levels, allowing you to find the speed that best suits your task or preference.

Power Management

To conserve battery life, slide the ON/OFF switch on the underside of the mouse to the "OFF" position when not in use or when transporting the mouse.

MAINTENANCE

Cleaning

To clean your mouse, gently wipe the surface with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the mouse's finish or internal components. Ensure no liquid enters the mouse.

Battery Replacement

When the mouse performance degrades or stops responding, it is likely time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section. Always use fresh batteries of the specified type.

TROUBLESHOOTING

Problem	Solution
Mouse not responding	<ul style="list-style-type: none"> ◦ Ensure the mouse is switched ON. ◦ Check battery levels and replace if necessary. ◦ Ensure the USB receiver is securely plugged into a working USB port. ◦ Press the "CONNECT" button on the underside of the mouse to re-establish connection. ◦ Try plugging the USB receiver into a different USB port.
Erratic cursor movement	<ul style="list-style-type: none"> ◦ Clean the optical sensor on the underside of the mouse. ◦ Ensure you are using the mouse on a suitable surface (non-reflective, non-transparent). ◦ Check for interference from other wireless devices.
Buttons or scroll wheel not working	<ul style="list-style-type: none"> ◦ Check battery levels. ◦ Restart your computer. ◦ Re-pair the mouse with the receiver using the "CONNECT" button.

SPECIFICATIONS

- **Model Number (M/N):** M01119-M
- **Part Number (P/N):** K72342
- **Connectivity:** 2.4 GHz Wireless
- **Movement Detection:** Optical
- **Hand Orientation:** Right-handed
- **Buttons:** 3 (Left, Right, Scroll Wheel/Middle Button)
- **Special Features:** Pointer speed quick-select button, Soft rubber grip
- **Operating Frequency:** 2.400GHz ~ 2.483GHz
- **Compatible Devices:** Mac (generally compatible with Windows PCs and other systems supporting standard USB mice)
- **Power Source:** Battery Powered (Batteries not included)
- **Dimensions (L x W):** 5.25" x 3.5" (approximate)
- **Weight:** 0.01 Ounces (approximate, without batteries)

REGULATORY INFORMATION

This device complies with Part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s).

- **FCC ID:** GV3M01119-M
- **IC:** 6128A-M01119M
- **Operating Frequency:** 2.400GHz ~ 2.483GHz

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARRANTY AND SUPPORT

Kensington provides a limited warranty for this product. For detailed warranty information, technical support, and customer service, please visit the official Kensington website or contact their customer support directly.

Kensington Website: www.kensington.com