

GEORGE KOVACS P4314-084

GEORGE KOVACS P4314-084 George's Reading Room LED Floor Lamp Instruction Manual

Model: P4314-084

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your GEORGE KOVACS P4314-084 George's Reading Room LED Floor Lamp. Please read this manual thoroughly before installation and retain it for future reference. This LED floor lamp is designed for indoor use, offering adjustable illumination for various settings.

2. SAFETY INFORMATION

- Ensure the power is disconnected before assembly, cleaning, or servicing.
- This product is intended for indoor use only. Do not expose to water or high humidity.
- Do not attempt to modify the lamp or its electrical components. Refer all servicing to qualified personnel.
- Keep the lamp away from flammable materials.
- Use only with a 120V power supply.
- The LED module is integrated and not user-replaceable.
- This lamp is ETL Certified, ensuring compliance with safety standards for indoor locations.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Lamp Base
- Lamp Pole (multiple sections, if applicable)
- Lamp Head with Integrated LED Module
- Mounting Hardware (for assembly, not for wall/ceiling mounting)
- Instruction Manual



Figure 1: Overview of the GEORGE KOVACS P4314-084 LED Floor Lamp in Brushed Nickel finish. This image displays the complete lamp assembly, including the circular base, slender pole, and rectangular LED lamp head.

4. SETUP AND ASSEMBLY

Follow these steps to assemble your floor lamp:

1. Carefully unpack all components from the packaging. Place them on a clean, flat surface.
2. Attach the lamp pole sections together by screwing them clockwise until secure. Ensure all connections are tight.
3. Secure the assembled lamp pole to the lamp base. Twist clockwise until firmly attached.

- 4. Connect the lamp head to the top of the pole, ensuring the electrical connection is made and the head is securely fastened.
- 5. Position the lamp in your desired indoor location, ensuring the power cord can reach an outlet without tension.
- 6. Plug the power cord into a standard 120V electrical outlet.

5. OPERATING INSTRUCTIONS

Your GEORGE KOVACS P4314-084 LED Floor Lamp features a toggle switch with dimming functionality.

- **Turning On/Off:** Locate the toggle switch on the lamp pole. Press the switch once to turn the lamp on. Press it again to turn the lamp off.
- **Dimming Function:** This lamp is dimmable. To adjust the brightness, press and hold the toggle switch. The light will cycle through its brightness levels (3000K, 84 CRI, 442 Lumens). Release the switch when the desired brightness is achieved.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your lamp.

- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth to wipe the lamp's surfaces. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish.
- **LED Module:** The LED module is integrated and designed for long-term use. It is not user-serviceable or replaceable.
- **Cord Care:** Periodically inspect the power cord for any damage. If the cord is damaged, discontinue use and contact customer support.

7. TROUBLESHOOTING

If you encounter issues with your lamp, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lamp does not turn on.	No power to the outlet; loose plug; faulty switch.	Check if the outlet is functional by plugging in another device. Ensure the lamp's plug is fully inserted. If the issue persists, contact customer support.
Light flickers or is inconsistent.	Loose connection; electrical interference.	Ensure all lamp sections are securely tightened. Try plugging the lamp into a different outlet.
Dimming function not working.	Incorrect operation; internal fault.	Ensure you are pressing and holding the toggle switch to activate dimming. If it still doesn't work, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	P4314-084
Brand	GEORGE KOVACS
Dimensions (D x W x H)	55"D x 8.25"W x 50"H
Item Weight	15.4 Pounds
Finish Type	Brushed Nickel
Material	Alloy Steel, Aluminum, Brass

Feature	Detail
Light Source Type	Integrated LED Module
Wattage	8 Watts (Total)
Voltage	120 Volts
Color Temperature	3000K
Color Rendering Index (CRI)	84
Lumen Output	442 Lumens
Switch Type	Toggle, Dimmable
Indoor/Outdoor Use	Indoor Only
Certification	ETL Certified

9. WARRANTY INFORMATION

This GEORGE KOVACS P4314-084 LED Floor Lamp comes with a **one-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accidents, unauthorized modifications, or improper installation. Please retain your proof of purchase for warranty claims.

10. CUSTOMER SUPPORT

For technical assistance, warranty claims, or inquiries regarding your GEORGE KOVACS product, please contact the manufacturer's customer service. Refer to the product packaging or the official GEORGE KOVACS website for current contact information.
Manufacturer: Minka Lighting LLC.
Website: www.minkagroup.net

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question