

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Aqua Laser](#) /
- › [Aqua Laser Gold Steam Cleaner User Manual](#)

Aqua Laser 4250656305912 HLI

Aqua Laser Gold Steam Cleaner User Manual

Model: 4250656305912 HLI

1. INTRODUCTION

The Aqua Laser Gold Steam Cleaner is a versatile cleaning device designed for efficient and hygienic cleaning of various surfaces. This appliance operates between 1400-1600 W, generating steam at approximately 100 °C to effectively clean and remove bacteria without the need for harsh chemicals. It features an integrated handheld steam cleaner for enhanced flexibility.

This manual provides essential information on the safe operation, setup, maintenance, and troubleshooting of your Aqua Laser Gold Steam Cleaner to ensure optimal performance and longevity.





Figure 1: Aqua Laser Gold Steam Cleaner main unit.

2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Ensure the voltage rating on the appliance matches your power supply. Do not operate the appliance with a damaged cord or plug. Keep the power cord away from heated surfaces.
- **Hot Steam Hazard:** The appliance produces high-temperature steam. Never direct steam at people, pets, or electrical appliances. Avoid contact with hot parts of the appliance.
- **Water Tank:** Only use clean tap water in the water tank. Do not add detergents, perfumes, or other chemicals, as this may damage the appliance or create hazardous fumes.
- **Surface Compatibility:** Do not use the steam cleaner on unsealed wooden floors, delicate fabrics, or

surfaces that are not heat-resistant. Test on an inconspicuous area first.

- **Children and Pets:** Keep the appliance out of reach of children and pets. Do not leave the appliance unattended while it is operating.
- **Maintenance:** Always unplug the appliance and allow it to cool completely before performing any cleaning or maintenance.

3. PRODUCT OVERVIEW AND COMPONENTS

The Aqua Laser Gold Steam Cleaner consists of a main unit and several interchangeable accessories designed for various cleaning tasks.

Included Accessories:

- Favorit Corner Nozzle (for window frames and toilet bowls)
- Dust Nozzle with Cleaning Cloth (for hard surfaces)
- Spade Nozzle (for hard surfaces)
- Round Brush (for grout, cooktops, and work surfaces)
- Narrow Bristle Brush (for joints or shower cabins)
- Suction Nozzle (for hard-to-reach corners)

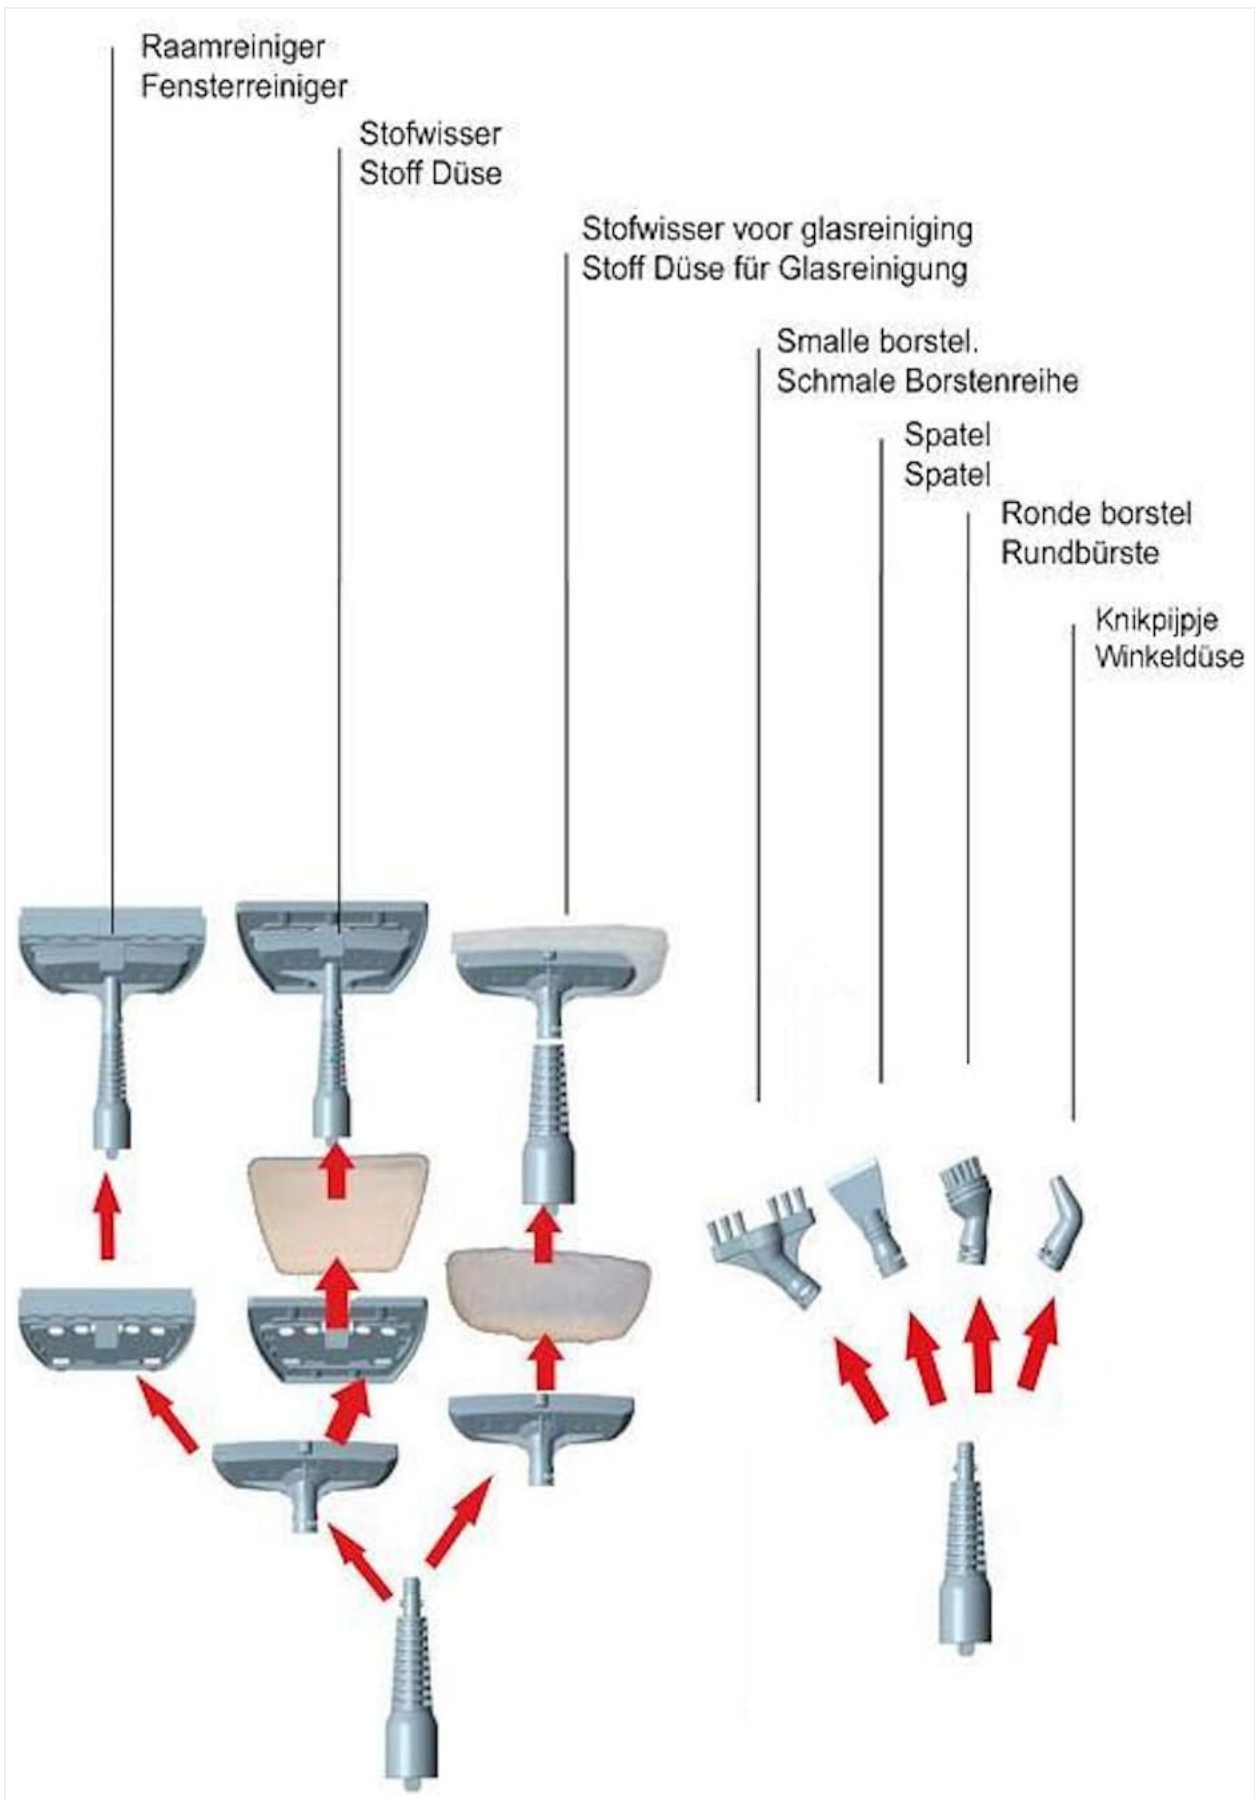


Figure 2: Overview of included accessories and their connection points.

4. SETUP

4.1 Initial Assembly

1. Unpack all components and ensure all accessories are present.
2. Assemble the main steam mop unit by connecting the handle to the body until it clicks into place.
3. Attach the desired cleaning pad to the floor head, ensuring it is securely fastened.

4.2 Filling the Water Tank

1. Ensure the appliance is unplugged from the power outlet.
2. Locate the water tank cap, usually found on the main body of the steam cleaner.
3. Open the cap and carefully fill the water tank with clean tap water. Do not overfill.
4. Securely close the water tank cap.

5. OPERATING INSTRUCTIONS

5.1 Activating Steam

1. Plug the appliance into a suitable power outlet.
2. Wait for the indicator light (if present) to signal that the appliance has reached operating temperature (approximately 100 °C).
3. Press the steam activation button located on the top of the handle to release steam.

5.2 Using as a Floor Steam Cleaner

For floor cleaning, ensure the floor head with a cleaning pad is attached. Activate the steam and move the steam cleaner slowly and steadily over the floor surface. The steam will clean and sanitize the floor quickly and hygienically.

5.3 Using the Integrated Handheld Steam Cleaner

The integrated handheld steam cleaner can be easily detached for targeted cleaning. To use:

1. Detach the handheld unit from the main body.
2. Connect the appropriate attachment (e.g., corner nozzle, round brush, narrow bristle brush) to the handheld unit.
3. Activate the steam and direct it towards the surface to be cleaned.

5.4 Specific Accessory Applications

- **Favorit Corner Nozzle:** Ideal for cleaning window frames and toilet bowls, reaching difficult angles.
- **Dust Nozzle with Cleaning Cloth:** Suitable for general cleaning of hard surfaces.
- **Narrow Bristle Brush:** Effective for cleaning grout lines in tiles or shower cabins.
- **Spade Nozzle:** Designed for concentrated steam application on stubborn dirt on hard surfaces.
- **Round Brush:** Excellent for scrubbing grout, cooktops, and other work surfaces.



Figure 3: Cleaning grout with a specialized nozzle.



Figure 4: Using steam to clean a grill surface.

6. MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your steam cleaner.

6.1 After Each Use

1. Unplug the appliance and allow it to cool down completely.
2. Empty any remaining water from the tank.
3. Remove and wash cleaning pads and cloths. Allow them to air dry.
4. Wipe down the exterior of the appliance with a damp cloth.

6.2 Descaling (Periodically)

Depending on water hardness, mineral deposits may build up in the water tank and heating element. To descale:

1. Mix a solution of equal parts white vinegar and water.
2. Pour the solution into the water tank.
3. Allow it to sit for several hours or overnight.
4. Empty the tank and rinse thoroughly with clean water several times.
5. Run a tank full of clean water through the appliance to flush out any remaining vinegar.

6.3 Storage

Store the steam cleaner in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure the power cord is neatly wrapped.

7. TROUBLESHOOTING

If you encounter issues with your Aqua Laser Gold Steam Cleaner, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|------------------------------|---|--|
| No steam or low steam output | Water tank empty Appliance not heated Steam button not pressed Mineral buildup | Refill water tank Allow time to heat up Press and hold steam button Perform descaling procedure |
| Water leaking from appliance | Water tank cap not secured Overfilled water tank Damaged seal | Ensure cap is tightly closed Do not overfill Contact customer support |
| Appliance not turning on | Not plugged in Power outlet faulty Appliance fault | Check power connection Test with another outlet Contact customer support |

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

| Feature | Specification |
|---------------------------|---|
| Brand | Aqua Laser |
| Model Name | Aqua Laser Gold |
| Model Number | 4250656305912 HLI |
| Power | 1400 - 1600 W |
| Maximum Steam Temperature | 100 °C |
| Energy Source | Corded Electric |
| Special Features | Portable, Integrated Handheld Steam Cleaner |
| Recommended Surface | Tile, Window, Hard Surfaces |
| Included Components | Favorit corner nozzle, dust nozzle with cleaning cloth, spade nozzle, round brush, suction nozzle |
| Package Dimensions | 66 x 24.8 x 23.4 cm |
| Item Weight | 4.28 kg |

9. WARRANTY AND SUPPORT

For information regarding the product warranty, please refer to the warranty card included with your purchase or visit the official Aqua Laser website. For technical support, spare parts, or service inquiries, please contact

the manufacturer's customer service department using the contact information provided in your product packaging or on the official brand website.