

Smoby 033051

Smoby Quad Rally 033051 Instruction Manual

6V Battery-Powered Ride-On Quad

1. INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your Smoby Quad Rally 033051. Please read all instructions carefully before use and retain this manual for future reference. This product is designed for children and requires adult supervision during assembly and operation.

2. SAFETY INFORMATION

- Always ensure adult supervision when the quad is in use.
- Do not operate the quad near stairs, steep inclines, roads, or swimming pools.
- Ensure the child wears appropriate safety gear, such as a helmet.
- The product is made from non-toxic materials.
- Maximum speed is 5 km/h. Ensure the operating area is safe and clear of obstacles.
- Only use the provided charger and battery.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all parts are present. Refer to the packaging diagram for component identification.



Image: The Smoby Quad Rally 033051 product box. This image illustrates the packaging and gives an overview of the product inside, indicating components that require assembly.

- Quad body components
- Wheels (4)
- Steering assembly
- 6V Battery
- Battery Charger
- Assembly hardware (screws, nuts, etc.)
- Instruction Manual (this document)

4. SETUP AND ASSEMBLY

Assembly is required for this product. Please follow the steps below carefully. It is recommended to perform assembly on a clean, flat surface.

4.1. Initial Battery Charging

1. Locate the 6V battery and charger.
2. Connect the charger to the battery.
3. Plug the charger into a standard wall outlet.
4. Allow the battery to charge for a minimum of 10-12 hours before first use. Do not overcharge.

4.2. Quad Assembly

1. Attach the front and rear axles to the main quad body using the provided hardware.
2. Securely fasten all four wheels onto the axles. Ensure they rotate freely but are firmly attached.
3. Install the steering column and handlebars. Connect any necessary wiring as indicated in the detailed assembly

diagrams (refer to separate diagram sheet if provided).

4. Place the fully charged 6V battery into its designated compartment, typically under the seat. Connect the battery terminals as instructed.
5. Secure the seat or battery cover.
6. Apply any decorative stickers as desired, ensuring they do not obstruct moving parts or safety labels.



Image: A child operating the assembled Smoby Quad Rally 033051. This image demonstrates the product in its fully assembled and operational state.

5. OPERATING INSTRUCTIONS

Once assembled and the battery is charged, the Smoby Quad Rally 033051 is ready for use.

5.1. Starting and Driving

1. Ensure the child is seated comfortably and securely on the quad.
2. Locate the power switch or accelerator pedal/button.

- 3. To move forward, press and hold the accelerator. The quad will move at a maximum speed of 5 km/h.
- 4. To stop, release the accelerator. The quad will gradually come to a halt.
- 5. Steer the quad using the handlebars.

5.2. Battery Autonomy

The 6V battery provides approximately 2 hours of continuous operation, depending on terrain and usage. It is recommended to recharge the battery after each use to maintain its lifespan.

6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your Smoby Quad Rally 033051.

6.1. Battery Care

- Recharge the battery after each use.
- If the quad will not be used for an extended period, charge the battery fully every 30 days to prevent deep discharge.
- Do not store the battery in extreme temperatures.
- Always disconnect the battery from the quad when storing for long periods.

6.2. Cleaning

- Wipe the quad with a damp cloth. Do not use abrasive cleaners or solvents.
- Avoid spraying water directly onto electrical components.

6.3. General Inspection

- Periodically check all screws and fasteners to ensure they are tight.
- Inspect wheels and tires for wear or damage.
- Ensure all electrical connections are secure.

7. TROUBLESHOOTING

If you encounter issues with your Smoby Quad Rally 033051, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Quad does not move	Battery is discharged Loose battery connection Power switch off	Recharge battery Check and secure battery terminals Turn power switch on
Quad moves slowly	Low battery charge Overloaded Operating on uneven/soft surface	Recharge battery Reduce load Operate on a firm, flat surface
Charger not working	Charger not plugged in Faulty outlet	Ensure charger is fully plugged in Test outlet with another device

8. SPECIFICATIONS

Feature	Detail
Brand	Smoby
Model Number	033051
Item Part Number	33051
Power Source	6V Battery
Max Speed	5 km/h (depending on surface)
Driving Wheels	2
Battery Autonomy	Approx. 2 hours
Item Weight	9.6 Kilograms
Item Dimensions (L x W x H)	82.4 x 45.3 x 54.7 Centimeters
Assembly Required	Yes
Theme	Vehicle

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Smoby website. Keep your proof of purchase for any warranty claims.

© 2026 Smoby. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question