

[Manuals.plus](#) /

› [Smoby](#) /

› Smoby X Power Electric Quad Bike User Manual

Smoby 7600033048

Smoby X Power Electric Quad Bike User Manual

Model: 7600033048

INTRODUCTION

Thank you for choosing the Smoby X Power Electric Quad Bike. This manual provides essential information for the safe assembly, operation, and maintenance of your new electric quad bike. Please read this manual thoroughly before first use and keep it for future reference.



Image: The Smoby X Power Electric Quad Bike, red and white, featuring large wheels and a comfortable seat, ready for use.

SAFETY INFORMATION

WARNING: To prevent serious injury, please observe the following safety guidelines:

- This product is suitable for children over 3 years of age.
- Adult supervision is required at all times.
- Always wear a helmet and appropriate safety gear.
- Do not operate near stairs, hills, roads, or swimming pools.
- Operate only on flat, dry surfaces. Avoid uneven terrain, sand, or loose gravel.
- Ensure the child's hands and feet are kept away from moving parts.
- Do not exceed the maximum weight capacity (not specified, but implied by child's toy).

PACKAGE CONTENTS

Please check the box contents to ensure all parts are present:

- Smoby X Power Electric Quad Bike (main unit)
- Rechargeable 6-volt battery
- Battery charger
- Instruction Manual (this document)



Image: The Smoby X Power Electric Quad Bike shown in its original retail packaging, highlighting the "X Power" branding and "6V Battery Powered" features.

SETUP AND INITIAL PREPARATION

The Smoby X Power Electric Quad Bike comes pre-assembled. No assembly is required. Before first use, ensure the battery is fully charged.

Battery Installation (if not pre-installed)

1. Locate the battery compartment, usually under the seat.
2. Connect the battery terminals to the corresponding connectors on the quad bike (red to red, black to black).
3. Secure the battery in the compartment and close the cover.

CHARGING THE BATTERY

The quad bike is powered by a rechargeable 6-volt battery. Proper charging ensures optimal performance and battery longevity.

1. Ensure the quad bike is turned off before charging.
2. Locate the charging port on the quad bike.
3. Connect the charger to the charging port.
4. Plug the charger into a standard wall outlet.
5. Charge the battery for approximately 8-12 hours for a full charge. It is recommended to charge overnight. Do not overcharge for more than 18 hours.
6. A fully charged battery provides approximately 2 hours of continuous use, depending on terrain and usage.
7. Disconnect the charger once charging is complete.

Important: Only use the charger provided with the product. Do not attempt to charge non-rechargeable batteries.

OPERATION

Operating the Smoby X Power Electric Quad Bike is straightforward:

1. Ensure the battery is fully charged.
2. Have the child sit comfortably on the quad bike with both hands on the handlebars.
3. To move forward, press the acceleration button located on the handlebar.
4. Release the acceleration button to stop the quad bike.
5. Steer the quad bike by turning the handlebars left or right.

The quad bike features a 2-wheel drive system and can reach a maximum speed of 5 km/h, depending on the surface.

MAINTENANCE

Regular maintenance will help prolong the life of your Smoby X Power Electric Quad Bike:

- **Cleaning:** Wipe the quad bike with a damp cloth. Do not use abrasive cleaners or solvents. Do not hose down or immerse in water.
- **Battery Care:**
 - Charge the battery after each use.
 - If storing for an extended period, charge the battery fully every 30 days to prevent damage.
 - Store the battery in a cool, dry place.
- **Storage:** Store the quad bike indoors in a dry environment when not in use. Protect it from direct sunlight and moisture.
- **Inspection:** Periodically check all screws, nuts, and connections to ensure they are tight. Inspect wheels and tires for wear.

TROUBLESHOOTING

If you encounter issues with your Smoby X Power Electric Quad Bike, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Quad bike does not move.	Battery is not charged or improperly connected.	Ensure battery is fully charged and correctly connected. Check all electrical connections.
Quad bike moves slowly.	Low battery charge. Operating on an unsuitable surface.	Recharge the battery. Operate on flat, hard surfaces.
Battery not charging.	Charger not properly connected. Faulty charger or battery.	Ensure charger is securely plugged into both the quad bike and the wall outlet. Try a different outlet. If the issue persists, contact customer support.
Unusual noise during operation.	Loose parts or debris in the drive mechanism.	Inspect the quad bike for any loose components or obstructions. Tighten any loose screws.

If the problem persists after attempting these solutions, please contact Smoby customer support.

SPECIFICATIONS

- **Brand:** Smoby
- **Model Number:** 7600033048
- **Power:** 6-volt rechargeable battery
- **Maximum Speed:** 5 km/h (depending on surface)
- **Drive System:** 2-wheel drive
- **Battery Life:** Approximately 2 hours (continuous use)
- **Recommended Age:** 3+ years
- **Item Weight:** 9.75 Kilograms
- **Item Dimensions (L x W x H):** 95.5 x 50 x 63 Centimeters
- **Assembly Required:** No
- **GTIN:** 03032160330489

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Smoby website. Keep your proof of purchase for any warranty claims.

If you have any questions or require assistance, please contact Smoby customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question