

[manuals.plus](#) /

› [Singer](#) /

› [Singer INITIALE Sewing Machine User Manual](#)

Singer INITIALE

Singer INITIALE Sewing Machine User Manual

Model: INITIALE

INTRODUCTION

Welcome to the Singer INITIALE Sewing Machine user manual. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your new sewing machine. Designed for ease of use, the Singer INITIALE offers 18 adjustable stitches, including straight, zigzag, and decorative options, making it ideal for beginners and various sewing projects.



Figure 1: Front view of the Singer INITIALE Sewing Machine.

1. SETUP

1.1 Unpacking and Placement

- Carefully remove the sewing machine from its packaging.
- Place the machine on a stable, flat surface with adequate lighting.
- Ensure the power cord is easily accessible.

1.2 Power Connection

- Connect the power cord to the machine and then to a suitable electrical outlet.
- The machine operates on 70 W power.

1.3 Spool Pin and Bobbin Winder

The machine features a convenient top-loading spool pin and bobbin winder for easy thread management.



Figure 2: Top view showing the spool pin and bobbin winder.

2. OPERATING INSTRUCTIONS

2.1 Threading the Machine

Follow the simplified threading path indicated on the machine for both the upper thread and the bobbin. Ensure the presser foot is raised during threading.



Figure 3: Close-up of the needle and presser foot area, crucial for threading.

2.2 Selecting Stitches

The Singer INITIALE offers 18 adjustable stitches and 10 programs. Use the stitch selector dial to choose your desired stitch pattern (straight, zigzag, decorative).

2.3 Adjusting Stitch Length and Tension

- **Stitch Length:** Adjust the stitch length using the dedicated dial for various fabric types and desired stitch density.
- **Thread Tension:** The thread tension can be adjusted to ensure balanced stitches. Refer to the tension dial on the machine.



Figure 4: Side view highlighting the tension dial and reverse lever.

2.4 Special Features

- **Reverse Stitching:** Use the reverse lever for securing stitches at the beginning and end of seams.

- **4-Step Buttonhole:** The machine includes an automatic 4-step buttonhole function for easy buttonhole creation.
- **LED Lighting:** An integrated LED light illuminates the sewing area for improved visibility.
- **Free Arm:** The removable accessory tray converts the sewing surface into a free arm, ideal for sewing cuffs, sleeves, and pant hems.

3. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Singer INITIALE sewing machine.

3.1 Cleaning

- Always unplug the machine before cleaning.
- Use a soft brush to remove lint and dust from the bobbin area and feed dogs.
- Wipe the exterior with a soft, dry cloth. Avoid abrasive cleaners.

3.2 Needle Replacement

- Replace needles regularly, especially if they are bent, dull, or broken, to prevent skipped stitches and fabric damage.
- Ensure the flat side of the needle faces the back of the machine when inserting.

4. TROUBLESHOOTING

If you encounter issues with your sewing machine, refer to the following common problems and solutions:

- **Skipped Stitches:** Check if the needle is inserted correctly, is not bent, and is the appropriate type for your fabric. Re-thread the machine.
- **Thread Breakage:** Verify that the machine is threaded correctly, the tension is appropriate for the fabric, and the needle is not damaged.
- **Fabric Puckering:** Adjust the thread tension and stitch length. Ensure you are using the correct needle size for your fabric.
- **Machine Not Starting:** Check the power connection and ensure the foot pedal is properly connected.

5. SPECIFICATIONS

Feature	Detail
Brand	Singer
Model Number	INITIALE
Color	White
Product Dimensions (L x W x H)	43.99 x 19.99 x 24.99 cm
Item Weight	6.5 Kilograms
Automatic Stop Function	Yes
Power	70 W

Feature	Detail
Number of Stitches	18
Number of Programs	10
Feed Dog Teeth	6
LED Lighting	Yes
Free Arm	Yes
Material	Stainless Steel (internal components)
Power Source	Corded Electric



Figure 5: Dimensions of the Singer INITIALE Sewing Machine.

6. WARRANTY AND SUPPORT

- Spare Parts Availability:** Spare parts for the Singer INITIALE Sewing Machine are available for 7 years from the date of purchase.
- For further assistance, technical support, or warranty claims, please visit the official Singer website or contact your local authorized dealer.

- You can visit the [Singer Brand Store](#) for more information and products.

© 2023 Singer. All rights reserved.