

Bose 350521-1100

Bose Wave Music System III with Multi-CD Changer Instruction Manual

Brand: Bose | Model: 350521-1100

1. OVERVIEW

The Bose Wave Music System III with Multi-CD Changer offers high-quality audio performance from a compact tabletop system. This system allows you to enjoy FM/AM radio and hours of uninterrupted music from your favorite CDs, including MP3 CDs. The multi-CD changer seamlessly integrates with the main unit, providing expanded playback capabilities. Control all functions, including the digital tuner, clock, and alarm, with the included remote.



The Bose Wave Music System III, featuring the main unit and the integrated multi-CD changer, along with its remote control and several compact discs. The system is presented in Titanium Silver.

2. SETUP

2.1 Unpacking

Carefully remove all components from the packaging. Ensure you have the Wave Music System III main unit, the Multi-CD Changer, the remote control, power cord, and any included antennas.

2.2 Placement

Place the Wave Music System III on a stable, level surface. The Multi-CD Changer is designed to sit directly beneath the main unit. Ensure adequate ventilation around the system.

2.3 Connections

1. **Power:** Connect the power cord to the main unit and then to a wall outlet.
2. **Multi-CD Changer:** Connect the multi-CD changer to the main unit using the Bose Link cable provided.
3. **Antenna:** Connect the FM/AM antenna to the designated port on the rear of the main unit for optimal radio reception.
4. **Auxiliary Input:** For external audio devices, connect a 3.5 mm audio cable from your device to the AUX IN port on the rear of the main unit.
5. **Bluetooth:** The system supports Bluetooth connectivity for wireless audio streaming from compatible devices. Refer to your device's manual for pairing instructions.

3. OPERATING

3.1 Power On/Off

Press the **Power** button on the remote control or gently touch the top of the main unit to turn the system on or off.

3.2 CD Playback

Insert a CD into the slot on the front of the Wave Music System III. For the Multi-CD Changer, insert up to three additional CDs into its slots. Use the **CD** button on the remote to select CD mode. Use the track forward/backward buttons to navigate between tracks and the disc select buttons for the multi-CD changer.



A closer view of the Bose Wave Music System III and its multi-CD changer, highlighting the remote control and several CDs, illustrating the system's primary function for audio playback.



The Bose Multi-CD Changer unit, designed to seamlessly integrate with the Wave Music System III, shown with four compact discs, demonstrating its capacity for extended music playback.

3.3 FM/AM Radio

Press the **Radio** button on the remote to switch to FM or AM radio. Use the **Tune/MP3** buttons to scan for stations. You can save your favorite stations using the **Presets** buttons (1-6).

3.4 Clock and Alarms

Set the clock and dual independent alarms using the **Alarm Setup** button on the remote. The system features touch-top snooze controls.

3.5 Auxiliary Input

Press the **AUX** button on the remote to select the auxiliary input. Ensure your external device is connected and playing audio.

4. MAINTENANCE

4.1 Cleaning

Wipe the exterior of the system with a soft, dry cloth. Do not use liquid cleaners or solvents. Keep the CD slots free of dust and debris.

4.2 CD Care

Handle CDs by their edges. Store them in their cases to prevent scratches. Clean dirty CDs with a soft, lint-free cloth, wiping from the center outwards.

5. TROUBLESHOOTING

5.1 No Power

- Check if the power cord is securely connected to both the system and the wall outlet.
- Verify that the wall outlet is functional by plugging in another device.

5.2 No Sound

- Ensure the volume is not muted or set too low.
- Check that the correct source (CD, Radio, AUX) is selected.
- For CD playback, ensure the CD is clean and inserted correctly.
- For radio, check antenna connections and try tuning to a different station.

5.3 Remote Control Not Working

- Replace the batteries in the remote control.
- Ensure there are no obstructions between the remote and the system.

6. SPECIFICATIONS

Feature	Detail
Brand	Bose
Model Number	350521-1100

Color	Silver
Connectivity Technology	Auxiliary, Bluetooth
Speaker Type	Bookshelf
Item Dimensions (L x W x H)	14.6 x 8.6 x 6.8 inches
Power Source	Corded Electric
Compatible Devices	Smartphone
Supported Standards	CD
Bluetooth Support	Yes
Supported Audio Format	CD, MP3
Number of Speakers	2
Audio Output Mode	Stereo
Surround Sound Channel Configuration	2.0
Item Weight	8.7 Pounds
UPC	017817568746

7. WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the documentation included with your product or visit the official Bose website. You may also find additional support resources and FAQs on the product's Amazon listing page.