

Rohl A2208LMPN-2

ROHL A2208LMPN-2 Lavatory Faucet User Manual

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, maintenance, and troubleshooting of your ROHL A2208LMPN-2 Lavatory Faucet. Please read this manual thoroughly before beginning installation or use to ensure proper function and longevity of your product. Retain this manual for future reference.

SAFETY INFORMATION

- Always turn off the main water supply before installing or servicing the faucet.
- Wear appropriate personal protective equipment, such as safety glasses, during installation.
- If you are unsure about any part of the installation process, consult a qualified plumber.
- Ensure all connections are secure to prevent leaks.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- C-Spout Assembly
- Hot Water Handle Assembly
- Cold Water Handle Assembly
- Mounting Hardware
- Supply Lines (if included)



Figure 1: ROHL A2208LMPN-2 Lavatory Faucet. This image displays the complete ROHL A2208LMPN-2 Lavatory Faucet assembly. It features a high-arc C-spout and two distinct lever handles, all finished in polished nickel. The design is suitable for widespread lavatory installations.

SETUP AND INSTALLATION

This faucet is designed for deck-mount installation with 8-inch centers and requires three 1 3/8-inch cutouts.

1. **Prepare the Sink:** Ensure the sink deck has three pre-drilled holes with 8-inch spacing and a diameter of 1 3/8 inches for the spout and two handles. Clean the area around the holes.
2. **Install the Spout:** Insert the spout assembly through the center hole of the sink deck. Secure it from underneath with the provided washer and mounting nut. Hand-tighten, then use a wrench for a final snug fit.
3. **Install the Handles:** Insert the hot and cold handle assemblies through the left and right holes, respectively. Ensure the hot handle is on the left and cold on the right. Secure each handle from underneath with its respective washer and mounting nut.
4. **Connect Water Supply Lines:** Attach the hot and cold water supply lines to the corresponding inlets on the faucet handles. Connect the other ends of the supply lines to your hot and cold water shut-off valves. Use thread sealant tape on all threaded connections to prevent leaks.
5. **Connect Spout to Handles:** Connect the flexible hoses from the handle assemblies to the spout assembly. Ensure connections are tight.
6. **Test for Leaks:** Slowly turn on the main water supply. Check all connections for leaks. If leaks occur, tighten the

connections as needed.

7. **Flush the Faucet:** Remove the aerator from the spout. Turn on both hot and cold water for a few minutes to flush out any debris from the lines. Turn off the water, reattach the aerator.

OPERATING INSTRUCTIONS

The ROHL A2208LMPN-2 Lavatory Faucet features two lever handles with 1/4-turn ceramic disc control cartridges for precise water flow and temperature control.

- **Turning On/Off:** Rotate either handle 1/4 turn to open or close the water flow for that specific temperature.
- **Adjusting Temperature:** Use the left handle for hot water and the right handle for cold water. Mix the desired amount of hot and cold water by adjusting both handles simultaneously.
- **Water Flow:** The faucet has a maximum flow rate of 1.2 gallons per minute (GPM).

MAINTENANCE

Proper care and maintenance will ensure the lasting beauty and performance of your polished nickel faucet.

- **Cleaning:** Clean the faucet regularly with a soft, damp cloth and mild soap. Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the polished nickel finish.
- **Aerator Maintenance:** Periodically unscrew the aerator from the spout and clean any mineral deposits or debris that may have accumulated. Rinse thoroughly and reattach.
- **Ceramic Disc Cartridges:** The 1/4-turn ceramic disc cartridges are designed for long-lasting, drip-free performance and typically require no maintenance. If a leak occurs from the handles, consult the troubleshooting section or a qualified plumber.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Low Water Flow	Clogged aerator; partially closed shut-off valves; debris in supply lines.	Clean the aerator. Ensure shut-off valves are fully open. Flush supply lines.
Leaking from Spout	Aerator not tightened properly; internal cartridge issue.	Tighten aerator. If problem persists, contact support for cartridge replacement.
Leaking from Handles	Loose connections; worn cartridge.	Check and tighten supply line connections. If necessary, replace the ceramic disc cartridge.
Water Temperature Issues	Incorrect hot/cold supply connections; issues with water heater.	Verify hot and cold supply lines are connected correctly. Check water heater settings.

SPECIFICATIONS

Feature	Detail
Brand	Rohl

Feature	Detail
Model Name	A2208LMPN-2
Finish Type	Polished Nickel
Material	Metal (Faucet Body), Ceramic (Handles)
Mounting Type	Deck Mount
Hole Count	3
Number of Handles	2
Spout Design	Fixed C-Spout
Spout Reach	6 59/64 inches
Cartridge Type	1/4-turn Ceramic Disc
Maximum Flow Rate	1.2 Gallons Per Minute
Product Dimensions	11 x 17 x 3.75 inches (approximate)
Item Weight	7 Pounds
UPC	824438217478

WARRANTY INFORMATION


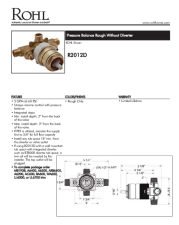

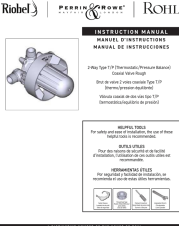


This ROHL A2208LMPN-2 Lavatory Faucet is covered by a**Limited Lifetime Warranty**. For specific terms and conditions, please refer to the warranty documentation included with your purchase or visit the official Rohl website. This warranty typically covers defects in material and workmanship under normal use.

CUSTOMER SUPPORT

If you have any questions regarding the installation, operation, or maintenance of your ROHL A2208LMPN-2 Lavatory Faucet, please contact Rohl customer support. Contact information can typically be found on the Rohl website or on the product packaging.



Related Documents - A2208LMPN-2

	<p>ROHL Bar/Food Prep Kitchen Faucet Installation Manual</p> <p>Official installation instructions and parts list for the ROHL Bar/Food Prep Kitchen Faucet. Includes helpful tools, step-by-step assembly, and contact information for warranty and support.</p>
	<p>ROHL R2012D Pressure Balance Rough Without Diverter Installation Guide</p> <p>Explore the ROHL R2012D Pressure Balance Rough Without Diverter, a key component for luxurious showers. This guide details features, specifications, installation, and warranty information from ROHL.</p>
	<p>Rohl Arcana™ Bathroom Hardware Installation Instructions</p> <p>Step-by-step installation guide for Rohl Arcana™ toilet paper holders and towel bars, including model numbers CIS18, CIS1/18, CIS1/24, and CIS1/30.</p>
	<p>ROHL Edwardian™ Thermostatic & Pressure Balance Valve Trim - Installation, Specifications, and Product Catalog</p> <p>Comprehensive guide for ROHL plumbing fixtures, including the Edwardian™ U.TEW44W1 valve trim, 2-Way Type T/P Coaxial Valve Rough, handshowers, showerheads, and accessories. Features installation instructions, parts lists, product specifications, finishes, warranty information, and customer support.</p>
	<p>ROHL 3/4" Thermostatic Trim Installation Manual</p> <p>Comprehensive installation guide for the ROHL 3/4" Thermostatic Trim, detailing parts, tools, and step-by-step assembly. Includes contact and warranty information.</p>
	<p>ROHL Disposal Flange Installation Instructions</p> <p>Concise, accessible, and SEO-optimized HTML guide for installing the ROHL Disposal Flange (Model INS15457). Includes step-by-step instructions, required tools, and support contact information.</p>